

STEERING

06
SECTION

GENERAL PROCEDURES	06-10	TECHNICAL DATA	06-50
MANUAL STEERING	06-11	SERVICE TOOLS	06-60
ENGINE SPEED SENSING			
POWER STEERING	06-12		

06-10 GENERAL PROCEDURES

PRECAUTION (STEERING)	06-10-1	Connectors	
Wheels and Tires		Disconnection/Connection	06-10-1
Removal/Installation	06-10-1		
Power Steering Components			
Removal/Installation	06-10-1		

06-10

PRECAUTION (STEERING)

A5U061001034W01

Wheels and Tires Removal/Installation

1. The removal and installation procedures for the wheels and tires are not mentioned in this section. When a wheel is removed, tighten it to **89—117 N·m {9.0—12.0 kgf·m, 66—86 ft·lbf}**.

Power Steering Components Removal/Installation

1. If any power steering fluid line has been disconnected anytime during the procedure, add ATF M-III or equivalent (e.g. Dexron® III), bleed the fluid lines, and inspect for leakage after the procedure has been completed.

Connectors Disconnection/Connection

1. Obtain the code number and deactivate the audio antitheft system before disconnecting the battery.
2. Disconnect the negative battery cable before doing any work that requires handling of connectors. Reconnect the negative battery cable only after the work is completed.