DI7CE	-01

# DTC

Always ON

Malfunction in ECU

### **CIRCUIT DESCRIPTION**

DTC No.	DTC Detection Condition	Trouble Area
	Either of the following 1. or 2. is detected:	Charging system
Always ON	1. The ECU connectors are not conneted with the ECU.	Power source circuit
	2. There is a malfunction in the ECU internal circuit.	Vane pump assembly with motor

HINT:

There is a case where TOYOTA hand-held tester cannot be used when ECU is abnormal.

#### **INSPECTION PROCEDURE**



2	Is DTC output?	
Check D	DTC on page DI–202.	


YES

Repair circuit indicated by code output.

3 Is normal code displayed? YES Check and replace vane pump assembly with motor.


NO

NO

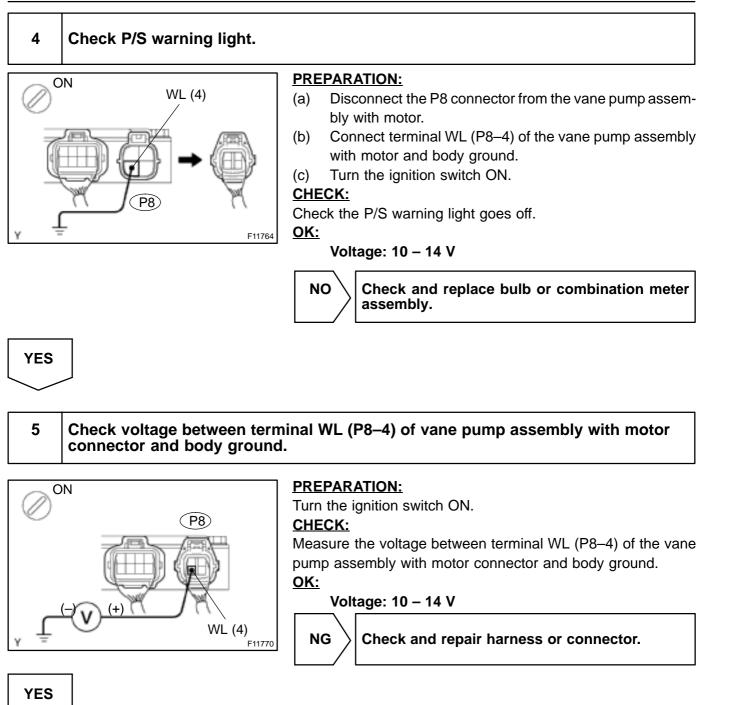

## 6


# Check voltage between terminal IGB (P8–1) of vane pump assembly with motor connector and body ground.

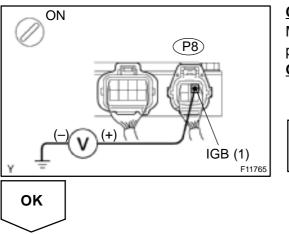

#### CHECK:

Measure the voltage between terminal IGB (P8–1) of the vane pump assembly with motor connector and body ground. **OK:** 

 Voltage: 10 – 14 V



Check and replace vane pump assembly with motor.