



REMOVAL

1. REMOVE SUSPENSION UPPER BRACE
2. REMOVE NO. 2 CYLINDER HEAD COVER
3. DISCONNECT PCV HOSE

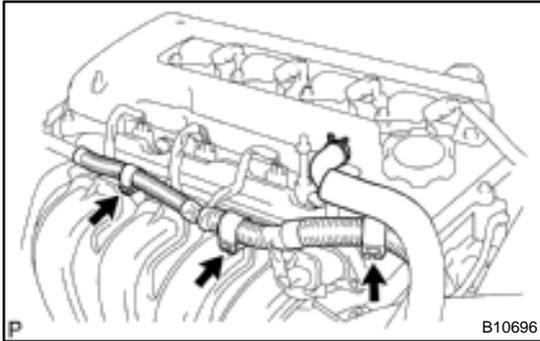

4. DISCONNECT WIRE HARNESS CLAMPS

Disconnect the wire harness 3 clamps from the clamp brackets.

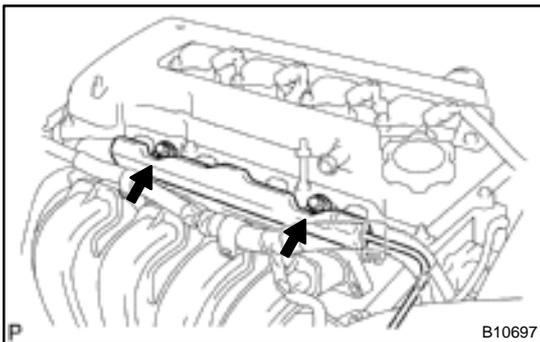

5. REMOVE INJECTORS

- (a) Disconnect the 4 injector connectors.
- (b) Remove the 2 bolts holding the delivery pipe to the cylinder head.
- (c) Disconnect the delivery pipe together with the 4 injectors from the cylinder head.

NOTICE:

Be careful not to drop the injectors when disconnecting the delivery pipe.

- (d) Remove the 2 spacers and 4 grommets.
- (e) Pull out the 4 injectors from the delivery pipe.
- (f) Remove the O-ring from each injector.