



INSPECTION

INSPECT HEATER RESISTANCE OF OXYGEN SENSOR

- (a) Disconnect the sensor connector.
- (b) Using an ohmmeter, measure the resistance between terminals +B and HT.

Temperature	Resistance
at 20°C (68°F)	11 – 16 Ω
at 800°C (1,472°F)	23 – 32 Ω

If the resistance is not as specified, replace the sensor.

Torque: 44 N·m (450 kgf-cm, 32 ft-lbf)

- (c) Reconnect the sensor connector.