



SERVICE HINTS

TAIL RELAY

5-3 : Closed with the light control SW at **TAIL** or **HEAD** position

C14 COMBINATION SW

14-16 : Closed with the light control SW at **TAIL** or **HEAD** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A4	32	C12	C	R3	A
C10	A	C14	32	R4	B
C11	B	H5	33	R6	33

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
3	24	R/B No.3 (Left Side of Instrument Panel)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
6C	26	Instrument Panel Wire and J/B No.6 (Instrument Panel Brace LH)
6E		
6F		
6G		
6H		

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	38	Left Kick Panel
IH	38	Right Kick Panel

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	40	Instrument Panel Wire			