



## BRAKE - TROUBLESHOOTING

Symptom	Suspected Area	See page
Noise from brake	1. Pad (Cracked or distorted)	Front <a href="#">BR-19</a>
		Rear <a href="#">BR-28</a>
	2. Installation bolt (Loose)	Front <a href="#">BR-22</a>
		Rear <a href="#">BR-32</a>
	3. Disc (Scored)	Front <a href="#">BR-25</a>
		Rear <a href="#">BR-37</a>
	4. Pad support plate (Loose)	Front <a href="#">BR-22</a>
		Rear <a href="#">BR-32</a>
	5. Sliding pin (Worn)	Front <a href="#">BR-22</a>
		Rear <a href="#">BR-32</a>
	6. Pad (Dirty)	Front <a href="#">BR-19</a>
		Rear <a href="#">BR-28</a>
	7. Pad (Glazed)	Front <a href="#">BR-19</a>
		Rear <a href="#">BR-28</a>
	8. Anti-squeal shim (Damaged)	Front <a href="#">BR-19</a>
		Rear <a href="#">BR-28</a>