


REASSEMBLY

1. **COAT PARTS WITH LITHIUM SOAP BASE GLYCOL GREASE, AS SHOWN**

2. **INSTALL NO. 2 PISTON AND SPRING**


(a) Install the No. 2 piston and spring.

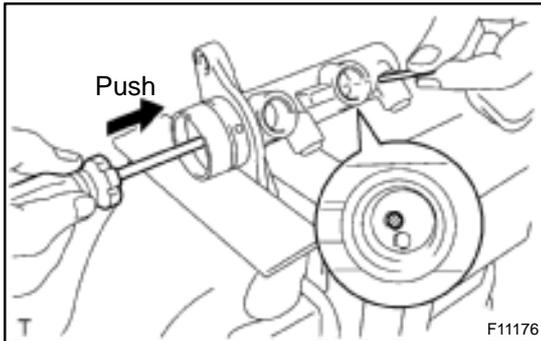


(b) Using a screwdriver, while pushing the No. 2 piston and spring, then install the straight pin.

3. **INSTALL NO. 1 PISTON AND SPRING**

(a) Install the No. 1 piston and spring.

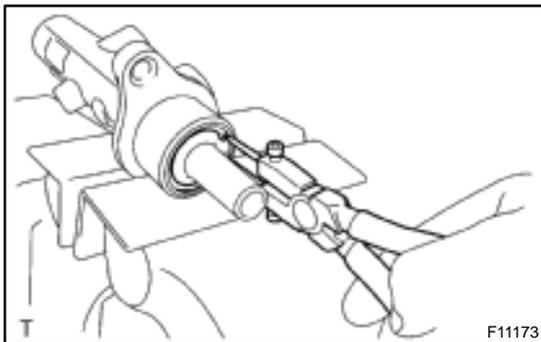

(b) Using snap ring pliers, install the snap ring.

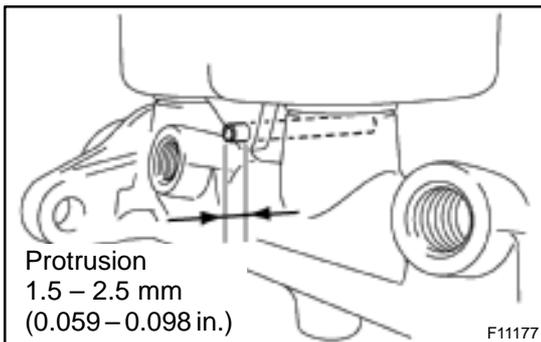

4. **INSTALL RESERVOIR**

(a) Install the strainer and cap to the reservoir.

(b) Install the 2 grommets and reservoir to the cylinder body.

(c) Using a pin punch and a hammer, tap in the slotted spring pin.