


INSTALLATION


1. INSTALL BRAKE BOOSTER

- Install a new gasket and the brake booster with the 4 nuts.
Torque: 13 N·m (130 kgf·cm, 9 ft·lbf)
- Install the clevis to the brake pedal with the wave washer, clevis pin and clip.
- Using needle-nose pliers, install the pedal return spring.

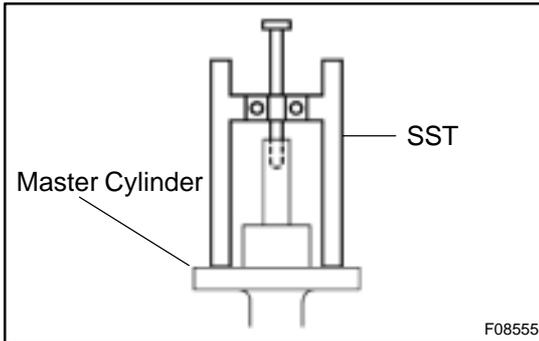


2. ADJUST LENGTH OF BOOSTER PUSH ROD

- Set the SST on the master cylinder, and lower the pin until its tip slightly touches the piston.
SST 09737-00011

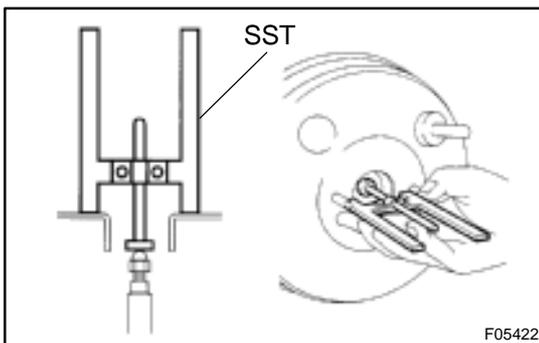


- Turn the SST upside down, and set it on the booster.
SST 09737-00011
- Measure the clearance between the booster push rod and pin head (SST).
Clearance: 0 mm (0 in.)

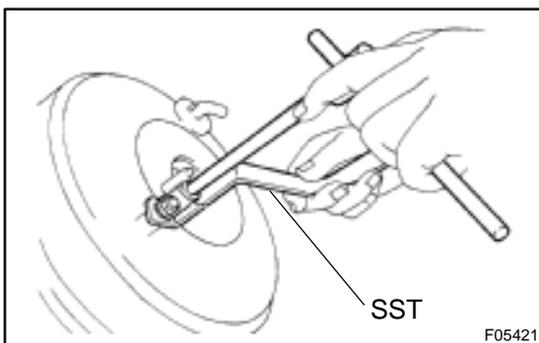

- Using SST, adjust the booster push rod length until the push rod lightly touches the pin head.
SST 09737-00020

3. CONNECT VACUUM HOSE TO BRAKE BOOSTER

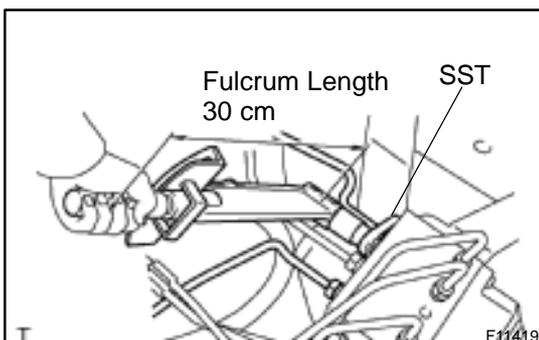

4. INSTALL BRAKE LINES

Using SST, install the 2 brake lines to the ABS actuator.

Torque:

15 N·m (155 kgf·cm, 11 ft·lbf)

14 N·m (143 kgf·cm, 10 ft·lbf) for use with SST

HINT:

Use a torque wrench with a fulcrum length of 30 cm (11.81in.).

5. INSTALL MASTER CYLINDER (See page BR-13)

6. FILL RESERVOIR WITH BRAKE FLUID AND BLEED BRAKE SYSTEM (See page BR-4)

7. CHECK FOR FLUID LEAKAGE
8. CHECK AND ADJUST BRAKE PEDAL
(See page [BR-6](#))
9. DO OPERATIONAL CHECK (See page [BR-14](#))
10. INSTALL TOOL BOX
11. INSTALL LUGGAGE COMPARTMENT TRIM BOX
COVER