


TERMINALS OF ECU

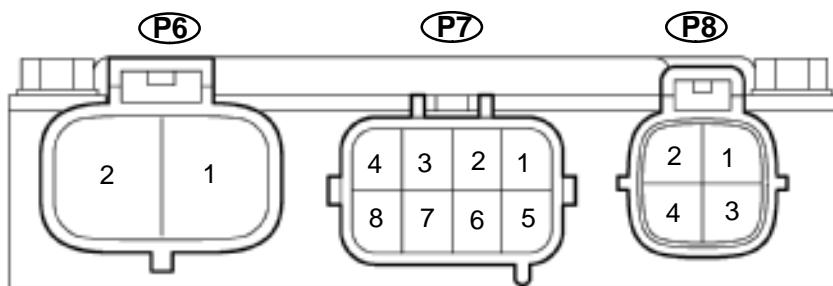

H13718

Symbols (Terminal No.)	Wiring Color	Condition	STD Voltage (V)
MH (P6-1) – PGND (P6-2)	W-G ↔ W-B	IG switch ON, After 1 sec. or more	10 – 14
IDUP (P7-1) – PGND (P6-2)	L-O ↔ W-B	Idling	10 – 14
SPD (P7-2) – PGND (P6-2)	V-W ↔ W-B	IG switch ON, When vehicle speed 12 mph (20 km/h)	Pulse generation (See page DI-222)
Tc (P7-3) – PGND (P6-2)	P-B ↔ W-B	IG switch ON, Tc terminal ON	Below 1.0
		IG switch ON, Tc terminal OFF	5
MRLY (P7-5) – PGND (P6-2)	W-L ↔ W-B	IG switch ON, After 1 sec. or more	Below 1.0
EFI (P7-6) – PGND (P6-2)	W-G ↔ W-B	Idling	5
Ts (P7-7) – PGND (P6-2)	G-R ↔ W-B	IG switch ON, Ts terminal ON	Below 1.0
		IG switch ON, Ts terminal OFF	5
IGB (P8-1) – PGND (P6-2)	B-R ↔ W-B	IG switch ON	10 – 14
SIL (P8-2) – PGND (P6-2)	W-G ↔ W-B	IG switch ON	10 – 14
WL (P8-4) – PGND (P6-2)	W ↔ W-B	After IG switch ON and P/S warning light turns on for 2 sec., then it goes off	Below 1.0