2007 ENGINE Exhaust System - MX-5 Miata

#### **2007 ENGINE**

### **Exhaust System - MX-5 Miata**

# **EXHAUST SYSTEM INSPECTION [LF]**

- 1. Start the engine and inspect each exhaust system component for exhaust gas leakage.
  - If there is leakage, repair or replace the appropriate component.

# **EXHAUST SYSTEM REMOVAL/INSTALLATION [LF]**

#### **WARNING:**

- A hot engine and exhaust system can cause severe burns. Turn off the engine and wait until they are cool before servicing the exhaust system.
- 1. Remove the battery cover.
- 2. Disconnect the negative battery cable. (See **BATTERY REMOVAL/INSTALLATION [LF]** .)
- 3. Remove in the order indicated in the table.
- 4. Install in the reverse order of removal.

2007 ENGINE Exhaust System - MX-5 Miata


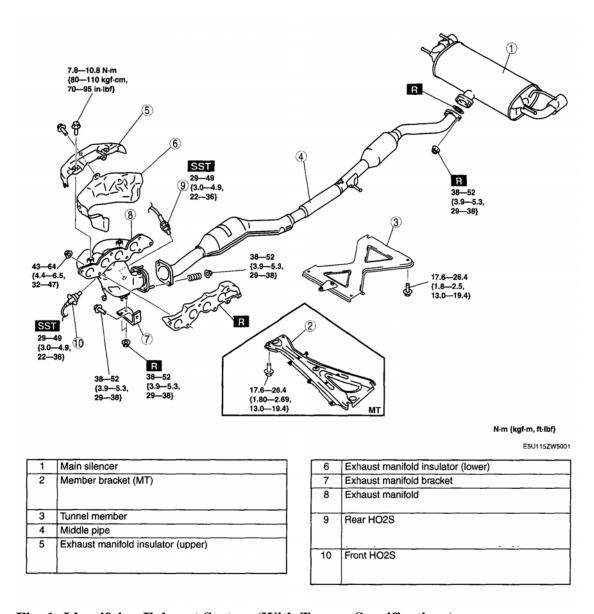


Fig. 1: Identifying Exhaust System (With Torque Specifications) Courtesy of MAZDA MOTORS CORP.

#### EXHAUST MANIFOLD INSULATOR (UPPER) REMOVAL NOTE

- 1. Remove the battery and battery tray. (See **BATTERY REMOVAL/INSTALLATION [LF]**.)
- 2. Remove the drive belt. (See **DRIVE BELT REPLACEMENT [LF]**.)
- 3. Remove the under cover. (See **TRANSVERSE MEMBER REMOVAL/INSTALLATION**.)
- 4. Remove the suspension tower bar (joint) and (right side). (See **FRONT SUSPENSION TOWER BAR REMOVAL/INSTALLATION** .)
- 5. Remove the generator. (See **GENERATOR REMOVAL/INSTALLATION [LF]**.)
- 6. Remove the insulator.

2007 ENGINE Exhaust System - MX-5 Miata

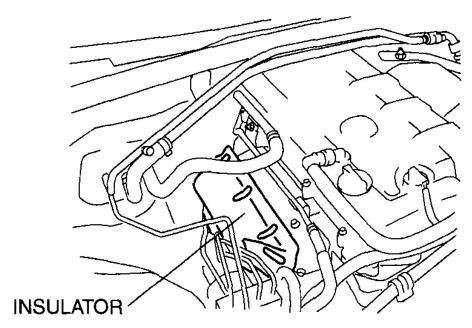

E5U115ZW5002

Fig. 2: Removing Insulator Courtesy of MAZDA MOTORS CORP.

#### EXHAUST MANIFOLD REMOVAL NOTE

- 1. Disconnect the front HO2S connector and rear HO2S connector.
- 2. Move the water pipe and heater hose slightly out of the way.
- 3. Disconnect the ventilation hose from the cylinder head. (See **QUICK RELEASE CONNECTOR** (EMISSION SYSTEM) REMOVAL/INSTALLATION [LF] .)

2007 ENGINE Exhaust System - MX-5 Miata

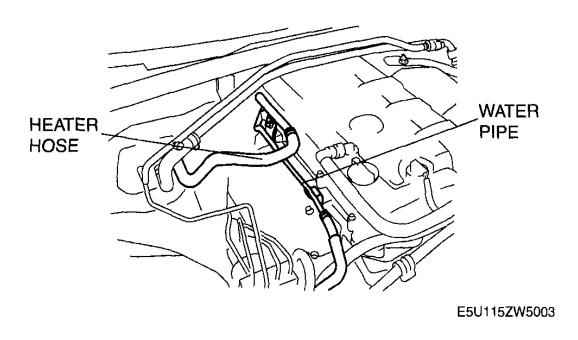


Fig. 3: Identifying Heater Hose & Water Pipe Courtesy of MAZDA MOTORS CORP.