

## INSTALLATION

### 1. INSTALL ELECTRIC COOLING FAN TO RADIATOR


Install the electric cooling fan with the 2 bolts.

**Torque: 5 N·m (51 kgf·cm, 44 in.-lbf)**

### 2. INSTALL RADIATOR ASSEMBLY

(a) Install the 2 radiator lower support bushings.

(b) Place the radiator assembly to the body.

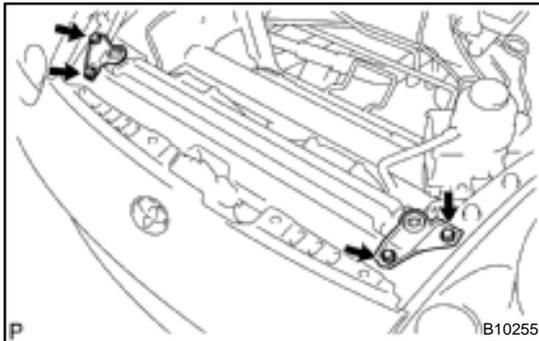


(c) Install the 2 radiator upper supports with the 4bolts.

**Torque: 12.5 N·m (128 kgf·cm, 9 ft-lbf)**

(d) Connect the 2 radiator hoses.

(e) Connect the 2 electric cooling fan connectors.

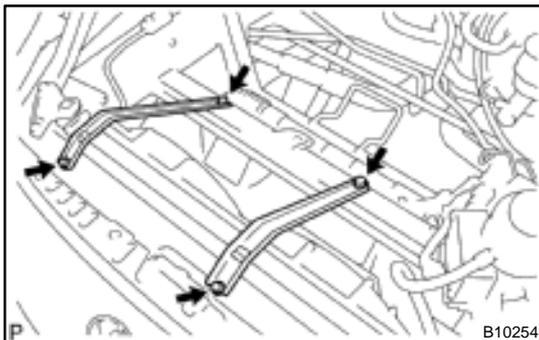

(f) Install the 2 spear wheel carrier extensions with the 2 bolts and 2 nuts.

**Torque: 8 N·m (82 kgf·cm, 70 in.-lbf)**

3. **FILL WITH ENGINE COOLANT (See page [CO-2](#))**

4. **INSTALL LUGGAGE COMPARTMENT TRIM BOX COVER AND TOOL BOX**

5. **START ENGINE AND CHECK FOR LEAKS**

6. **RECHECK ENGINE COOLANT LEVEL**