



INSTALLATION

1. INSTALL FUEL PRESSURE REGULATOR

- (a) Install a new O-ring to the pressure regulator.

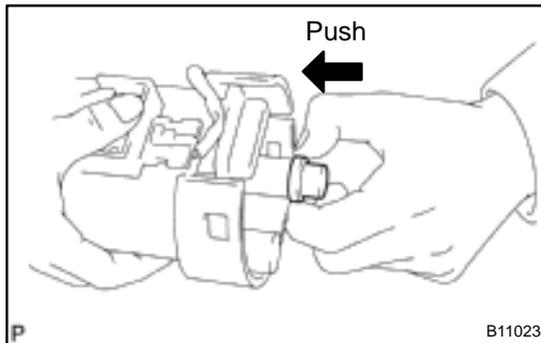


- (b) Apply a light coat of gasoline to the O-ring, and push in the pressure regulator.

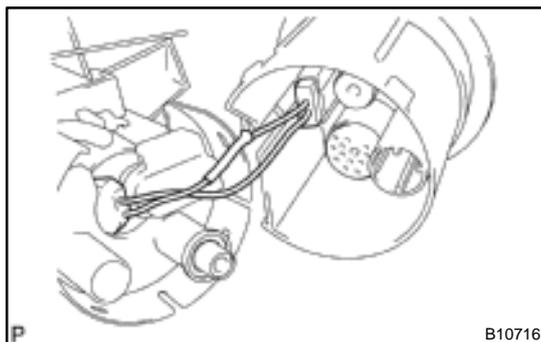


2. INSTALL FUEL SUCTION PLATE

- (a) Connect the fuel pump connector.

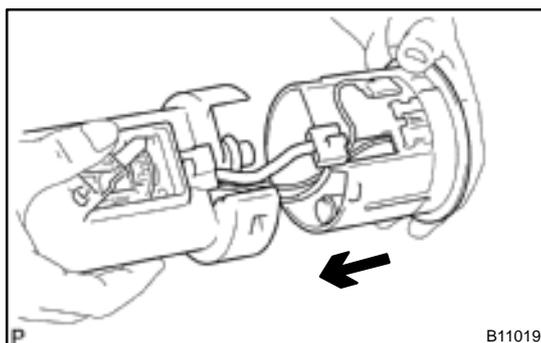

- (b) Install the fuel suction plate to the fuel filter and fuel pump assembly.

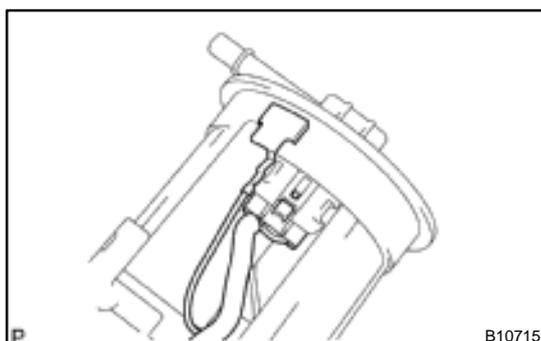

- (c) Connect the fuel sender gauge connector and ground plate.

3. INSTALL FUEL PUMP AND SENDER GAUGE ASSEMBLY TO FUEL TANK (See page [SF-14](#))