


# FUEL TANK AND LINE COMPONENTS

SF09N-06

**CAUTION:**

- Always use new gaskets when replacing the fuel tank or component parts.
- Apply the proper torque to all parts tightened.

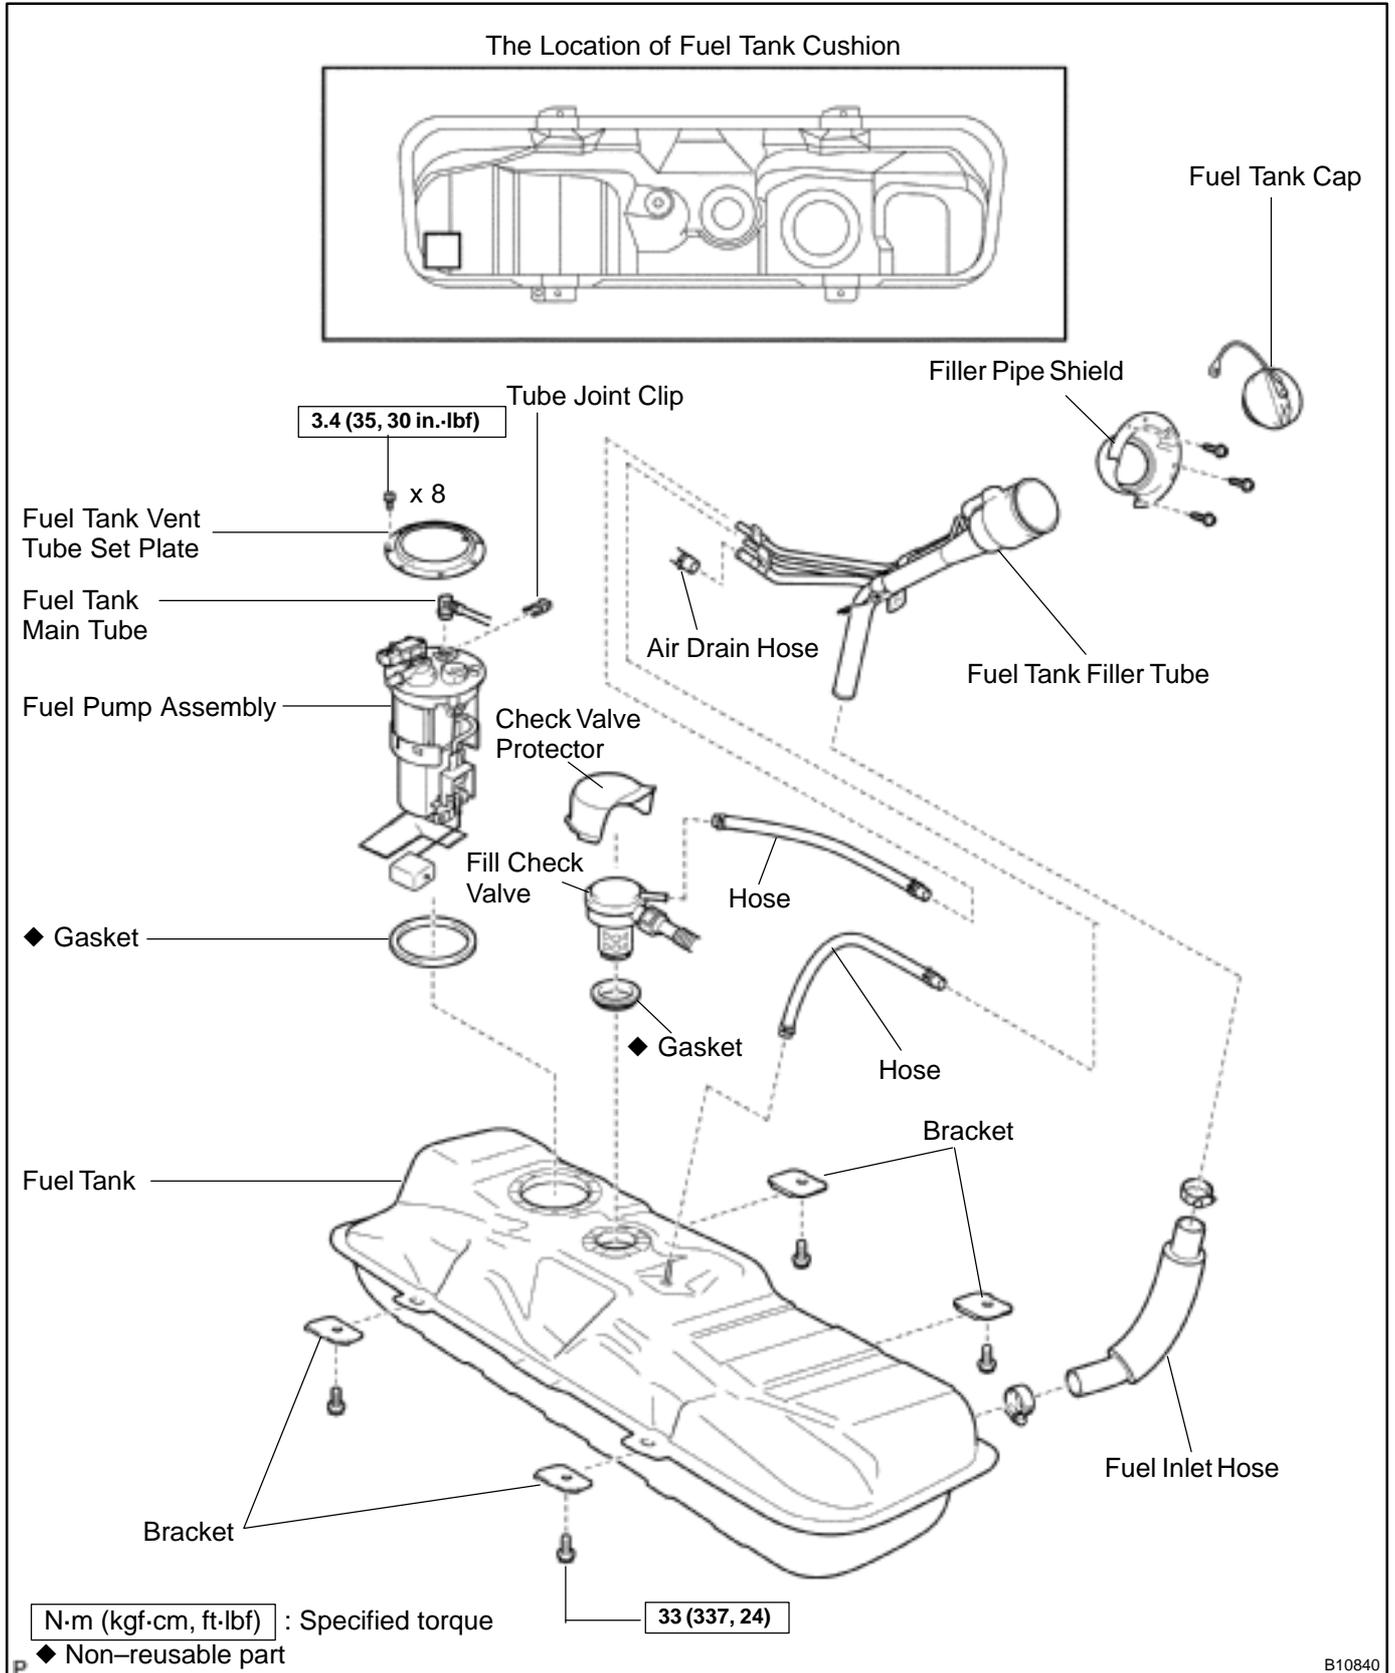

2000MR2 (RM760U)

B10840