



REMOVAL

1. DRAIN ENGINE COOLANT
2. REMOVE SUSPENSION UPPER BRACE
3. DISCONNECT VSV FOR EVAP FROM AIR CLEANER HOSE
4. REMOVE AIR CLEANER HOSE
5. DISCONNECT ACCELERATOR CABLE

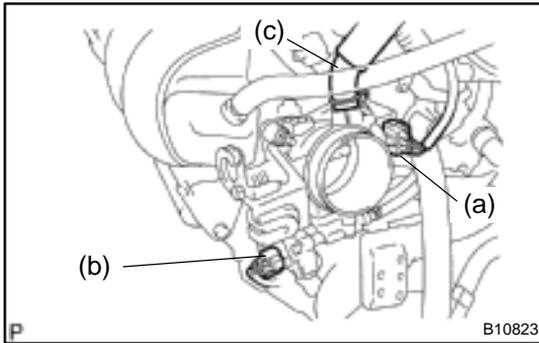

6. REMOVE THROTTLE BODY

- (a) Disconnect the throttle position sensor connector.
- (b) Disconnect the IAC valve connector.
- (c) Disconnect the PCV hose from the throttle body.

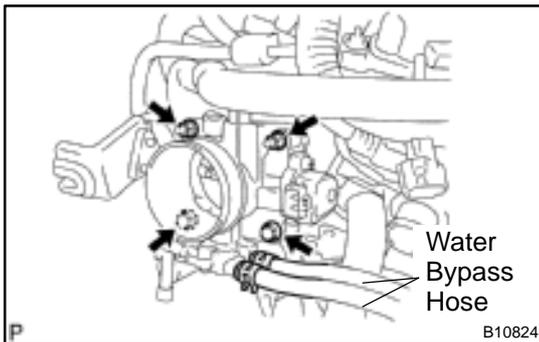

- (d) Disconnect the 2 water bypass hoses from the throttle body.
- (e) Remove the 2 bolts, 2 nuts, throttle body and 2 gaskets from the intake manifold.
- (f) Remove the 2 bolts and accelerator cable bracket from the throttle body.