


IDLE AIR CONTROL (IAC) VALVE ON-VEHICLE INSPECTION

SF09U-05

INSPECT IAC VALVE OPERATION

- (a) Initial conditions:
- Engine at normal operating temperature
 - Idle speed set correctly
 - Transmission in neutral
 - A/C switch OFF

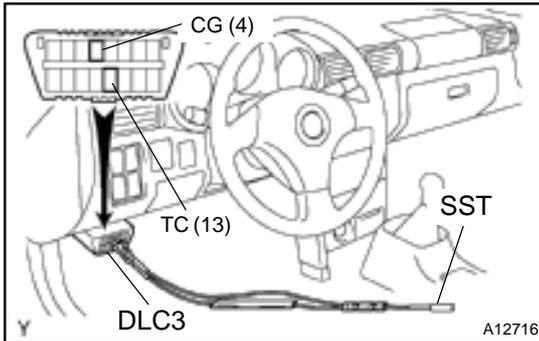

- (b) Using SST, connect terminals TC (13) and CG (4) of the DLC3.

SST 09843-18040

- (c) After the engine speed is kept at 1,000 – 1,500 rpm for 5 seconds, check that it returns to idle speed.

If the engine speed operation is not as specified, check the IAC valve, wiring and ECM.

- (d) Remove the SST from the DLC3.

SST 09843-18040