


STARTER RELAY INSPECTION

ST0J5-01

1. REMOVE STARTER RELAY

- (a) Remove the fusible link block cover.
- (b) Remove the starter relay (Marking: ST).

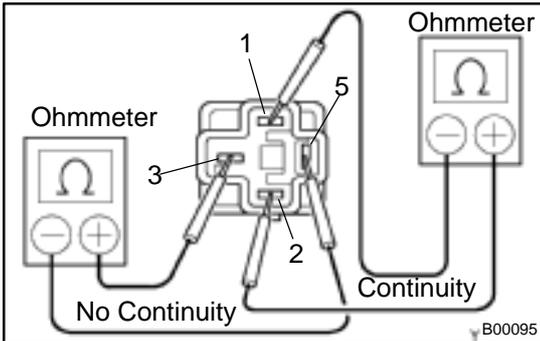


2. INSPECT STARTER RELAY CONTINUITY

- (a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

- (b) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

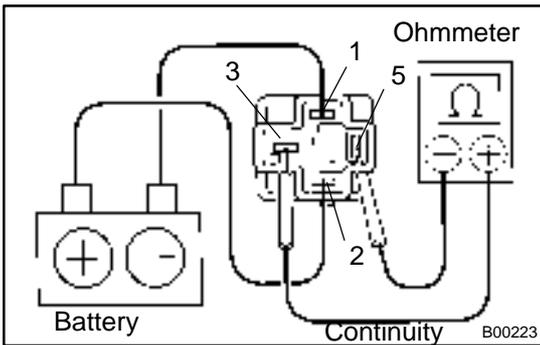

3. INSPECT STARTER RELAY OPERATION

- (a) Apply battery positive voltage across terminals 1 and 2.
- (b) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is continuity, replace the relay.

4. REINSTALL STARTER RELAY

- (a) Reinstall the starter relay.
- (b) Reinstall the fusible link block cover.