


# CHARGING

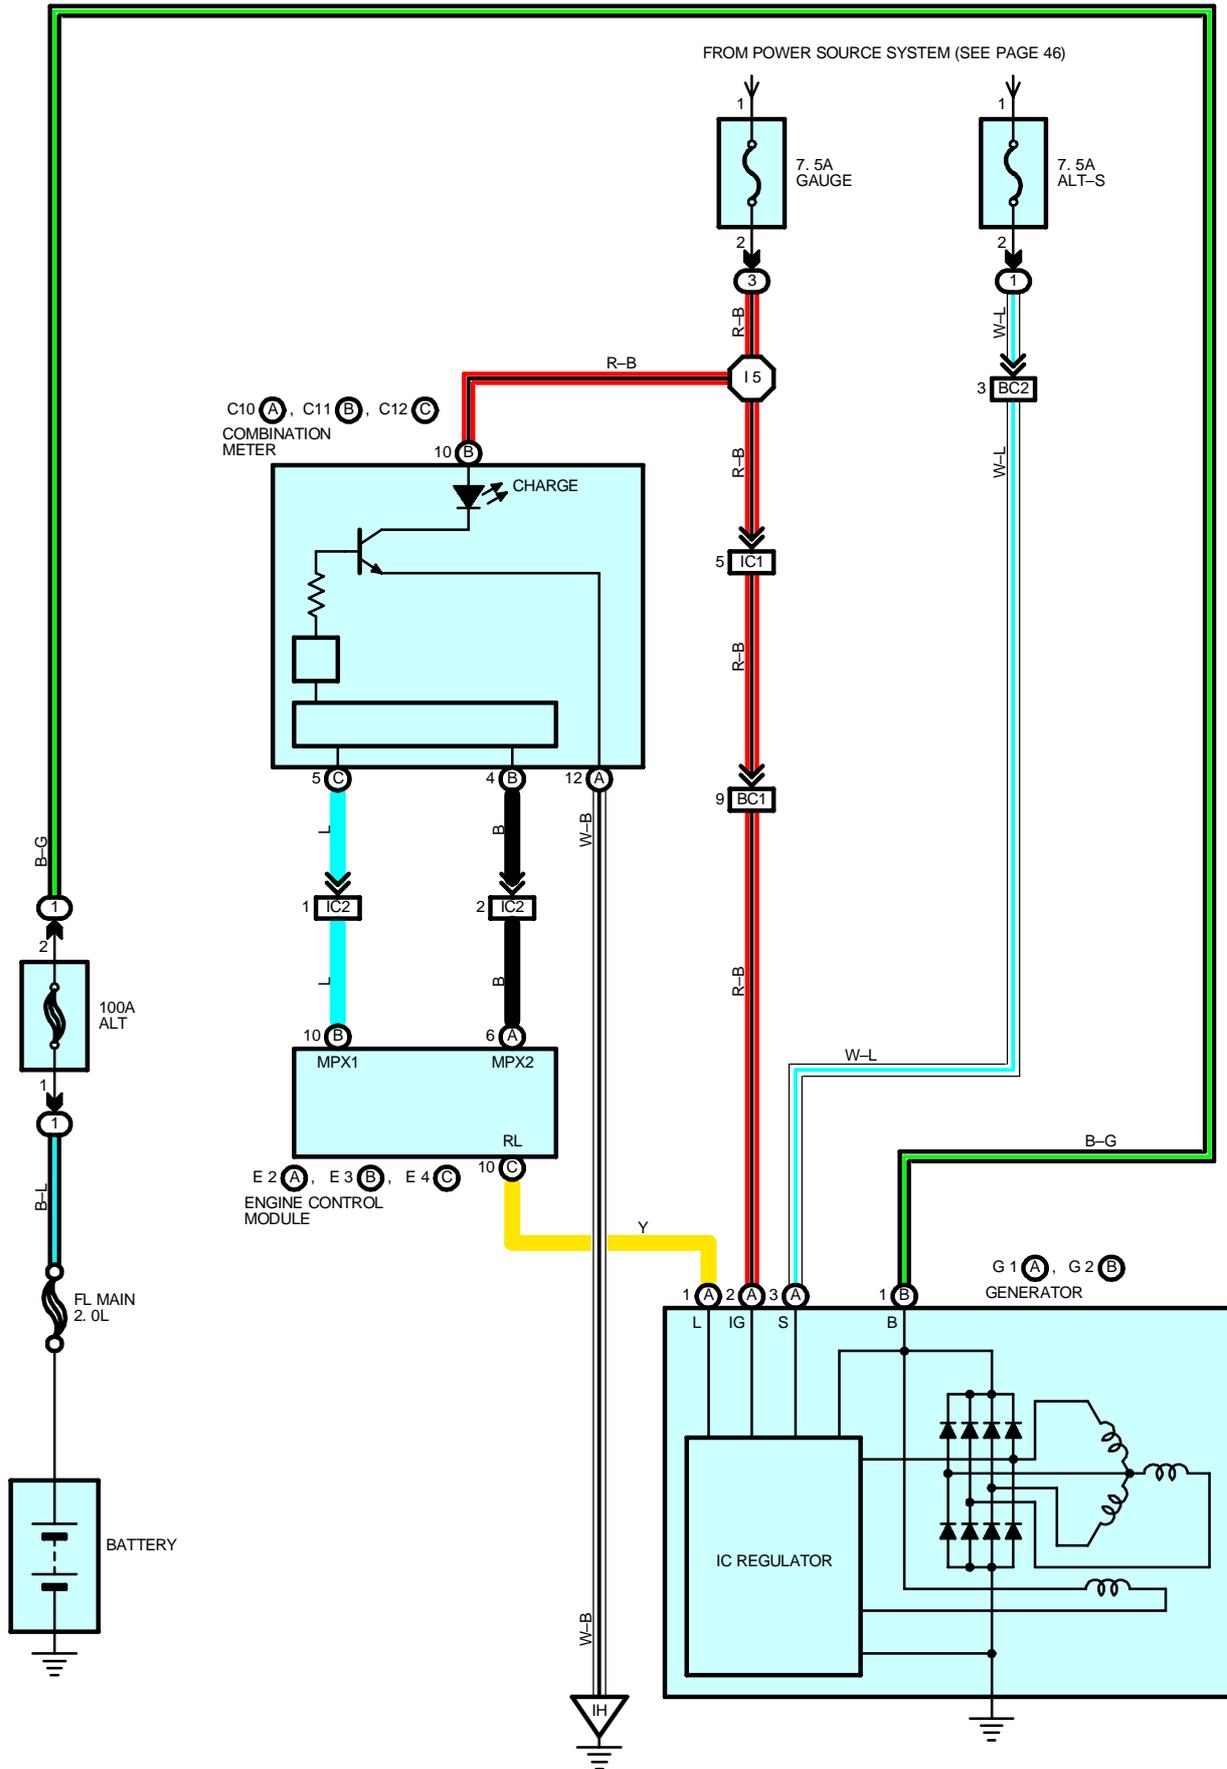

**SERVICE HINTS****G1 (A) GENERATOR**

(A) 3-GROUND : 13.2-14.0 volts with the engine running at 5000 rpm and 115°C (239°F)

 : PARTS LOCATION

Code		See Page	Code		See Page	Code		See Page
C10	A	32	E2	A	34	G1	A	30
C11	B	32	E3	B	34	G2	B	30
C12	C	32	E4	C	34			

 : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Fusible Link Block (Engine Compartment Left)
3	24	R/B No.3 (Left Side of Instrument Panel)

 : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	38	Engine Room Main Wire and Instrument Panel Wire (Left Kick Panel)
IC2		
BC1	42	Engine Wire and Engine Room Main Wire (Quarter Panel LH)
BC2		

 : GROUND POINTS

Code	See Page	Ground Points Location
IH	38	Right Kick Panel

 : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I5	40	Instrument Panel Wire			