

SYSTEM OUTLINE

1. LIGHT REMINDER SYSTEM

When the ignition SW is OFF and the driver's side door or passenger's side door is opened (Door courtesy SW ON) and the light control SW is at TAIL or HEAD position, the light reminder buzzer comes ON.

2. KEY REMINDER BUZZER SYSTEM

If the driver door is opened with the ignition SW set at the ACC or OFF position and the ignition key remained inserted into the key cylinder (The unlock warning SW is on), the signal from the unlock warning SW is input to TERMINAL KSW of the body ECU and the signal from the door courtesy SW LH is input to TERMINAL DCTY of body ECU. As a result, through communication control of the body ECU etc. the buzzer in the combination meter goes on to warn the driver that the ignition key is still inserted.

SERVICE HINTS

D6 DOOR COURTESY SW LH

1-GROUND : Closed with driver's door open

D7 DOOR COURTESY SW RH

1-GROUND : Closed with the passenger's door open

U1 UNLOCK WARNING SW

2-1 : Closed with the ignition key in the cylinder

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page		
B5	A	32	C14	32	J3	A	33
B6	B	32	D3	32	J4	B	33
C10	A	32	D6	34	U1		33
C11	B	32	D7	34			

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
3	24	R/B No.3 (Left Side of Instrument Panel)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
6A	26	Instrument Panel Wire and J/B No.6 (Instrument Panel Brace LH)
6C		
6E		

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	38	Engine Room Main Wire and Instrument Panel Wire (Left Kick Panel)
IJ1	40	Floor Wire and Instrument Panel Wire (Right Kick Panel)

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IE	38	Left Kick Panel
IF	38	Instrument Panel Brace LH

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I2	40	Instrument Panel Wire	I5	40	Instrument Panel Wire
I4					