

WIRING DIAGRAMS
Article Text
1987 Toyota Corolla (RWD)
For Rse 555 Main Street Clarksville Va 22901
Copyright © 1997 Mitchell International
Thursday, February 28, 2002 11:29AM

ARTICLE BEGINNING

1987 Wiring Diagrams
Toyota

Corolla RWD

COMPONENT LOCATION MENU

COMPONENT LOCATIONS TABLE

AA

Component	Figure No. (Location)
A/C AMPLIFIER	5 (A 17, C-D 16)
A/C COMP CLUTCH	5 (E 16, A 18)
A/C FUSE	5 (C 19)
A/C SW	5 (A 16, C 16)
ALTERNATOR	1 (B 1)
BACK-UP LT SW	3 (D 11)
BATTERY	1 (A 2)
BRAKE FLUID LEVEL SW	3 (D 8)
CHARGE LT RELAY	2 (C-D 7)
CHECK CONN	2 (D 4, D 7)
CHOKE HEATER	1 (E 2)
CIG LTR	6 (A 22)
CLOCK	6 (A 21)
CLUTCH START SW	1 (B 2-3)
CMH & CMH RELAY	2 (D 6)
COLD START INJ	1 (A 3)
COMBINATION SW	6 (D 20)
COOLANT THERMO SW	4 (E 12)
CRUISE CONTROL	3 (E 8-11)
DEFOGGER GRID	7 (E 27)
DEFOGGER RELAY & CB	4 (B 14)
DEFOGGER SW	6 (E 20)
DIR FLASHER	6 (B 20)
DIR/HAZ SW	6 (B-C 20)
DISTRIBUTOR	2 (E 5, E 6)
DOOR SWS	7 (E 25-26)
ECC (CARB)	2 (D-E 7)
EFI ECU	2 (A-C 4)
EFI MAIN RELAY	1 (C-D 2)
EFI RESISTORS	2 (B 7)
ELECT IDLE-UP CUT RLY	5 (D-E 17)
ELECT IDLE-UP VSV SOL	2 (C 6)
ENG MAIN RELAY	1 (C-D 2-3)
FRONT WIPER/WASHER	6 (A-B 20-21)

FUEL CUT SOL	2 (C-D 6)
FUEL INJECTORS	2 (B-C 6-7)
FUEL PUMP	2 (B 7)
FUS LINK BOX	1 (A 2)
HEADLT RELAY	1 (C-D 3)
HEADLT RETRACT MOTORS	6 (C-E 23)
HEADLT RETRACT RELAY	6 (C 22-23)
HEATER BLOWER SW	5 (A 19)
HEATER CIRC BRKR	5 (C 19)
HEATER RELAY	5 (C 19)
HORN	1 (D 1)
HORN SW	6 (D 20)
IDLE-UP DIODES	5 (E 18)
IGNITER (EFI)	2 (E 4)
IGNITER (CARB)	2 (E 6)
IGNITION SW	4 (E 15)
INSTRUMENT CLUSTER	6 (A-C 23)
INSTRUMENT ILLUM LTS	6 (D-E 21-22)
INTERIOR LT	7 (C-D 25)
J/B #1	4 (A-D 12-15)
J/B #2	1 (C-D 2-3)
J/B #3	3 (A-D 9-10)
J/B #4	5 (B-C 19)
LT RETAINER RELAY	6 (C 21)
LUGGAGE ROOM LT	7 (D 26)
MAP LT	7 (C-D 25)
NEUTRAL START SW	1 (A 3)
O2 SENSOR	2 (B 6, E 6)
O/D MAIN SW	4 (E 13)
O/D OFF IND	4 (E 13)
O/D RELAY	4 (E 12)
PARK BRAKE SW	3 (A 8)
POWER MIRRORS	7 (C-D 24-25)
POWER WINDOWS	7 (A-B 24-26)
RADIO	6 (E 23)
REAR WIPER/WASHER	7 (A-B 26-27)
RETRACT CONTROL RLY	6 (D 21)
RHEOSTAT	6 (D 20)
RTR FUS LINK	1 (C 2)
SEAT BELT WARN RLY	6 (B 21)
STARTER	1 (A 3)
STARTER RELAY	1 (B 2)
STOP LT SW	3 (A 11)
SUNROOF	7 (D 27)
TAILLT RELAY	4 (B 13)
T-VIS VSV SOL	2 (C 5)
UNLOCK WARN SW	6 (B 21-22)
VACUUM PUMP	3 (E 9)

WIRING DIAG

AA

WIRING DIAGRAM

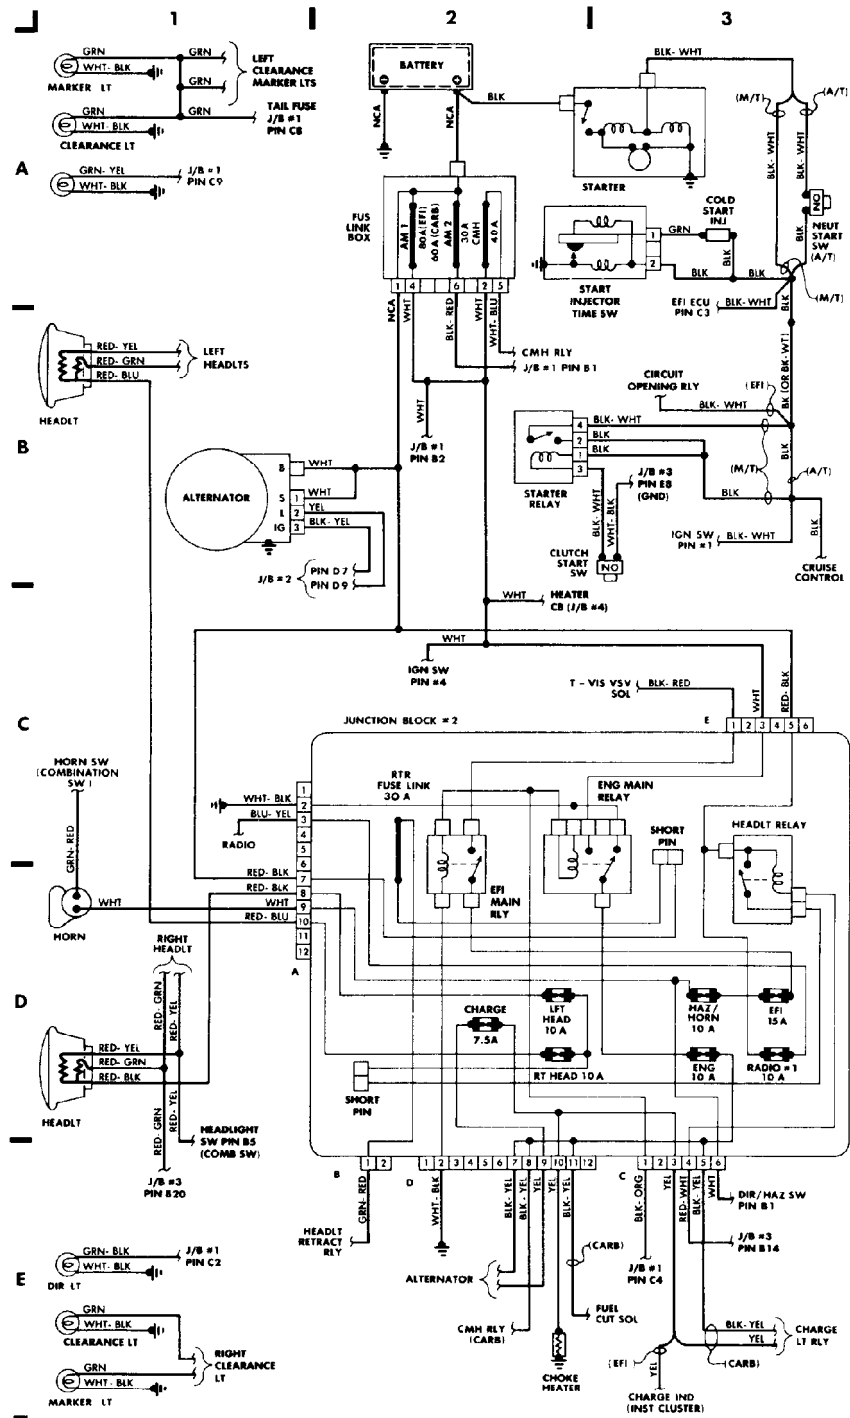


Fig. 1: Engine Compartment (Grids 1-3)

WIRING DIAGRAMSArticle Text (p. 4)1987 Toyota Corolla (RWD)For Rse 555 Main Street Clarksville Va 22901

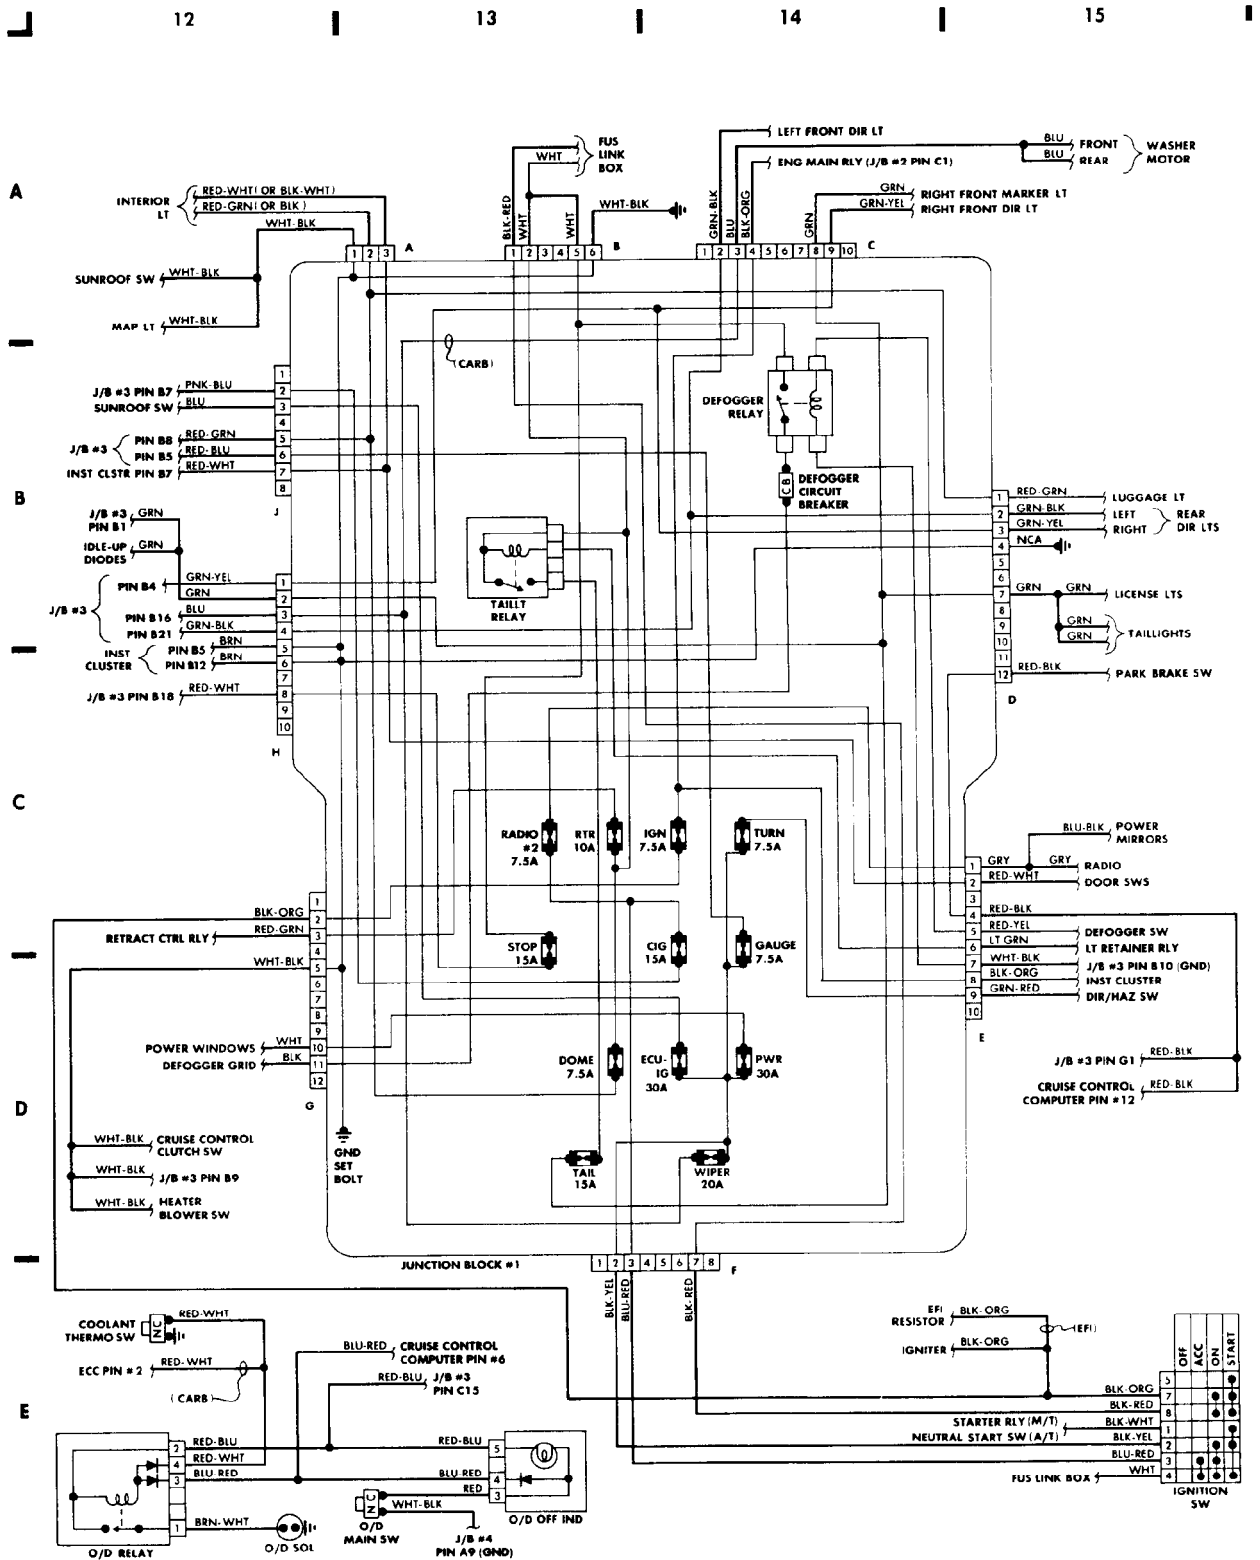


Fig. 4: Underdash & Instrument Panel (Cont.) (Grids 12-15)

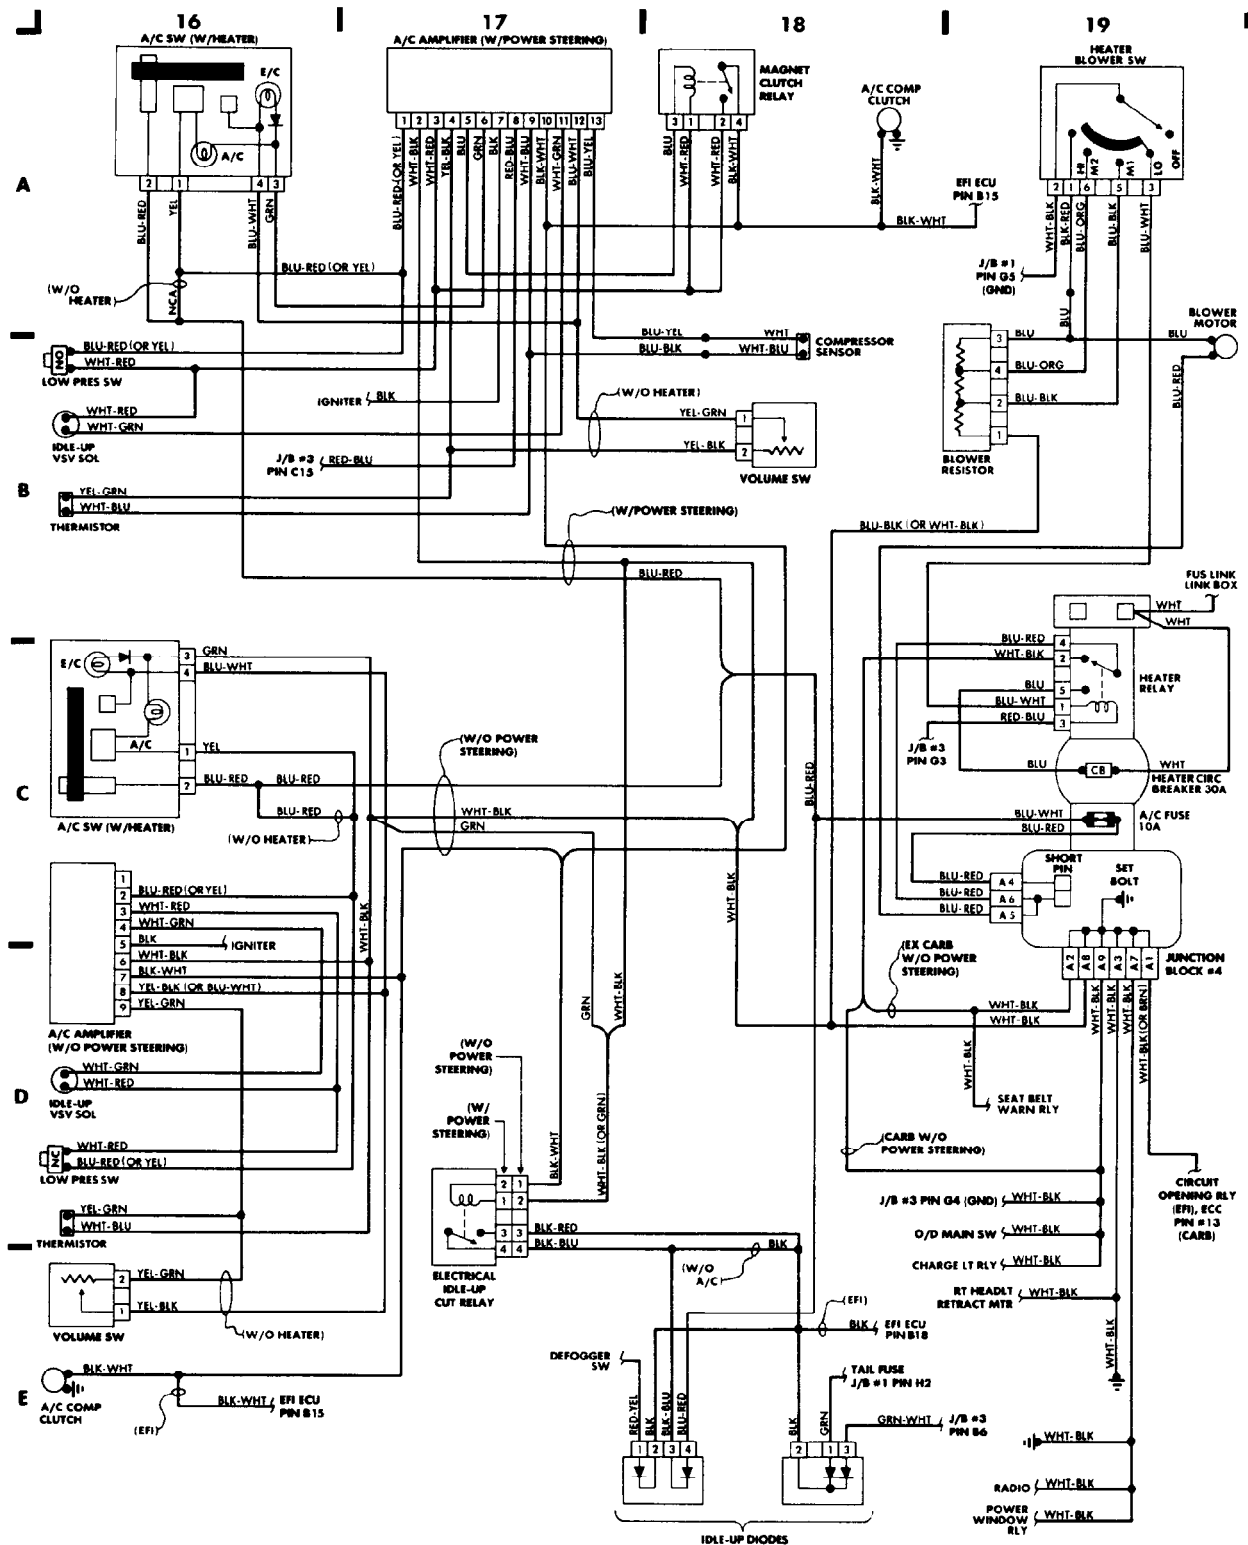


Fig. 5: Underdash & Instrument Panel (Cont.) (Grids 16-19)



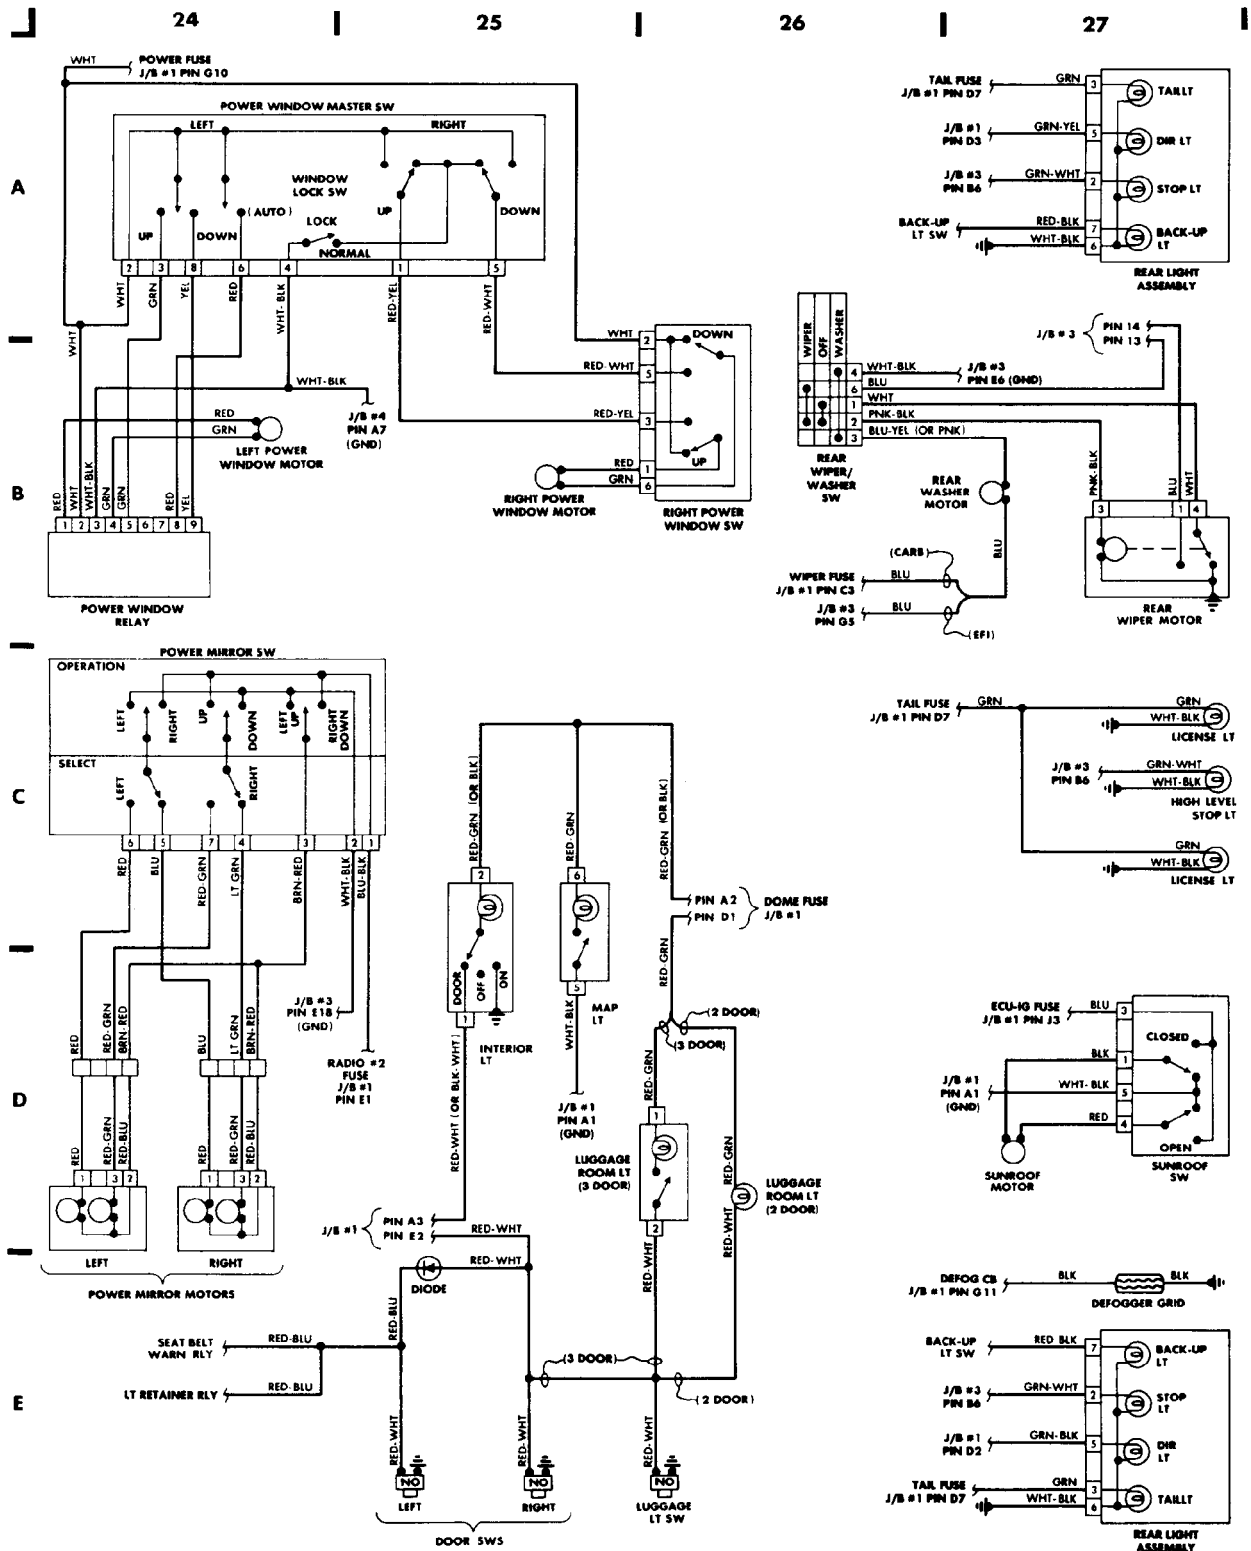


Fig. 7: Rear Compartment & Accessories (Grids 24-27)