

WIRING DIAGRAMS - EXCEPT FX

Article Text

1988 Toyota Corolla (FWD)
For Rse 555 Main Street Clarksville Va 22901
Copyright © 1997 Mitchell International
Thursday, February 28, 2002 11:49AM

ARTICLE BEGINNING

1988 WIRING DIAGRAMS

Toyota

Corolla (Except FX & FX-16)

COMPONENT LOCATION MENU

COMPONENT LOCATIONS TABLE

AA


Component	Figure No. (Location)
A/C Fuse	6 (E 20)
A/C System	6 (A-E 20-23)
Alternator	1 (B 2)
Battery	1 (A 2)
CDS Fan Fus Link (J/B #5)	6 (E 22)
Circuit Opening Rly (EFI)	2 (A 6)
Clock	5 (A 16)
Clutch Start Sw	1 (C 3)
Cold Mixture Htr (CMH) (Carb, Calif)	3 (C 9)
Cold Mixture Htr (CMH) (Carb, Fed)	3 (D 9)
Combination Sw	4 (D-E 12)
Cruise Ctrl Clutch Sw	5 (D 19)
Cruise Ctrl Computer	5 (E 17-18)
Cruise Ctrl Main Sw	5 (D 16)
Defog CB	1 (C 2)
Defog Relay	10 (E 39)
Defog Sw	10 (D 38)
Dir Flasher	4 (D 15)
Door Ctsy Sws	9 (E 32-33)
ECU-IG Fuse	4 (A 14)
EFI ECU	2 (B-D 4)
Elect Idle Up VSV	6 (C 22)
Emission Ctrl Computer (ECC) (Carb, Calif)	3 (A-C 11)
Emission Ctrl Computer (ECC) (Carb, Fed)	3 (D-E 11)
Fuel Tank Send Unit	10 (B 38)
Fus Link Box	1 (A 2)
Hazard Sw	4 (E 14)
Heater CB (J/B #4)	6 (E 20)
Hi Pres SW (Rad Fan) (Carb, Calif)	3 (A 8)
Idle Up Diodes	6 (D 22)
Idle Up VSV SOL	2 (D 5)
Igniter (EFI)	2 (E 6)
Ign Mod/Igniter (Carb, Calif)	3 (A 8)
Ign Mod/Igniter (Carb, Fed)	3 (D 8)

Ign Sw	4 (E 14)
Illum Lts (Coupe)	7 (C-E 24)
Illum Lts (Ex Coupe)	8 (C-E 28)
Inst Clstr (Coupe)	7 (C-E 27)
Inst Clstr (Ex Coupe)	8 (C-E 31)
Interior Lts	9 (E 32-35)
Junction Block #1	4 (A-C 13-14)
Junction Block #2	5 (A-B 16-18)
Junction Block #3 (Coupe)	7 (A-B 25-26)
Junction Block #3 (Ex Coupe)	8 (A-B 29-30)
Junction Block #4	6 (D-E 20)
Junction Block #5	6 (D-E 21-23)
Junction Conn (Coupe)	7 (E 25)
Junction Conn (Ex Coupe)	8 (E 29)
Main Fus Link	1 (A 3)
Neutral Start Sw	1 (B 3)
Noise Filter (EFI)	2 (E 5)
O/D SOL	5 (D 18)
Outer Vent Ctrl Valve (OVCV) (Carb, Calif)	3 (E 9)
Over Drive (O/D) Main Sw	5 (D 19)
Power CB	10 (B 36)
Power Door Locks	9 (A-D 35)
Power Main Rly	10 (B 36)
Power Mirrors	10 (D-E 36)
Power Window Sys	10 (A-B 36-38)
RDI Fan Fus Link (J/B #2)	5 (B 17)
Rear Wiper Sys	10 (D 38-39)
Retract Ctrl Rly (Coupe, Carb)	1 (D-E 3)
Retract Ctlr Rly & Lt Retainer Rly (Coupe, EFI)	1 (D-E 3)
Seatbelt Buckle Sw	4 (C 14)
Starter Rly	1 (B 3)
Stop Lt Sw	5 (E 19)
Sunroof	10 (C 36-38)
Theft Deterrent Sys	9 (A-D 32-34)
Unlock Warn Sw	4 (C 14)
Vacuum Pump	5 (E 16)
Wiper Motor	4 (E 13)
AA	

WIRING DIAGRAMS

COMPONENT LOCATOR:

A/C FUSE	E 20
A/C SYSTEM	A-E 20-23
ALTERNATOR	B 2
BATTERY	A 2
CDS FAN FUS LINK (J/B #5)	E 22
CIRCUIT OPENING RLY (EP)	A 6
CLOCK	A 16
CLUTCH START SW	C 3
COLD MIXTURE HTR (CMH)	C 9
(CARB, CALIF)	
COLD MIXTURE HTR (CMH)	D 9
(CARB, FED)	
COMBINATION SW	D-E 12
CRUISE CTRL CLUTCH SW	D 19
CRUISE CTRL COMPUTER	E 17-18
CRUISE CTRL MAIN SW	D 16
DEFOG CB	C 2
DEFOG RELAY	E 39
DEFOG SW	D 38
DIR FLASHER	D 15
DOOR CTSY SWS	E 32-33
ECU-IG FUSE	A 14
EFI ECU	B 4
ELECT IDLE UP VSV	C 22
EMISSION CTRL COMPUTER	A-C 11
(ECC) (CARB, CALIF)	
EMISSION CTRL COMPUTER	D-E 11
(ECC) (CARB, FED)	
FUEL TANK SEND UNIT	B 38
FUS LINK BOX	A 2
HAZARD SW	E 14
HEATER CB (J/B #4)	E 20
HIPRES SW (RAD FAN)	A 8
(CARB, CALIF)	
IDLE UP DIODES	D 22
IDLE UP VSV SOL	D 5
IGNITER (EFI)	E 6
IGN MOD/IGNITER (CARB, CALIF)	E 8
IGN MOD/IGNITER (CARB, FED)	D 8
IGN SW	E 14
ILLUM LYS (EX COUPE)	C-E 24
INST CLSTR (EX COUPE)	C-E 27
INST CLSTR (EX COUPE)	C-E 31
INTERIOR LYS	E 32-36
JUNCTION BLOCK #1	A-C 13-14
JUNCTION BLOCK #2	A-B 16-18
JUNCTION BLOCK #3 (COUPE)	A-B 25-26
JUNCTION BLOCK #3	A-B 29-30
(EX COUPE)	
JUNCTION BLOCK #4	D-E 20
JUNCTION BLOCK #6	D-E 21-23
JUNCTION CONN (COUPE)	E 25
JUNCTION CONN (EX COUPE)	E 29
MAIN FUS LINK	A 3
NEUTRAL START SW	B 3
NOISE FILTER (EFI)	E 5
O/D SOL	D 18
OUTER VENT CTRL VALVE (OVCV)	E 3
(CARB, CALIF)	
OVER DRIVE (O/D) MAIN SW	D 19
POWER CB	B 36
POWER DOOR LOCKS	A-35
POWER MAIN RLY	B 36
POWER MIRRORS	D-E 36
POWER WINDOW SYS	A-B 36-38
RDI FAN FUS LINK (J/B #2)	B 17
REAR WIPER SYS	D 38-39
RETRACT CTRL RLY	D-E 3
(COUPE, CARB)	
RETRACT CTRL RLY & LT	D-E 3
RETAINER RLY (COUPE, EFI)	C 14
SEATBELT BUCKLE SW	B 3
STARTER RLY	B 3
STOP LT SW	E 19
SUNROOF	C 38-39
THEFT DETRNT SYS	A-D 32-34
UNLOCK WARN SW	C 14
VACUUM PUMP	E 16
WIPER MOTOR	E 13

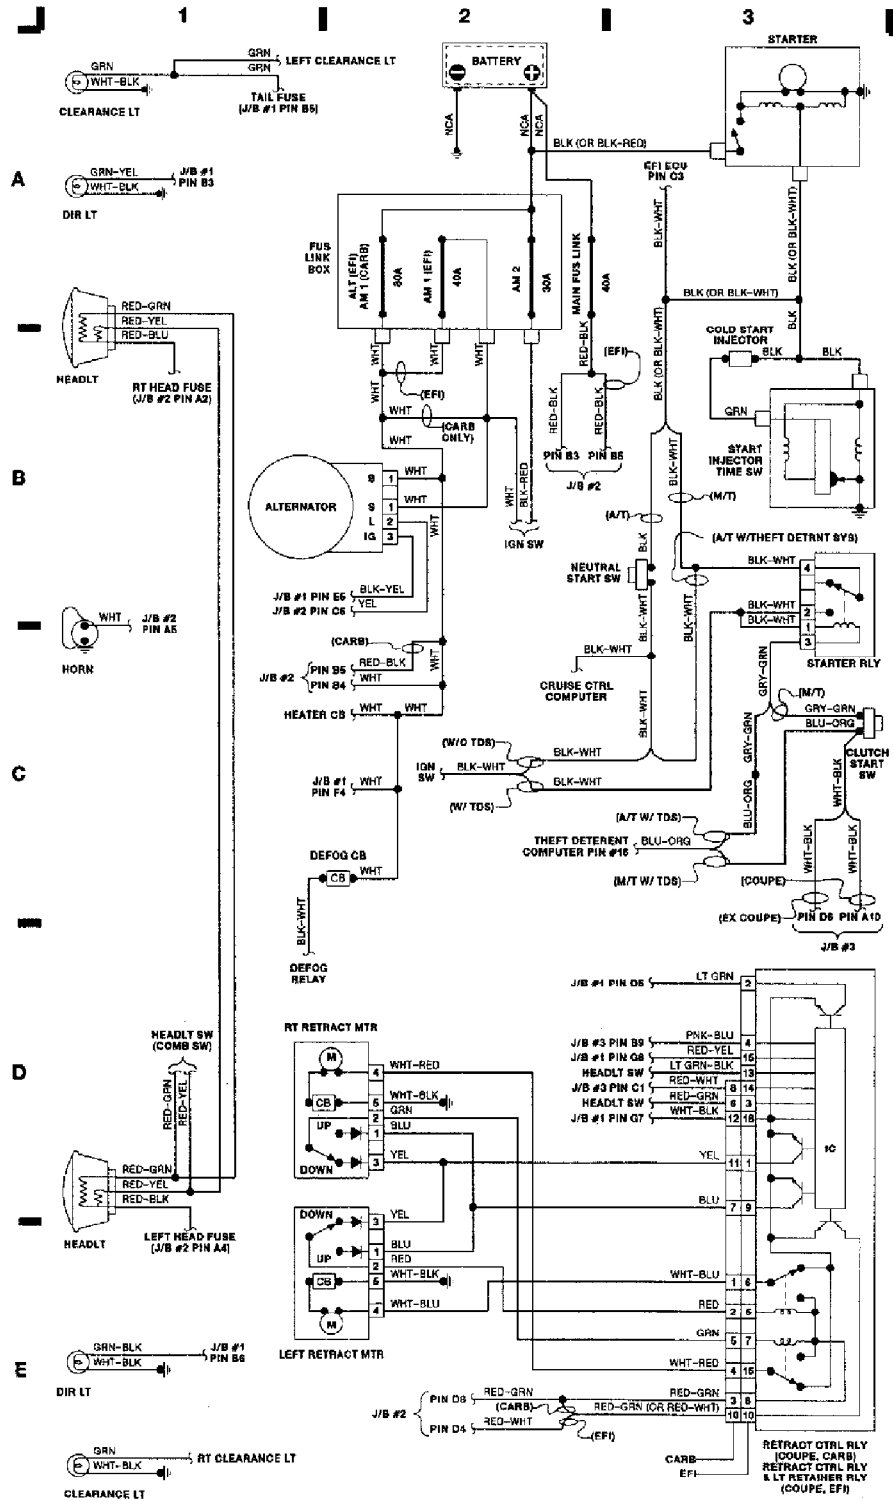

WIRING DIAG

Fig. 1: Engine Compartment & Headlights

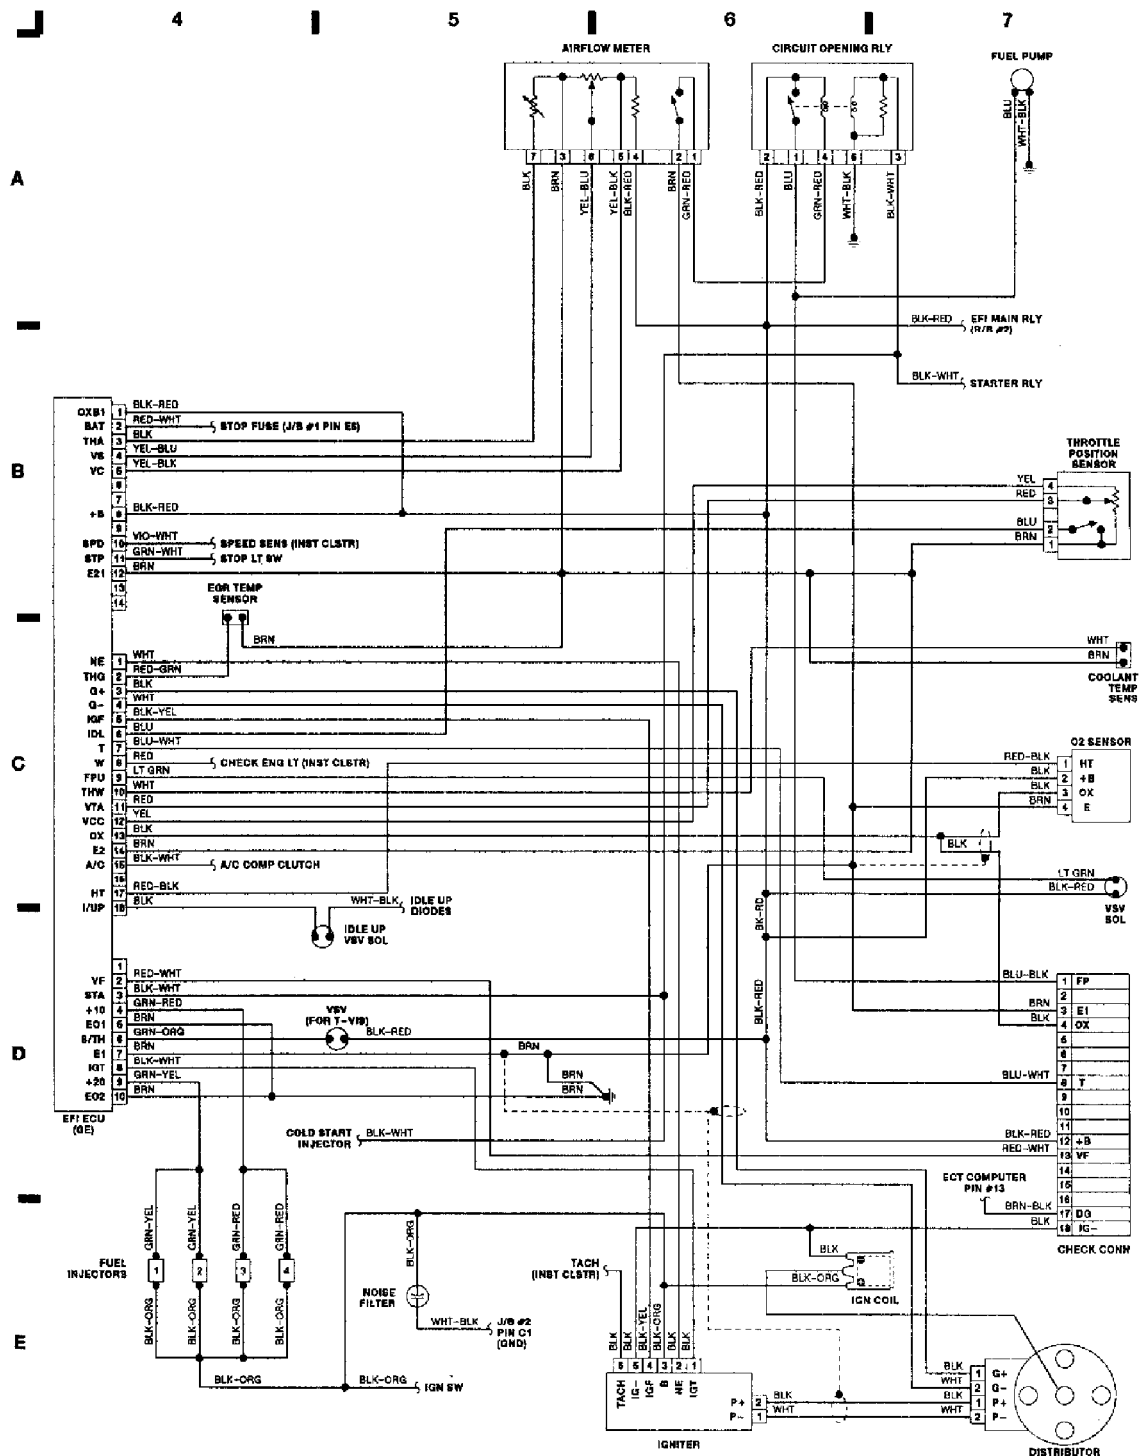


Fig. 2: Engine Compartment (Cont.), Ignition, Fuel (Injected Models)
WIRING DIAGRAMS - EXCEPT FXArticle Text (p. 4)1988 Toyota Corolla (FWD)For Rse 555 Main Street Clar

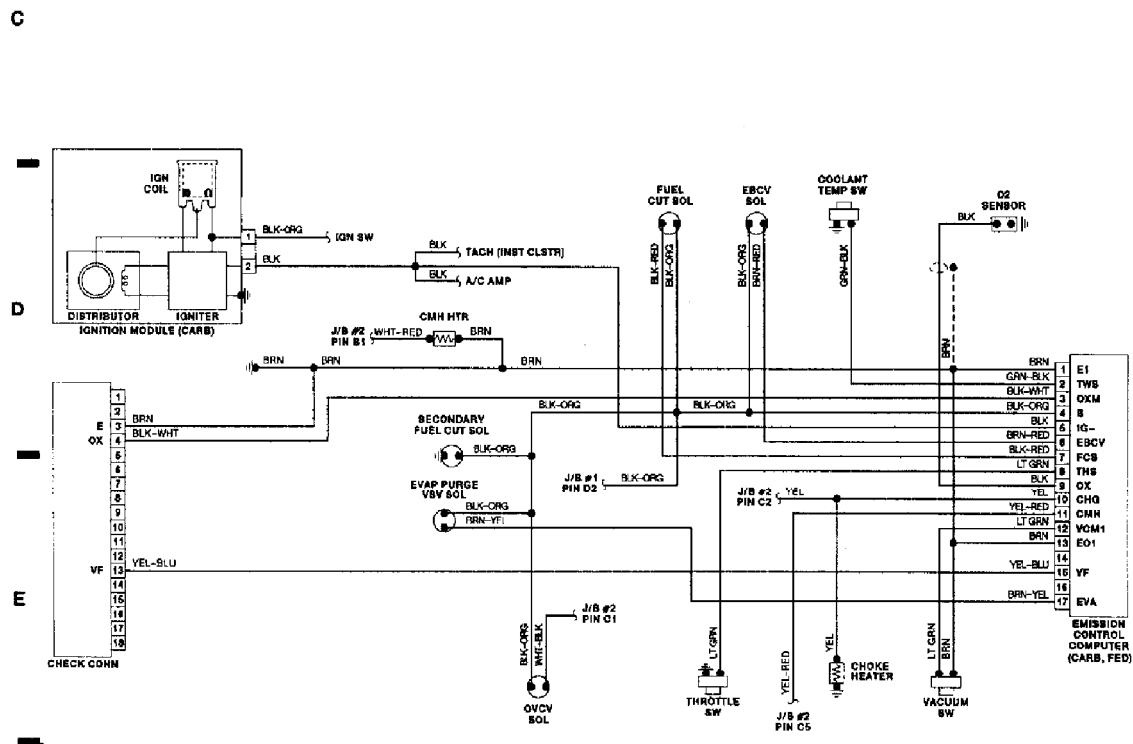
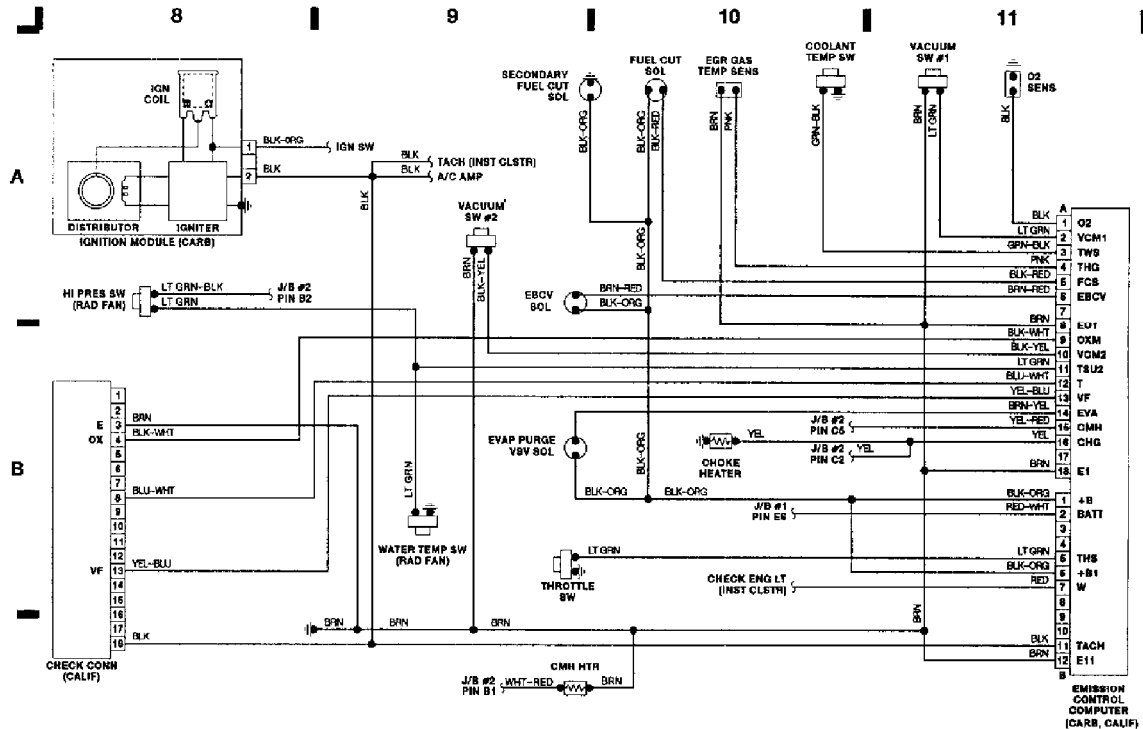



Fig. 3: Engine Compartment (Cont.), Ignition, Fuel (Carb. Models)
WIRING DIAGRAMS - EXCEPT FX Article Text (p. 5) 1988 Toyota Corolla (FWD) For Rse 555 Main Street Clar

 

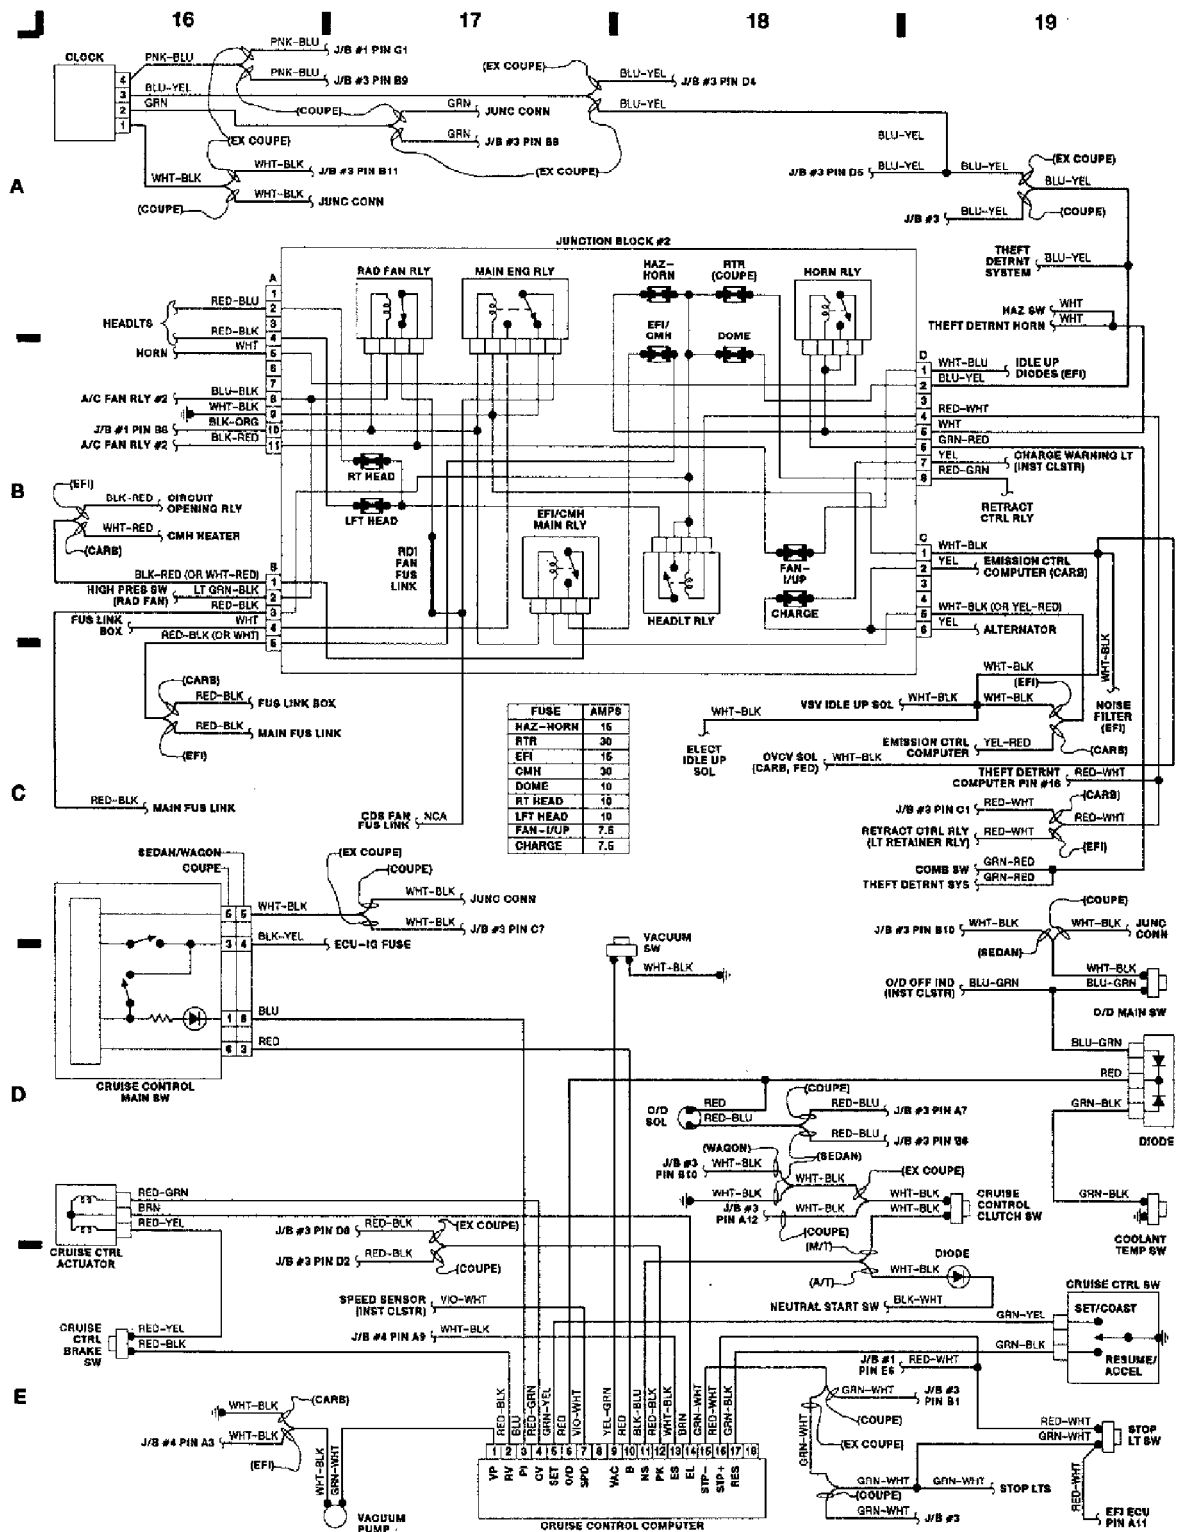


Fig. 5: Underdash, Instrument Panel (Cont.) & Accessories, Cruise, Junction Block #2

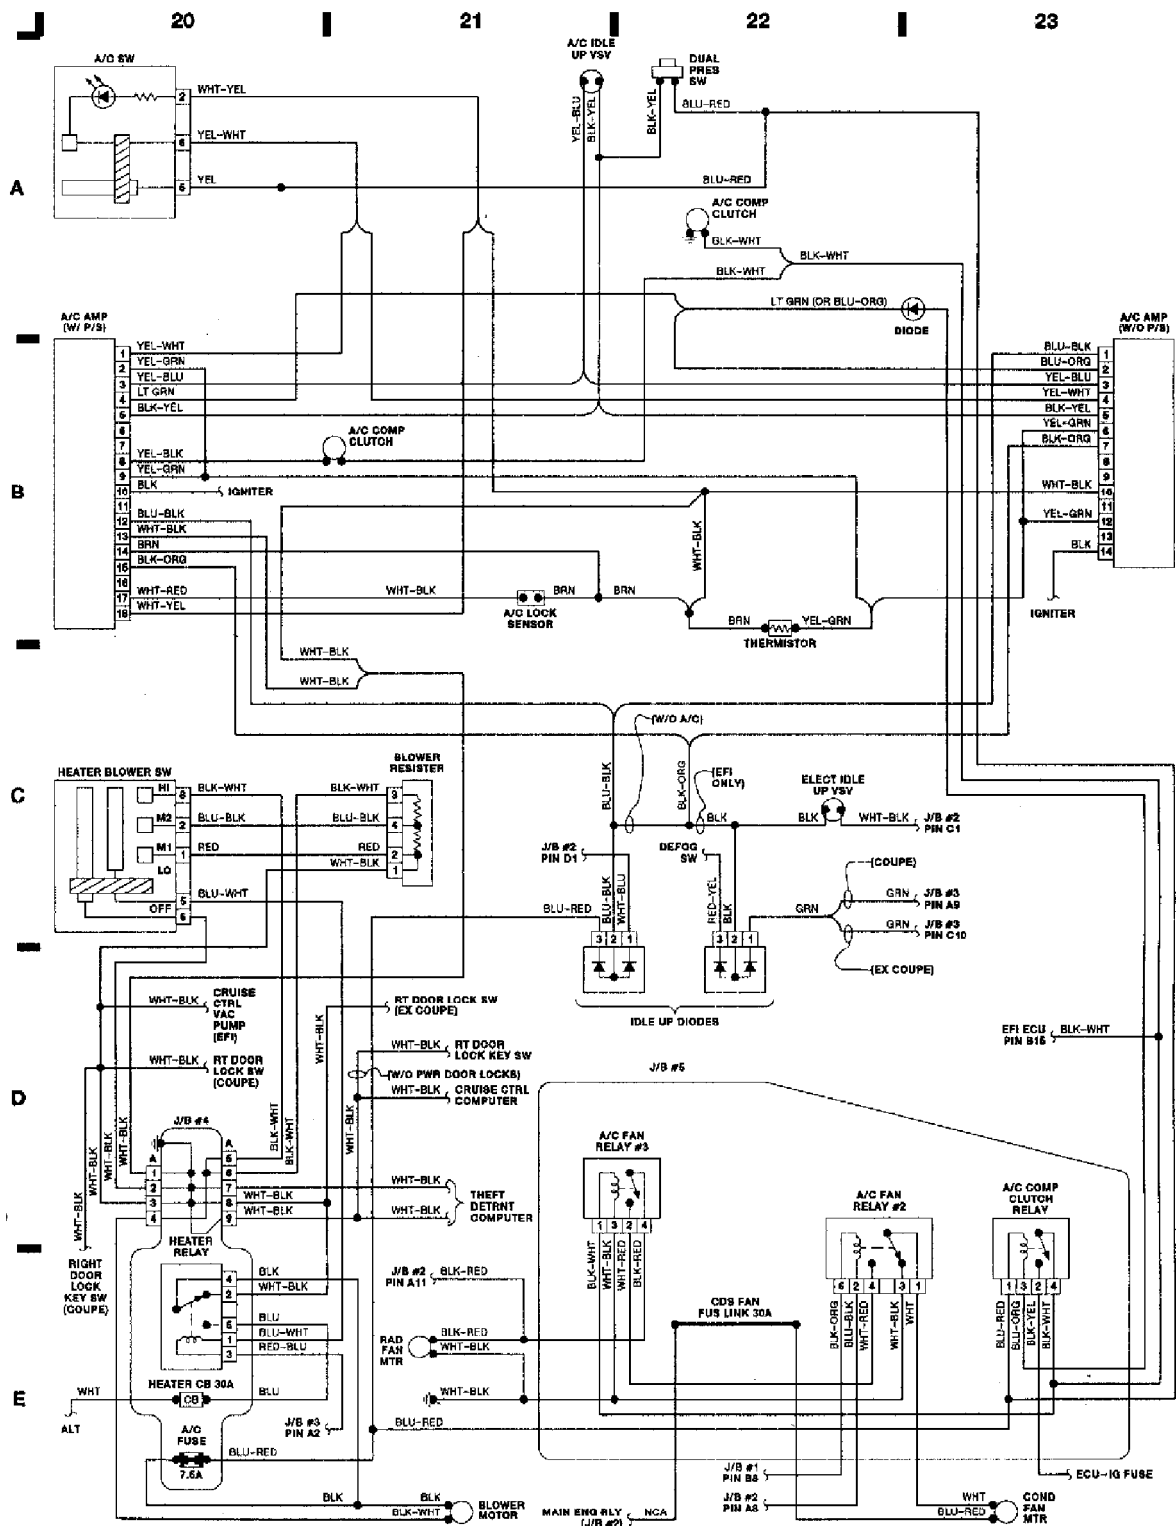


Fig. 6: Underdash & Instrument Panel (Cont.), A/C & Heating

WIRING DIAGRAMS - EXCEPT FXArticle Text (p. 8)1988 Toyota Corolla (FWD)For Rse 555 Main Street Clar

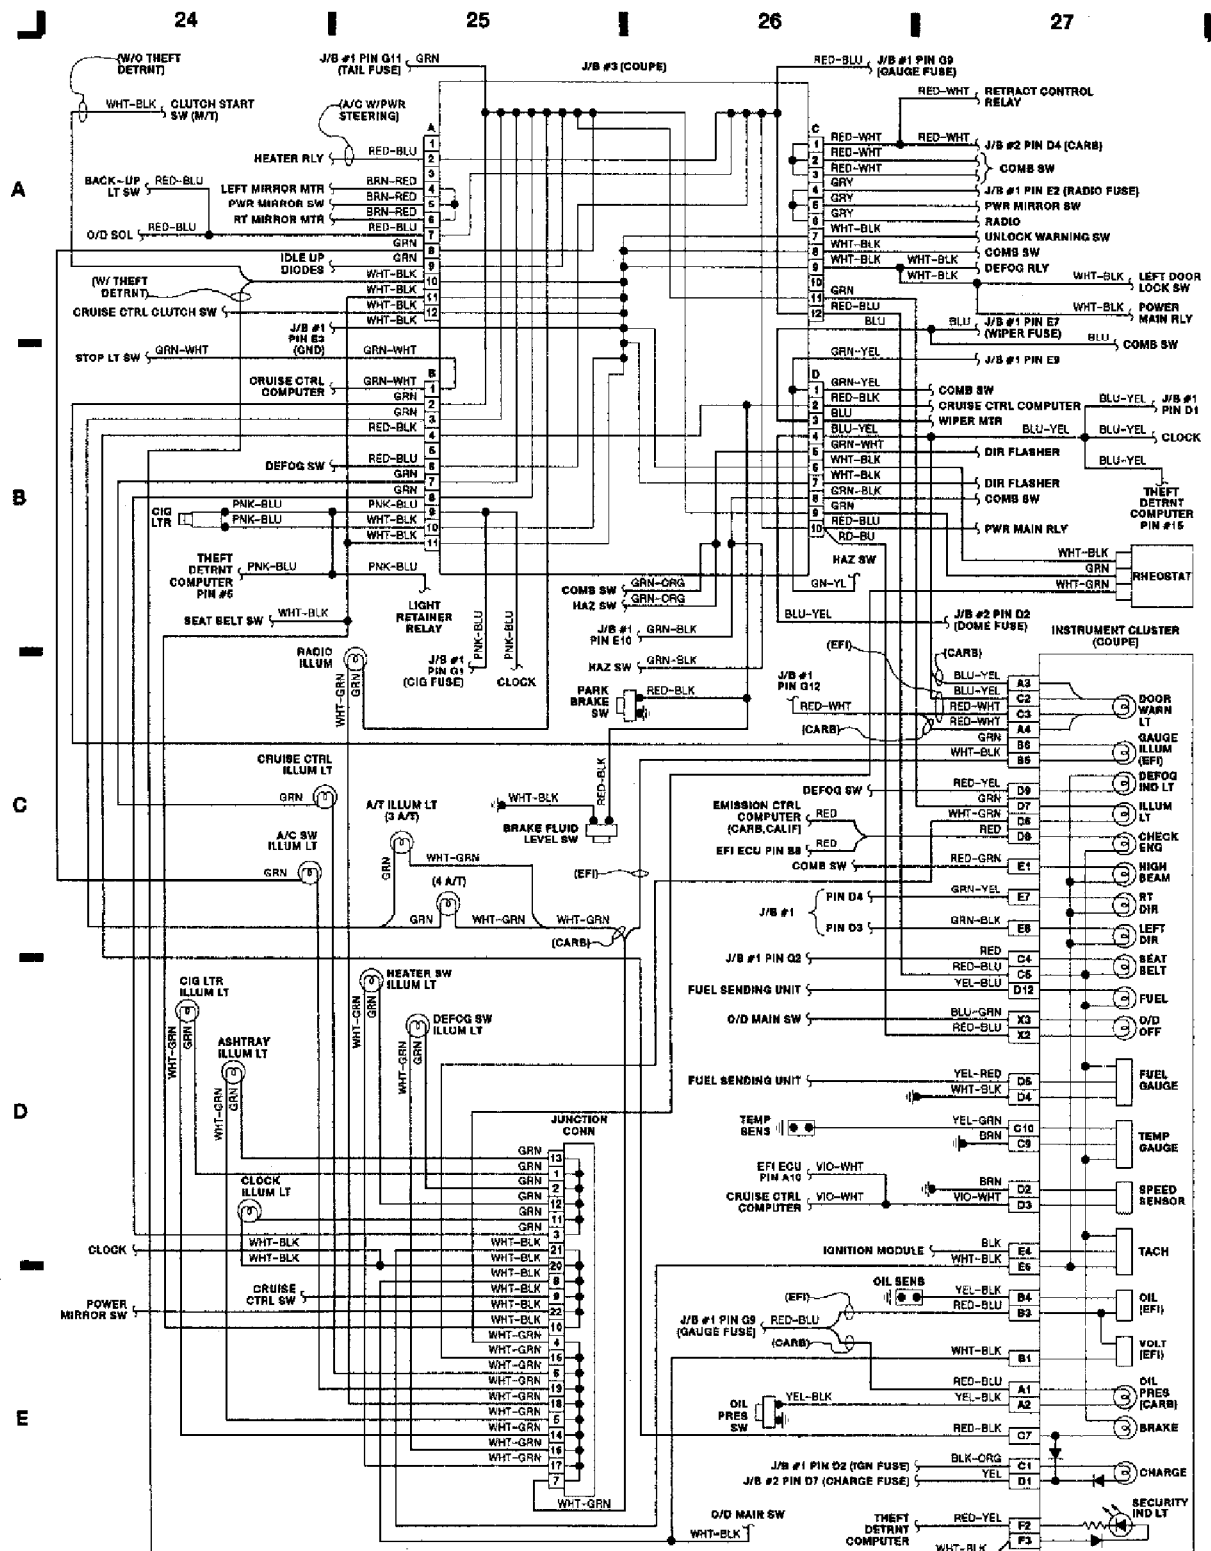


Fig. 7: Underdash & Instrument Panel (Cont.), Junction Block #3
 WIRING DIAGRAMS - (EXCEPT) FXArticle Text (p. 9) 1988 Toyota Corolla (FWD) For Rse 555 Main Street Clar


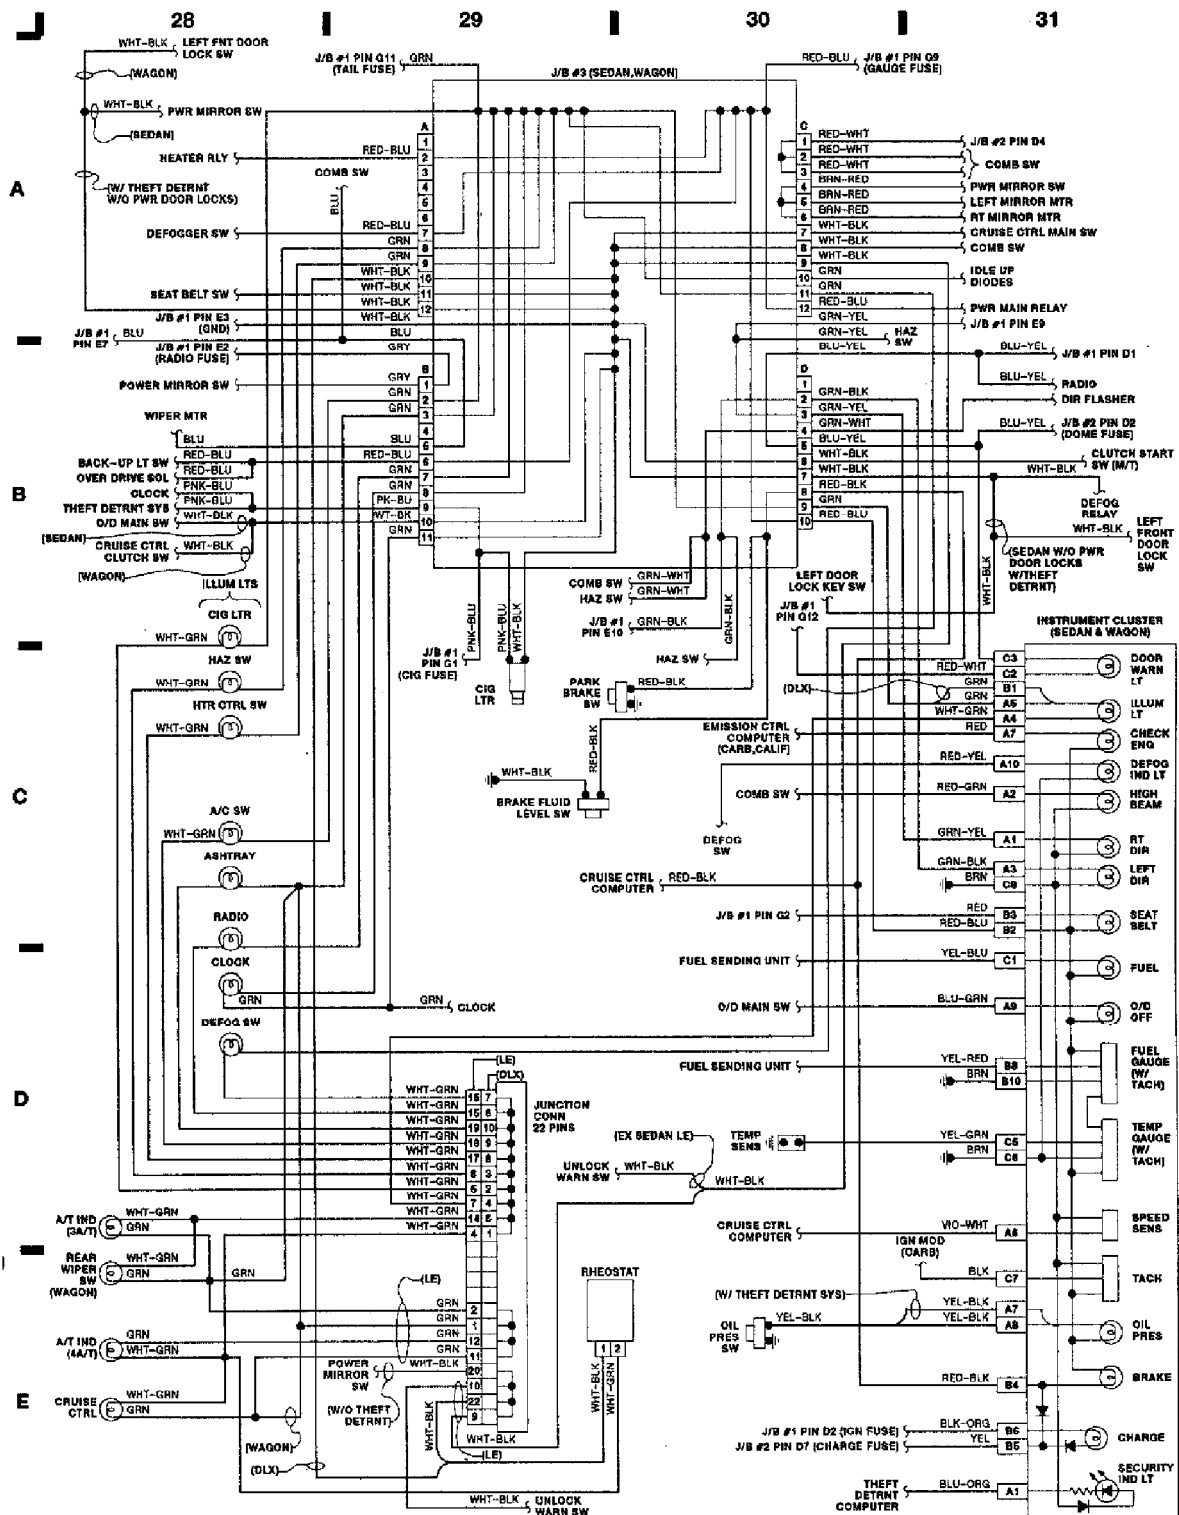


Fig. 8: Underdash & Instrument Panel (Cont.), Junction Block #3 (Sedan & Wagon), Cluster (Sedan & Wagon)
 WIRING DIAGRAMS - EXCEPT FXArticle Text (p. 10)1988 Toyota Corolla (FWD)For Rse 555 Main Street Clc

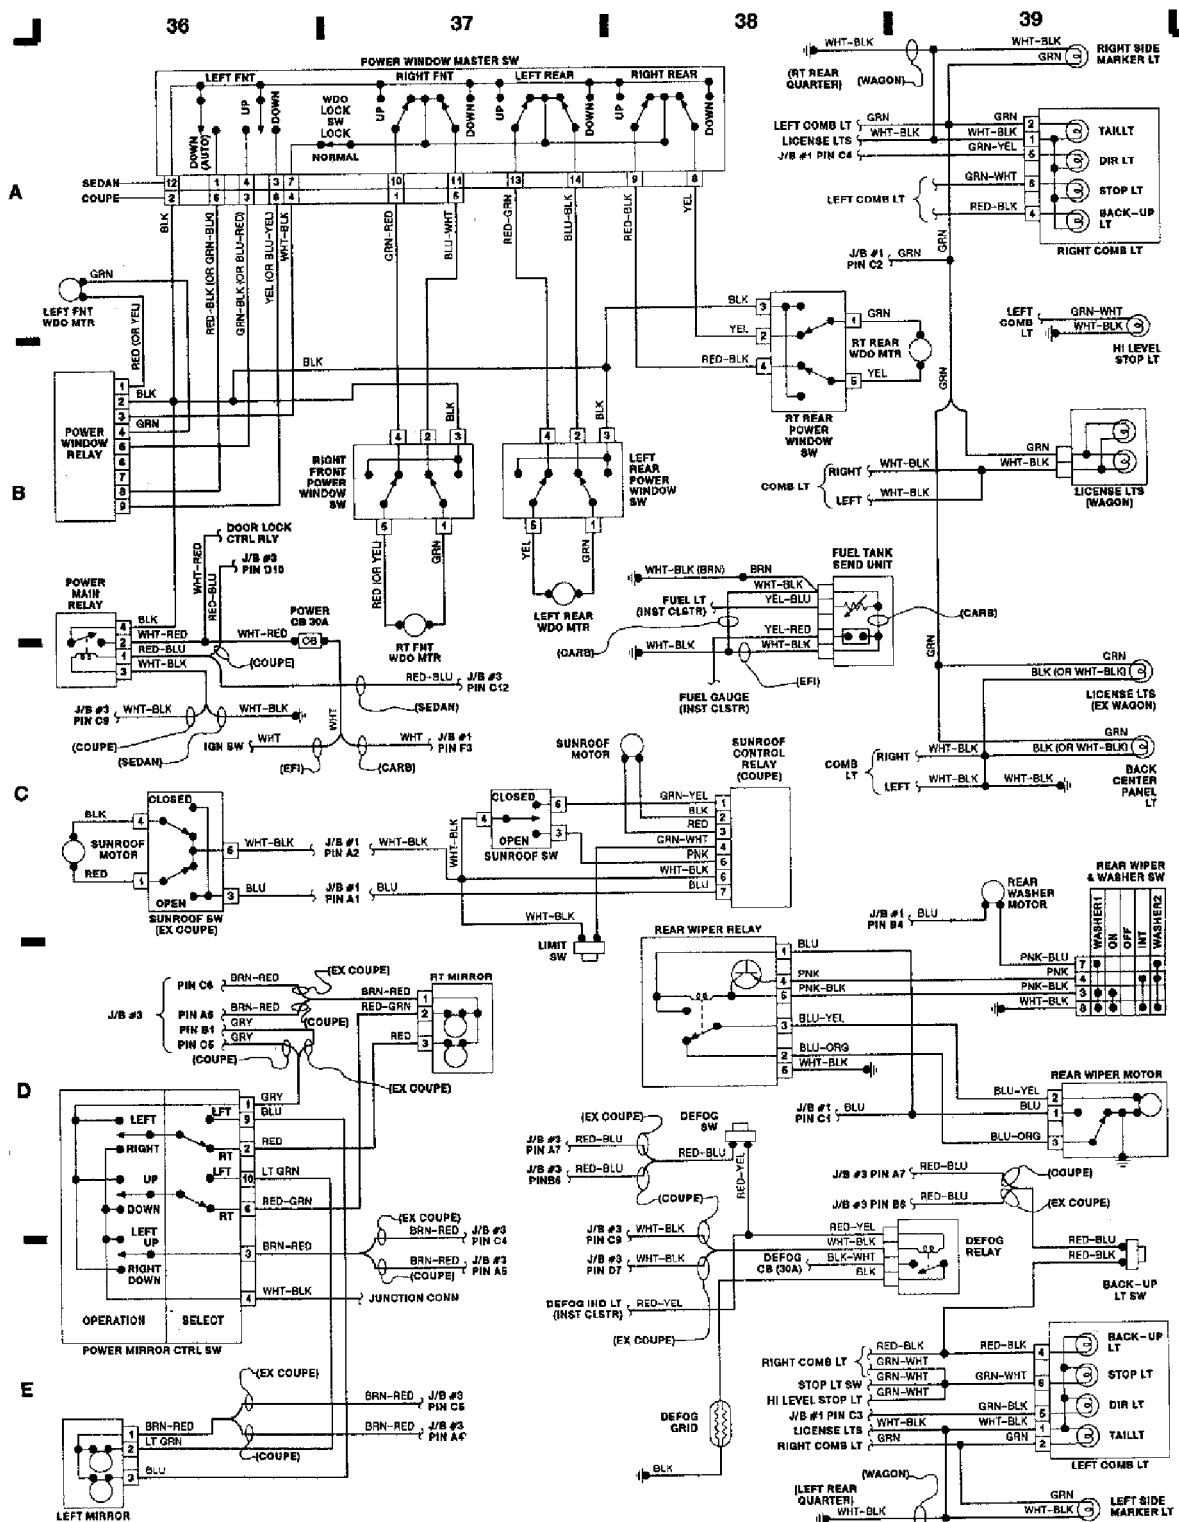

END OF ARTICLE