

01-15 EXHAUST SYSTEM

EXHAUST SYSTEM INSPECTION 01-15-1
EXHAUST SYSTEM REMOVAL/
INSTALLATION 01-15-1

Exhaust Manifold Insulator Removal
Note. 01-15-2
Exhaust Manifold Gasket Installation
Note. 01-15-2

01-15

EXHAUST SYSTEM INSPECTION

A5U011540000W01

1. Start the engine and inspect each exhaust system component for exhaust gas leakage.
 - If leakage is found, repair or replace if necessary.


EXHAUST SYSTEM REMOVAL/INSTALLATION

A5U011540000W02

Warning

- Hot engines and exhaust system can cause severe burns. Turn off the engine and wait until it and the exhaust system are cool before removing or installing the exhaust system.

1. Disconnect the negative battery cable.
2. Remove in the order indicated in the table.
3. Install in the reverse order of removal.

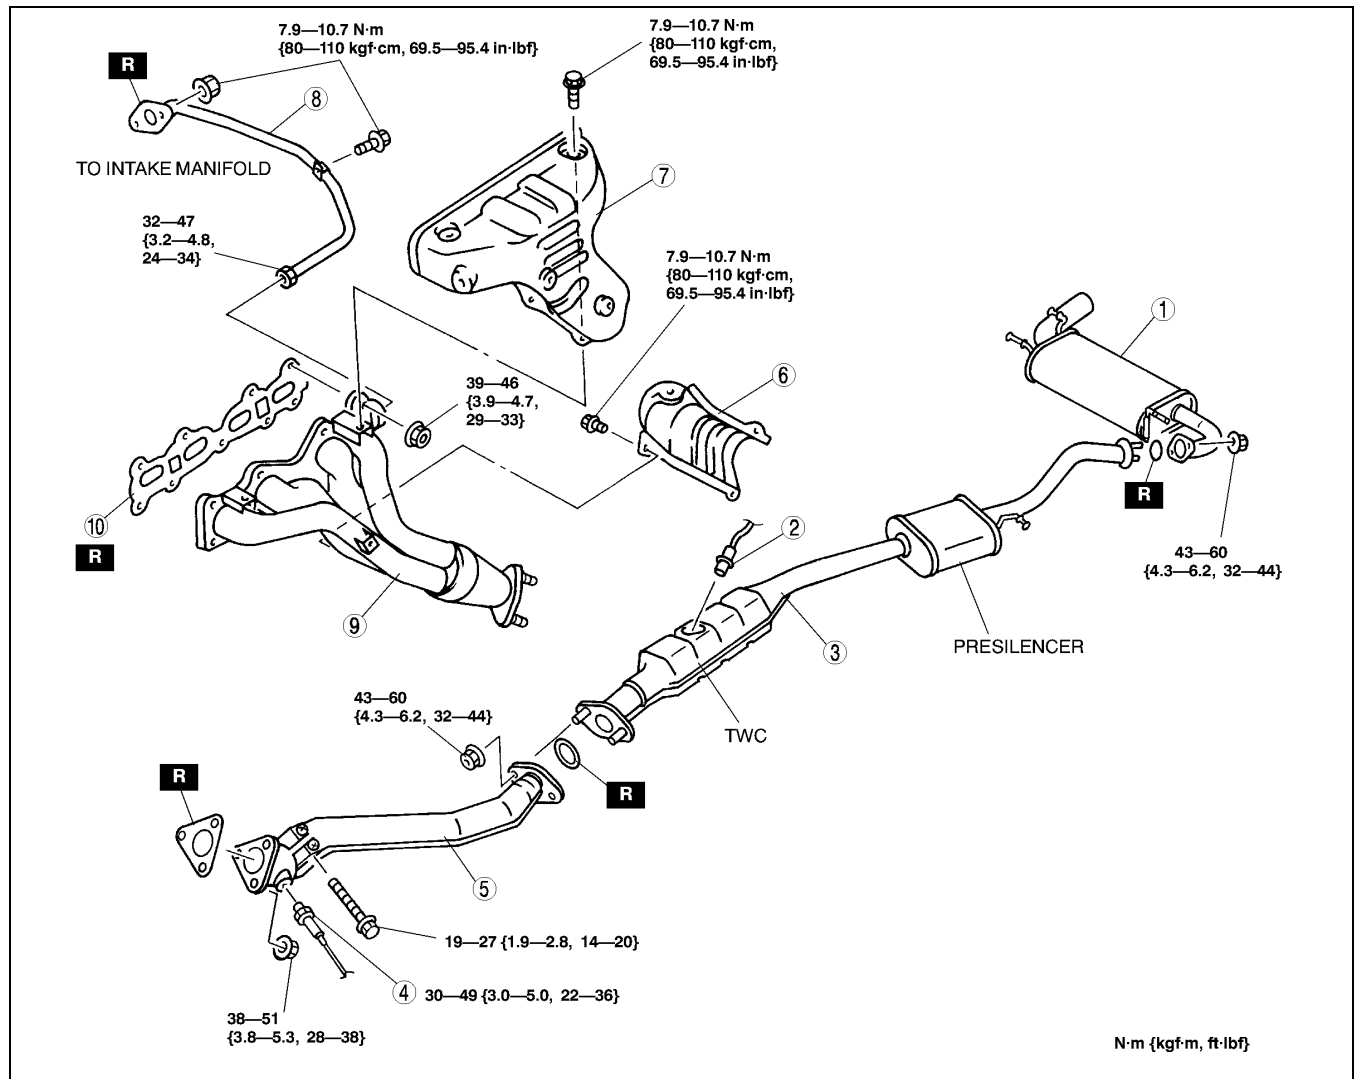

Z5U115W101

1	Main silencer
2	HO2S (Rear)
3	Middle pipe

4	HO2S (Front)
5	Front pipe

EXHAUST SYSTEM

6	Exhaust manifold insulator No.1 (See 01-15-2 Exhaust Manifold Insulator Removal Note)
7	Exhaust manifold insulator No.2
8	EGR pipe
9	Exhaust manifold

10	Exhaust manifold gasket (See 01-15-2 Exhaust Manifold Gasket Installation Note)
----	--

Exhaust Manifold Insulator Removal Note

1. Remove the windshield washer tank with the washer tank connector connected before removing the exhaust manifold insulator. (See 09-19-5 WINDSHIELD WASHER TANK REMOVAL/INSTALLATION.)

Exhaust Manifold Gasket Installation Note

1. To install the exhaust manifold gasket, make sure that the convex side of the gasket is facing to the exhaust manifold side.

