

09-11 DOORS AND LIFTGATE

DOOR REMOVAL/INSTALLATION 09-11-1
 Connector Removal Note 09-11-1
 Connector Installation Note 09-11-1

DOOR DISASSEMBLY/ASSEMBLY 09-11-2
DOOR ADJUSTMENT 09-11-3


DOOR REMOVAL/INSTALLATION

A5U091158010W01

1. Disconnect the negative battery cable.
2. Remove the front fender panel. (See 09-10-6 FRONT FENDER PANEL REMOVAL/INSTALLATION.)
3. Remove the door speaker. (See 09-20-3 DOOR SPEAKER REMOVAL/INSTALLATION.)
4. Remove in the order indicated in the table.

1	Connector (See 09-11-1 Connector Removal Note) (See 09-11-1 Connector Installation Note)
2	Checker pin
3	Door hinge
4	Door
5	Checker


5. Install in the reverse order of removal.
6. Adjust the door. (See 09-11-3 DOOR ADJUSTMENT.)

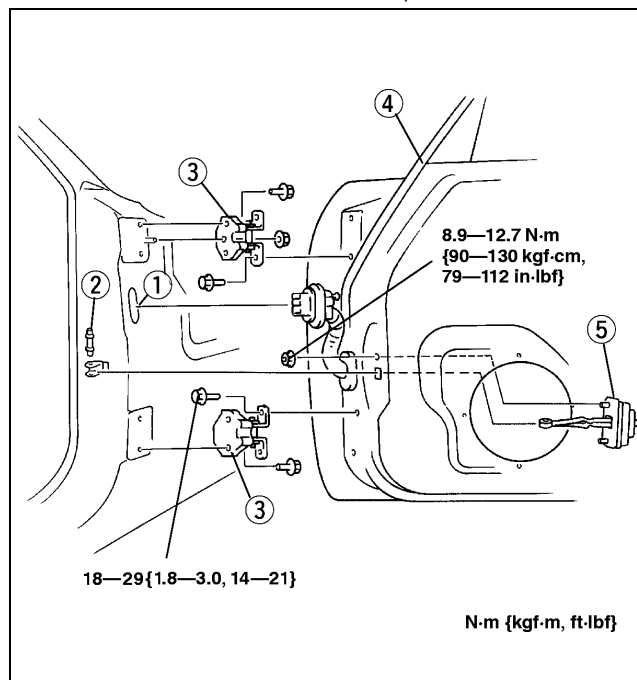

Y5U911WA0

Connector Removal Note

1. Pull the pin out.

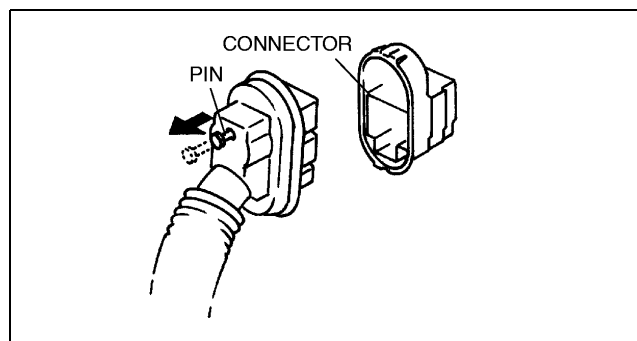

X5U911WA2

Connector Installation Note


1. Push the pin until it stops.
2. Connect the connector.
3. Repush the pin until it stops and locks the connector.

DOORS AND LIFTGATE

DOOR DISASSEMBLY/ASSEMBLY

A5U091158010W02

1. Lower or raise the front door glass so that the distance from the top of the front door glass at the molding is **225 mm {8.86 in.}**.
2. Disconnect the negative battery cable.
3. Remove the door trim. (See 09-17-6 DOOR TRIM REMOVAL/INSTALLATION.)
4. Disassemble in the order indicated in the table.
5. Assemble in the reverse order of disassembly.
6. Adjust the door glass. (See 09-12-2 DOOR GLASS ADJUSTMENT.)

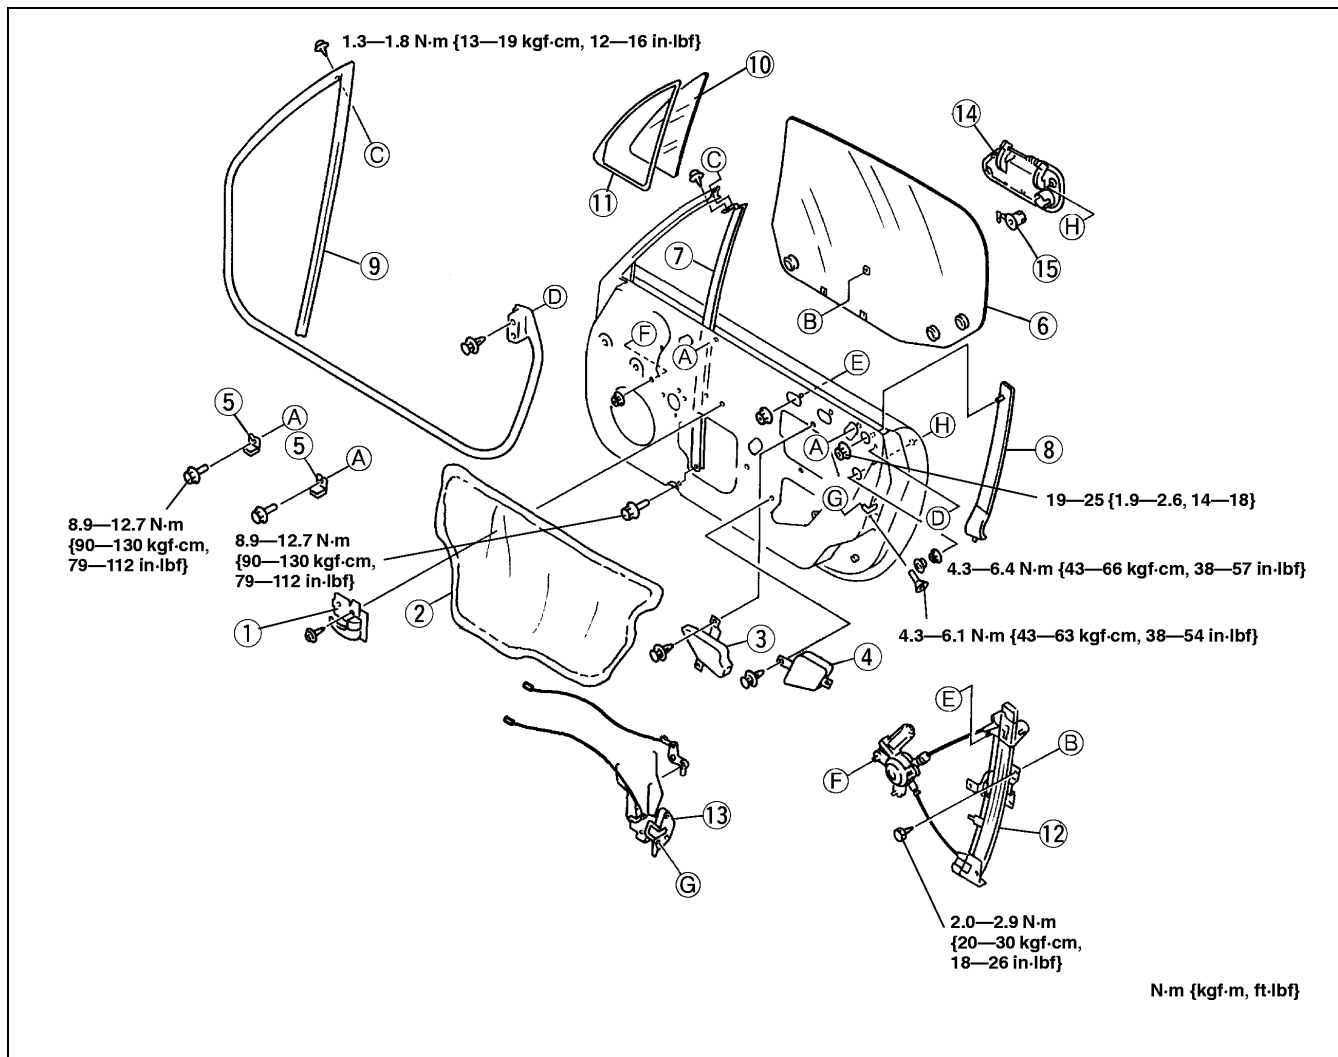

Z5U0911WA0

1	Inner handle
2	Door screen
3	Pad A
4	Pad B
5	Glass stopper
6	Door glass
7	Front glass guide
8	Rear glass guide

9	Door weatherstrip
10	Door quarter glass
11	Door quarter glass weatherstrip
12	Power window regulator
13	Door lock
14	Outer handle
15	Door key cylinder

DOORS AND LIFTGATE

DOOR ADJUSTMENT

1. Measure the clearance between the door and body.
 - If not as specified, loosen the door hinge installation bolts or the door lock striker installation screws, and reposition the door.

Clearance

a: 4.0—6.0 mm {0.16—0.23 in}

b: -1.0—1.0 mm {-0.03—0.03 in}

2. Tighten the bolts or screws.

