

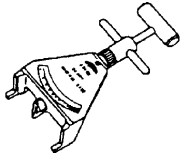

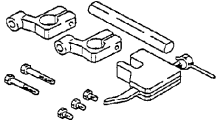
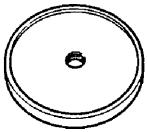

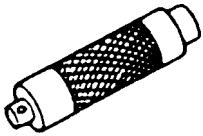
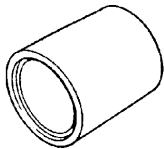

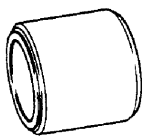


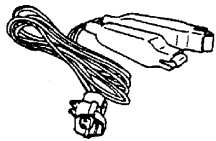
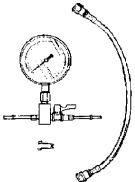
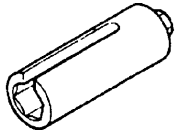
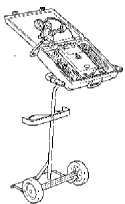

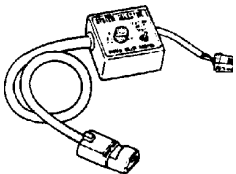
# 01-60 SERVICE TOOLS

ENGINE SST ..... 01-60-1

## ENGINE SST

A5U016001001W01

01-60

<p>49 9200 020A</p> <p>Belt tension gauge</p> 	<p>49 D011 102</p> <p>Crankshaft lock tool</p> 	<p>49 T012 0A0A</p> <p>Tappet holder set</p> 
<p>49 W033 105</p> <p>Oil seal installer</p> 	<p>49 G030 795</p> <p>Oil seal installer</p> 	<p>49 G030 797</p> <p>Handle (Part of 49 G030 795)</p> 
<p>49 T028 302</p> <p>Dust boot installer</p> 	<p>49 G014 001</p> <p>Oil filter wrench</p> 	<p>49 B014 001</p> <p>Oil seal installer</p> 
<p>49 0187 280A</p> <p>Oil pressure gauge</p> 	<p>49 9200 145</p> <p>Radiator cap tester adapter set</p> 	<p>49 L018 901</p> <p>Injection checker</p> 
<p>49 N013 1A0C</p> <p>Fuel pressure gauge set</p> 	<p>49 H018 001</p> <p>Knock sensor wrench</p> 	<p>MZ254AT3641</p> <p>Evaporative emission system tester</p> 
<p>49 N013 103</p> <p>Remover</p> 	<p>49 B019 9A0</p> <p>System selector</p> 	<p>418FS475</p> <p>WDS</p> 