


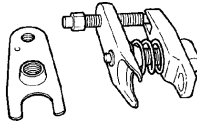
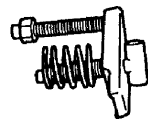












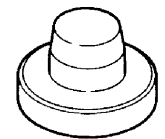

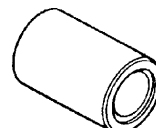



06-60 SERVICE TOOLS

STEERING SST..... 06-60-1




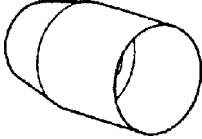
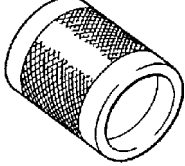

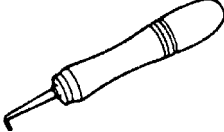

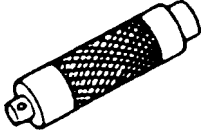
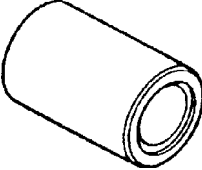
STEERING SST

A5U066001034W01

<p>49 1243 785A</p> <p>Boot installer</p> 	<p>49 0180 510B</p> <p>Preload measuring attachment</p> 	<p>49 D032 316</p> <p>Protractor</p> 
<p>49 T028 3A0</p> <p>Ball joint puller set</p> 	<p>49 T028 303</p> <p>Body (Part of 49 T028 3A0)</p> 	<p>49 T028 304</p> <p>Attachment (Part of 49 T028 3A0)</p> 
<p>49 B032 317</p> <p>Bearing & oil seal remover</p> 	<p>49 1232 670B</p> <p>Power steering gauge set</p> 	<p>49 1232 672A</p> <p>Gauge (Part of 49 1232 670B)</p> 
<p>49 1232 673</p> <p>Valve body (Part of 49 1232 670B)</p> 	<p>49 H002 671</p> <p>Power steering gauge adapter</p> 	<p>49 B032 304</p> <p>Power steering gauge adapter</p> 
<p>49 B032 308</p> <p>Rod seal remover body</p> 	<p>49 B032 318</p> <p>Rod seal guide</p> 	<p>49 B032 319</p> <p>Rod seal protector body</p> 
<p>49 B032 313</p> <p>Outer box protector</p> 	<p>49 B032 320</p> <p>Wrench</p> 	<p>49 B032 331</p> <p>Oil seal installer</p> 
<p>49 B001 797</p> <p>Handle</p> 	<p>49 N034 201</p> <p>Oil seal installer</p> 	<p>49 F032 303</p> <p>Handle</p> 

06-60

SERVICE TOOLS

<p>49 N032 320</p> <p>Oil seal installer</p> 	<p>49 G032 317</p> <p>Hose</p> 	<p>49 B032 3A1</p> <p>Adapter set</p> 
<p>49 E032 305</p> <p>Slipper seal protector</p> 	<p>49 E032 306</p> <p>Slipper seal front</p> 	<p>49 B032 305</p> <p>Power steering pump holder</p> 
<p>49 0208 701A</p> <p>Boot air out tool</p> 	<p>49 H032 321A</p> <p>Hexagon wrench</p> 	<p>49 G030 797</p> <p>Handle</p> 
<p>49 8038 785A</p> <p>Dust boot installer</p> 	<p>—</p>	<p>—</p>