
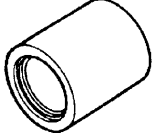

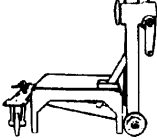

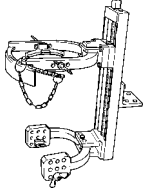

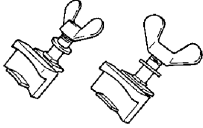

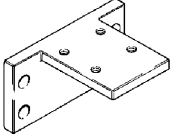



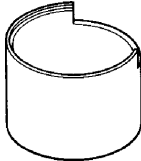
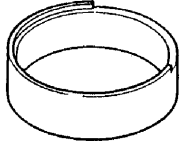



# 02-60 SERVICE TOOLS

SUSPENSION SST ..... 02-60-1

## SUSPENSION SST

A5U026001013W01

<p>49 0180 510B</p> <p>Preload measuring attachment</p> 	<p>49 H028 301</p> <p>Dust boot installer</p> 	<p>49 0259 770B</p> <p>Flare nut wrench</p> 
<p>49 0107 680A</p> <p>Engine stand</p> 	<p>49 T034 1A0</p> <p>Coil spring compressor</p> 	<p>49 T034 101</p> <p>Spring compressor (Part of 49 T034 1A0)</p> 
<p>49 T034 102</p> <p>Stand (Part of 49 T034 1A0)</p> 	<p>49 T034 103</p> <p>Hook (Part of 49 T034 1A0)</p> 	<p>49 T034 104</p> <p>Support (Part of 49 T034 1A0)</p> 
<p>49 T034 105</p> <p>Attachment</p> 	<p>49 T028 3A0</p> <p>Ball joint puller set</p> 	<p>49 T028 303</p> <p>Body (Part of 49 T028 3A0)</p> 
<p>49 T028 304</p> <p>Attachment (Part of 49 T028 3A0)</p> 	<p>49 B034 201</p> <p>Support block</p> 	<p>49 N028 201</p> <p>Support block</p> 
<p>49 0118 850C</p> <p>Ball joint puller</p> 	<p>—</p>	<p>—</p>

02-60