


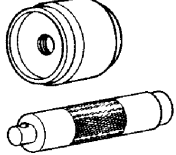

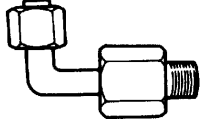
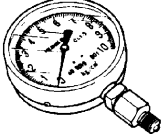


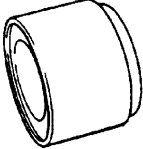



05-60 SERVICE TOOLS

TRANSMISSION/TRANSAXLE SST. . . . 05-60-1

TRANSMISSION/TRANSAXLE SST

A5U056001024W01

<p>49 0259 770B</p> <p>Flare nut wrench</p> 	<p>49 E011 1A0</p> <p>Ring gear brake set</p> 	<p>49 SE01 310A</p> <p>Clutch disc centering tool</p> 
<p>49 B025 0A0</p> <p>Dust seal installer set</p> 	<p>49 0378 400C</p> <p>Oil pressure gauge set</p> 	<p>49 HD64 406A</p> <p>Adapter</p> 
<p>49 B019 901B</p> <p>Oil pressure gauge</p> 	<p>49 0877 435</p> <p>Wrench</p> 	<p>49 S019 005</p> <p>Oil seal remover</p> 
<p>49 S019 006</p> <p>Oil seal installer</p> 	<p>418FS475</p> <p>WDS</p> 	<p>—</p>

05-60