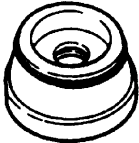
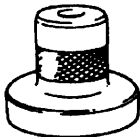



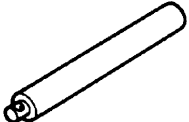

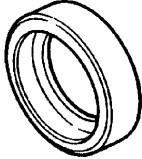

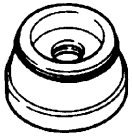
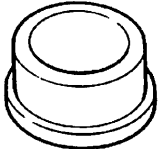

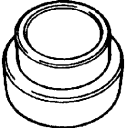



03-60 SERVICE TOOLS

DRIVELINE/AXLE SST 03-60-1


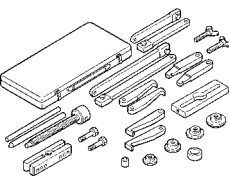

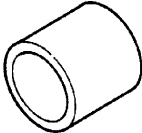

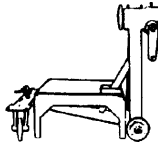
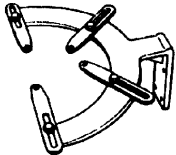


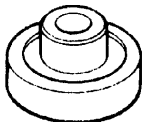
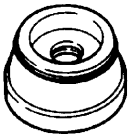

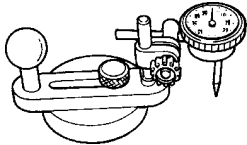


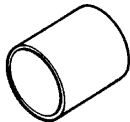

DRIVELINE/AXLE SST

A5U036001018W01

<p>49 F027 007</p> <p>Attachment ø72</p> 	<p>49 V001 795</p> <p>Oil seal installer</p> 	<p>49 T028 3A0</p> <p>Ball joint puller set</p> 
<p>49 T028 303</p> <p>Body (Part of 49 T028 3A0)</p> 	<p>49 T028 304</p> <p>Attachment (Part of 49 T028 3A0)</p> 	<p>49 F026 103</p> <p>Wheel hub puller</p> 
<p>49 B026 1A0</p> <p>Wheel hub puller</p> 	<p>49 G033 102</p> <p>Handle (Part of 49 B026 1A0)</p> 	<p>49 G030 727</p> <p>Attachment A (Part of 49 B026 1A0)</p> 
<p>49 G030 795</p> <p>Oil seal installer</p> 	<p>49 G030 797</p> <p>Handle (Part of 49 G030 795)</p> 	<p>49 0636 145</p> <p>Fan pulley boss puller</p> 
<p>49 G033 107A</p> <p>Dust cover installer</p> 	<p>49 F027 0A1</p> <p>Bearing installer set</p> 	<p>49 F027 005</p> <p>Attachment ø62 (Part of 49 F027 0A1)</p> 
<p>49 F027 009</p> <p>Attachment ø68 & 77 (Part of 49 F027 0A1)</p> 	<p>49 B034 201</p> <p>Support block</p> 	<p>49 D017 2A1</p> <p>Bearing installer set</p> 
<p>49 F401 337A</p> <p>Attachment C (Part of 49 D017 2A1)</p> 	<p>49 F401 331</p> <p>Body (Part of 49 D017 2A1)</p> 	<p>49 G030 338</p> <p>Attachment E (Part of 49 D017 2A1)</p> 

03-60

SERVICE TOOLS

<p>49 S120 710</p> <p>Coupling flange holder</p> 	<p>49 0839 425C</p> <p>Bearing puller set</p> 	<p>49 0259 440</p> <p>Main shaft holder</p> 
<p>49 U027 003</p> <p>Oil seal installer</p> 	<p>49 0259 720</p> <p>Differential side bearing adjusting nut wrench</p> 	<p>49 0107 680A</p> <p>Engine stand</p> 
<p>49 M005 561</p> <p>Differential carrier hanger</p> 	<p>49 N034 213</p> <p>Rubber bushing installer</p> 	<p>49 B001 795</p> <p>Oil seal installer</p> 
<p>49 F027 004</p> <p>Attachment ø80</p> 	<p>49 F027 005</p> <p>Attachment ø62 (Part of 49 F027 0A1)</p> 	<p>49 F027 0A0</p> <p>Pinion height adjustment gauge set</p> 
<p>49 0727 570</p> <p>Pinion height gauge body (Part of 49 F027 0A0)</p> 	<p>49 8531 565</p> <p>Pinion model</p> 	<p>49 8531 567</p> <p>Collar A (Part of 49 8531 565)</p> 
<p>49 H027 001</p> <p>Collar</p> 	<p>49 0305 555</p> <p>Gauge block</p> 	<p>49 B025 006A</p> <p>Sensor rotor installer</p> 