
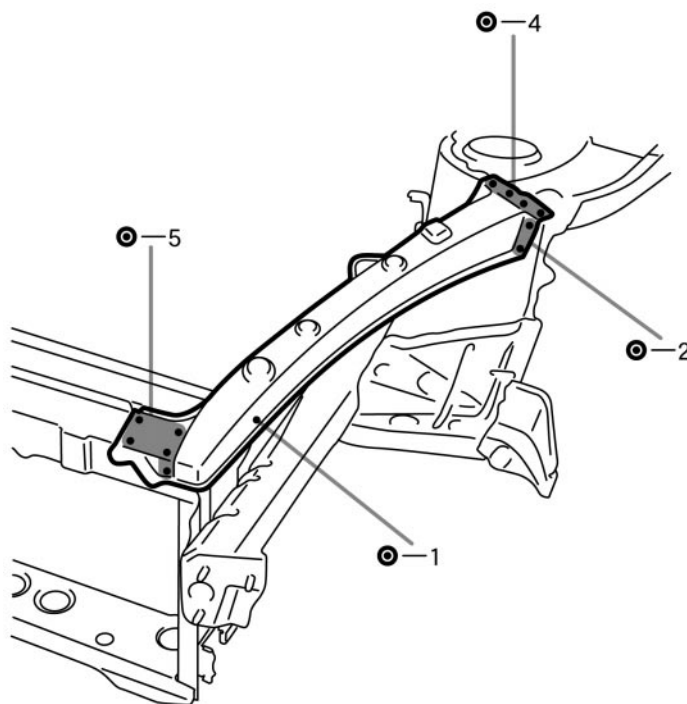
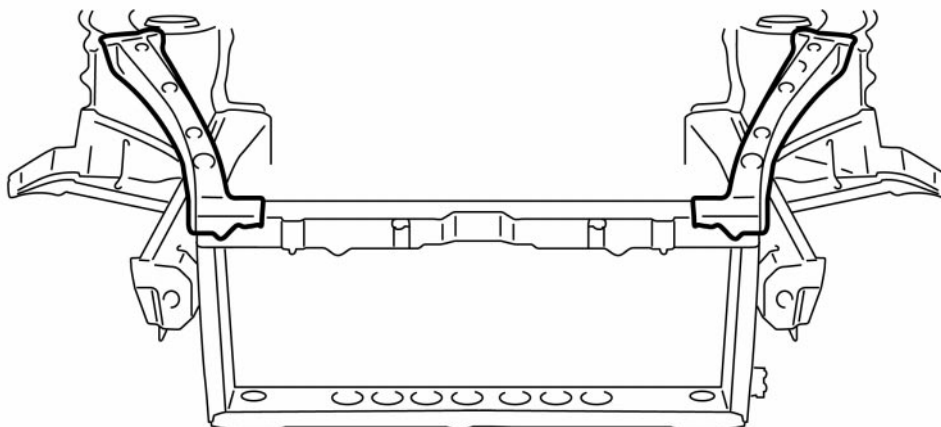


# RADIATOR UPPER SIDE SUPPORT (ASSY)

## REPLACEMENT

### 1. REMOVE RADIATOR UPPER SIDE SUPPORT

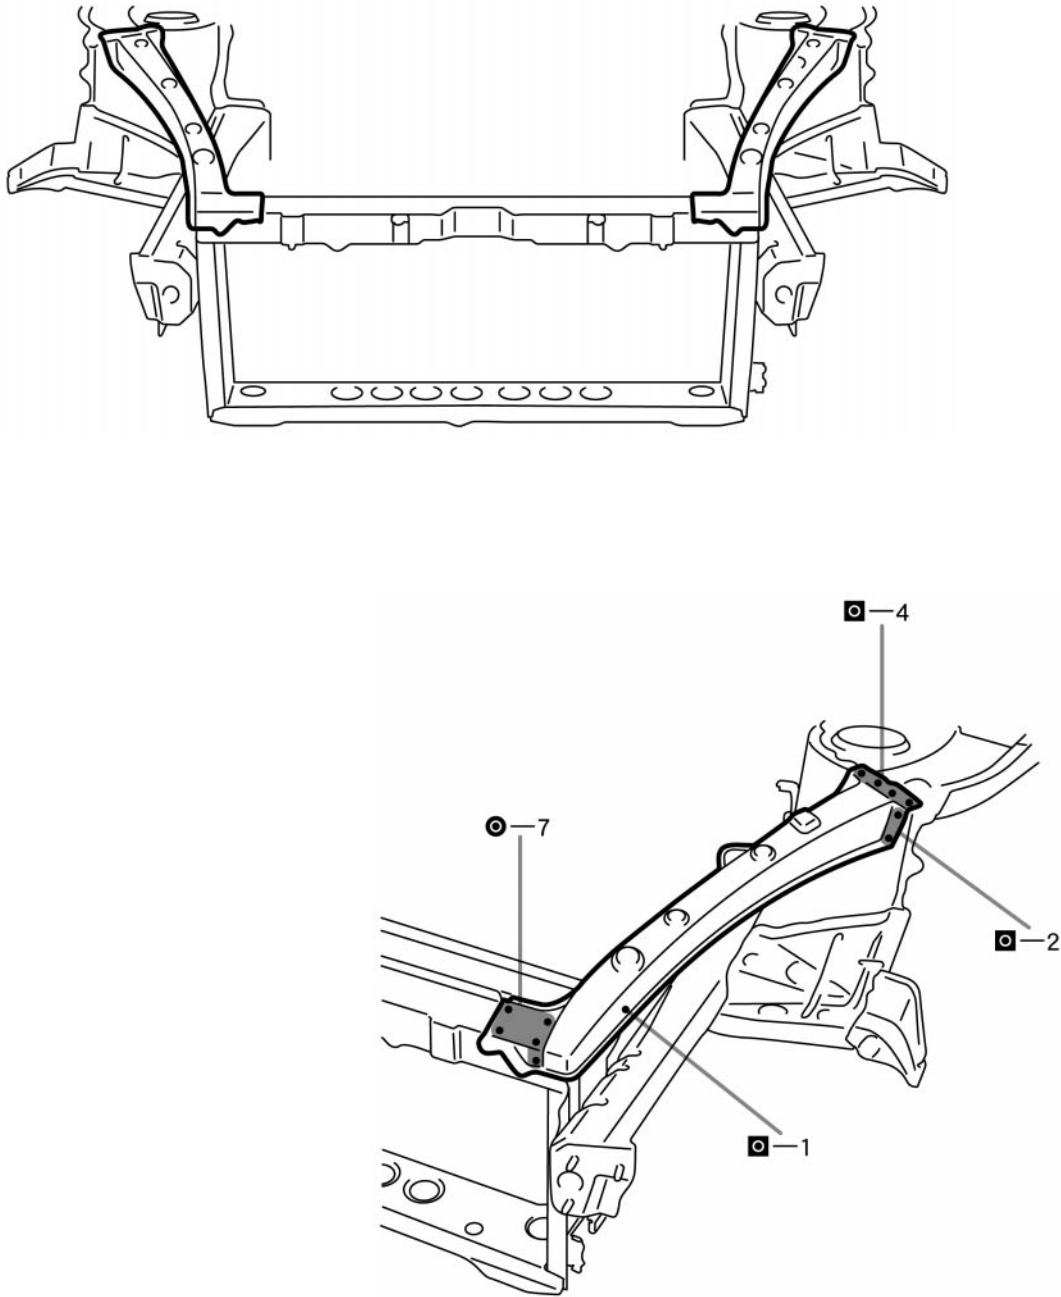

**2. INSTALL RADIATOR UPPER SIDE SUPPORT**

F10802A

- 3. MEASURING THE FRONT LUGGAGE COMPARTMENT DIMENSIONS (See page BP-95)**
- 4. APPLYING SEALER TO THE FRONT LUGGAGE COMPARTMENT (See page PC-1)**
- 5. APPLYING ANTI-RUST AGENT**
  - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.