
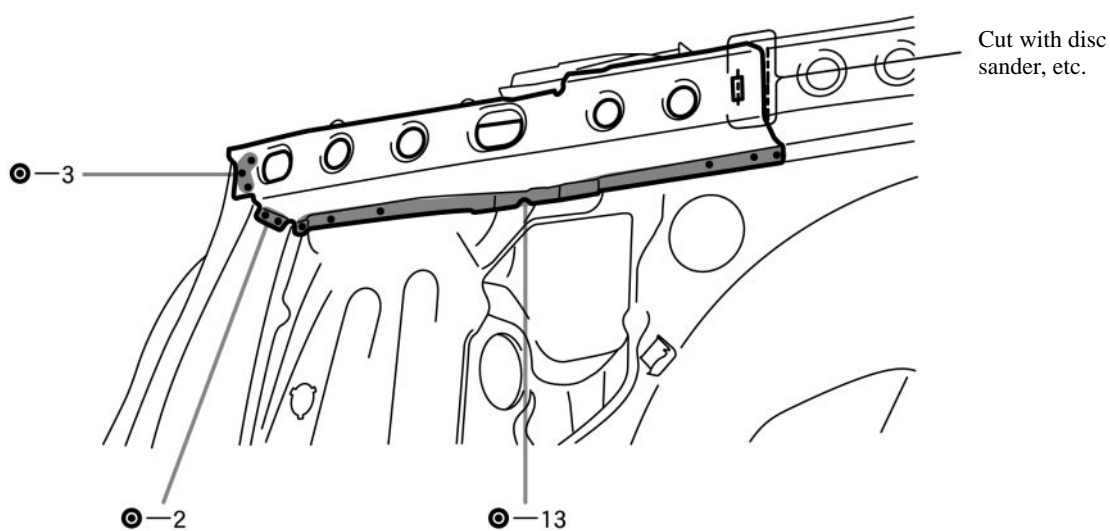
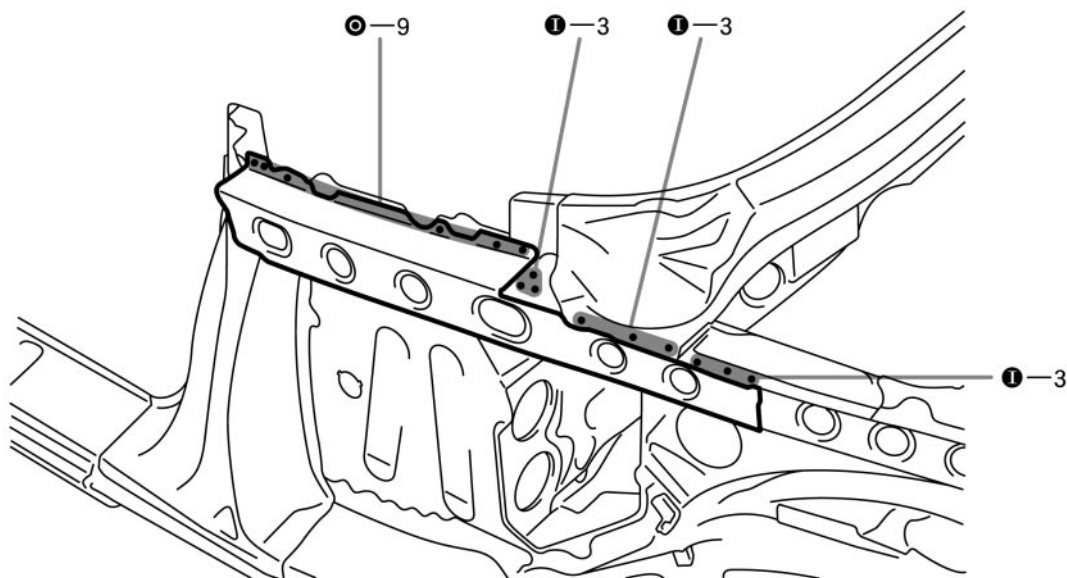
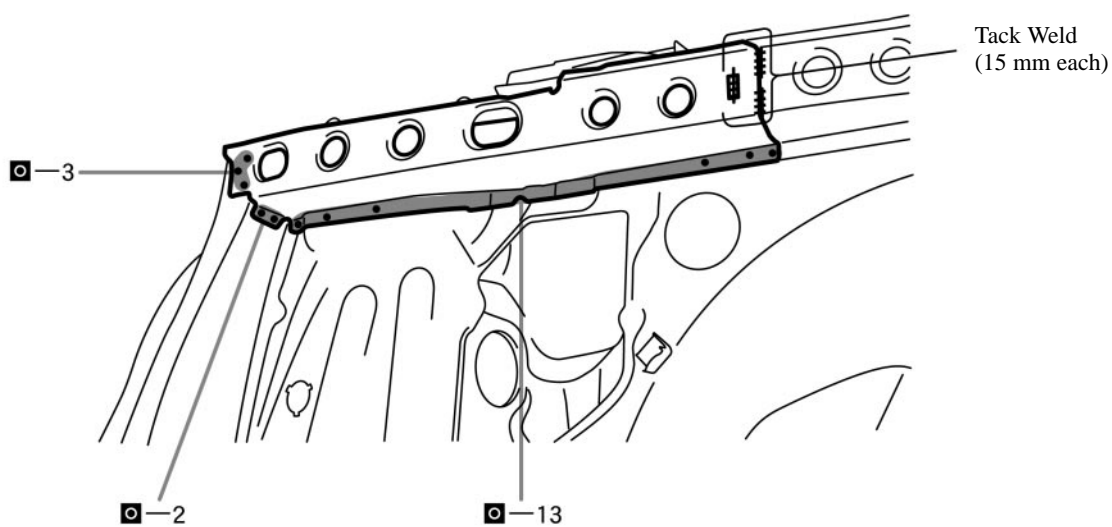


SIDE PANEL NO.2 REINFORCEMENT (ASSY)**REPLACEMENT****1. REMOVE SIDE PANEL NO.2 REINFORCEMENT**

2. INSTALL SIDE PANEL NO.2 REINFORCEMENT

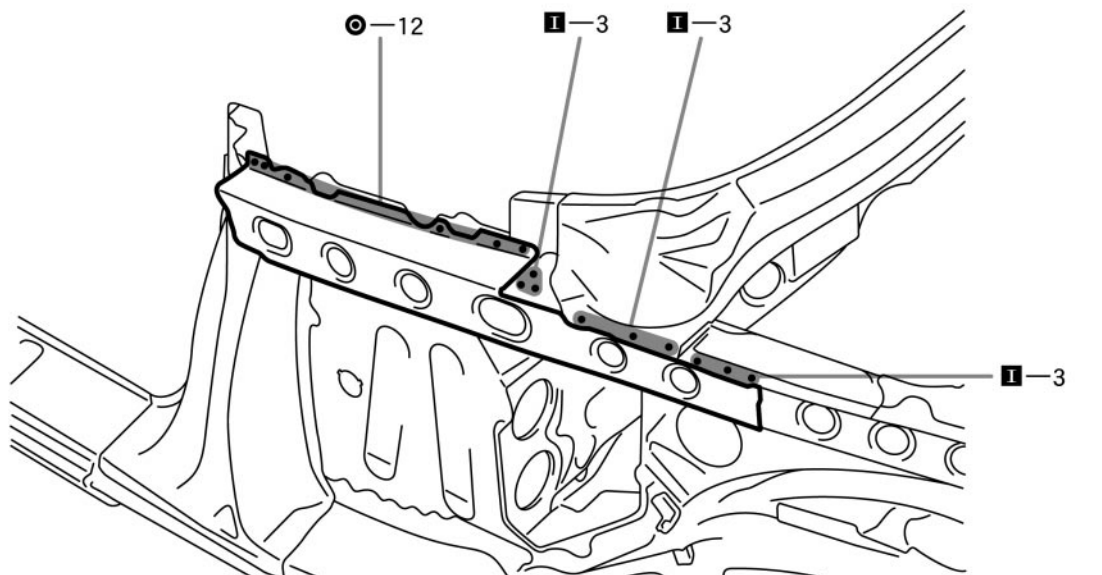

mm	in.
15	0.59

3. **APPLYING SEALER TO THE INSIDE OF THE VEHICLE (See page PC-1)**
4. **APPLYING SEALER TO THE ENGINE COMPARTMENT (See page PC-1)**
5. **APPLYING ANTI-RUST AGENT**
 - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.