


BODY PANEL SEALING AREAS


HINT:

1. Prior to applying body sealer, clean the area with a rag soaked in a grease, wax and silicone remover.
2. If weld-through primer was used, first wipe off any excess and coat with anti-corrosion primer before applying body sealer.
3. Wipe off excess body sealer with a rag soaked in a grease, wax and silicone remover.
4. If body sealer is damaged by peeling, cracks, etc., be sure to repair as necessary.


1. FRONT LUGGAGE COMPARTMENT

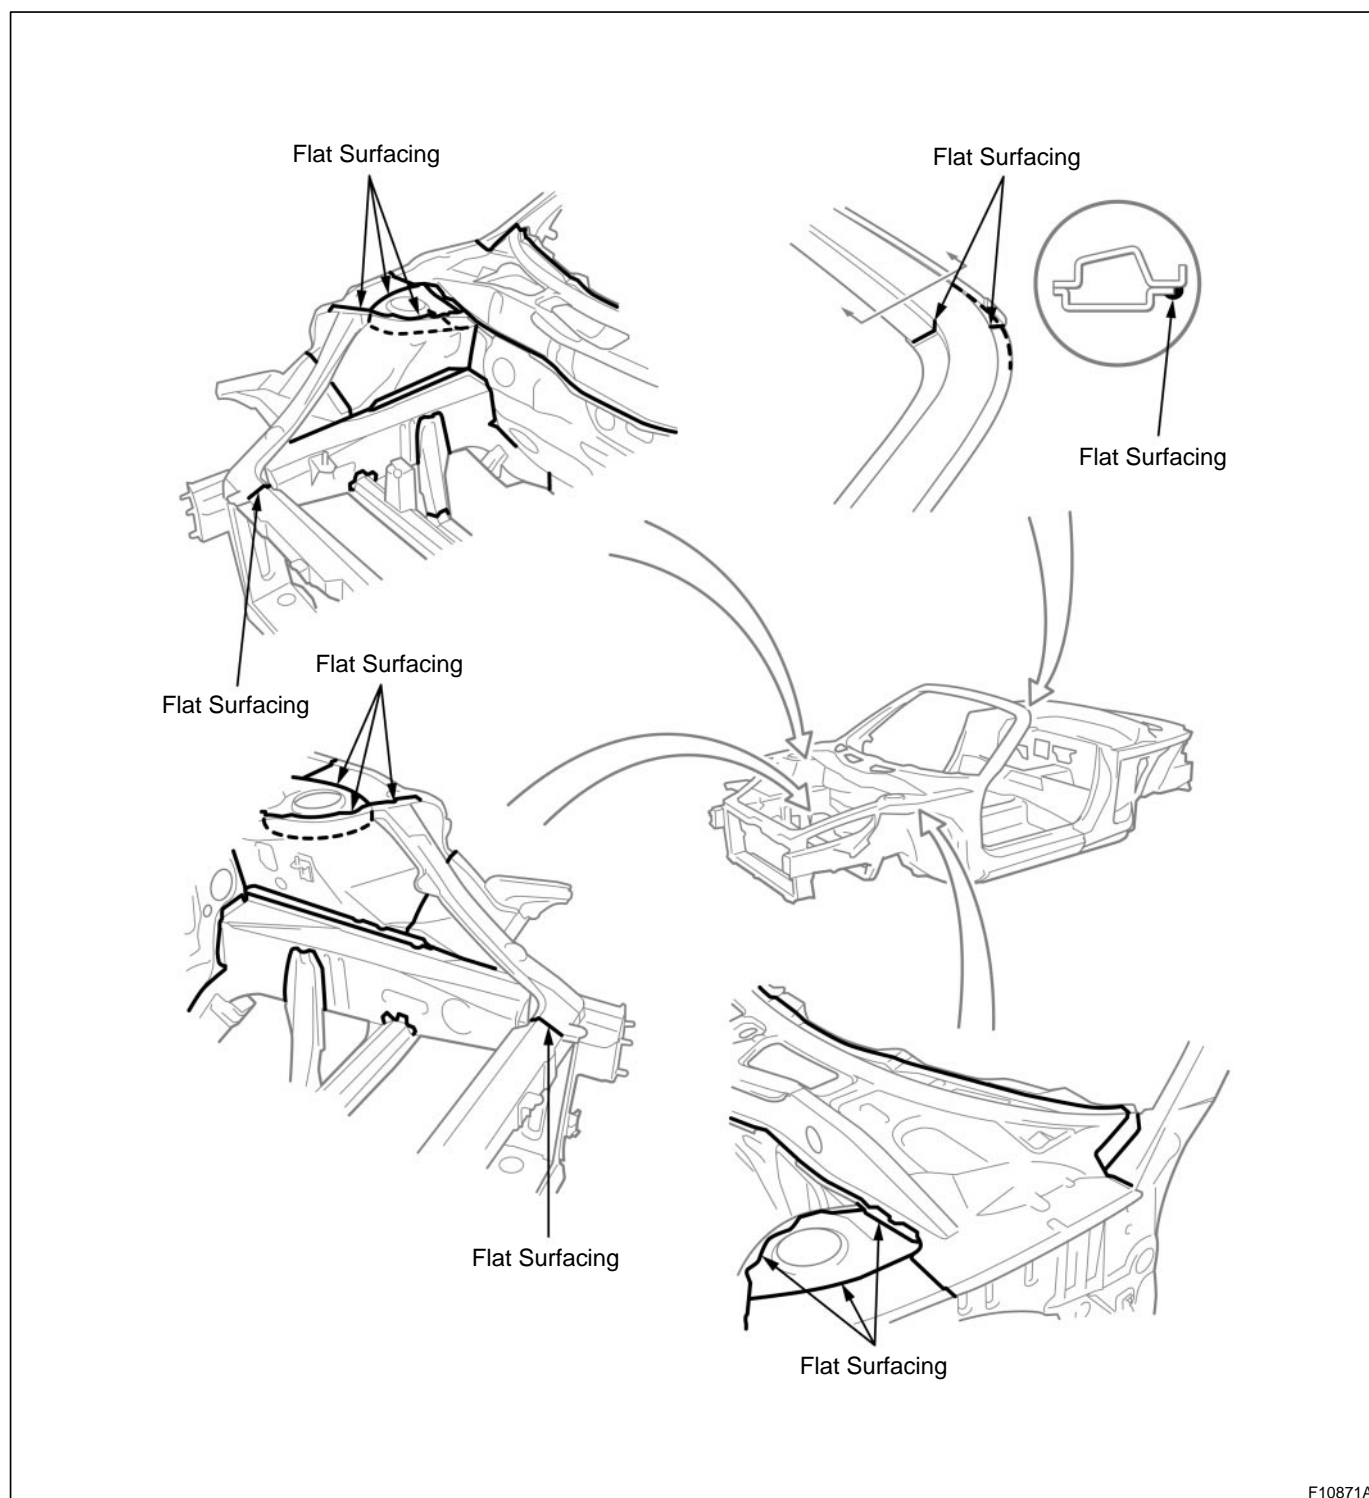

2. INSIDE

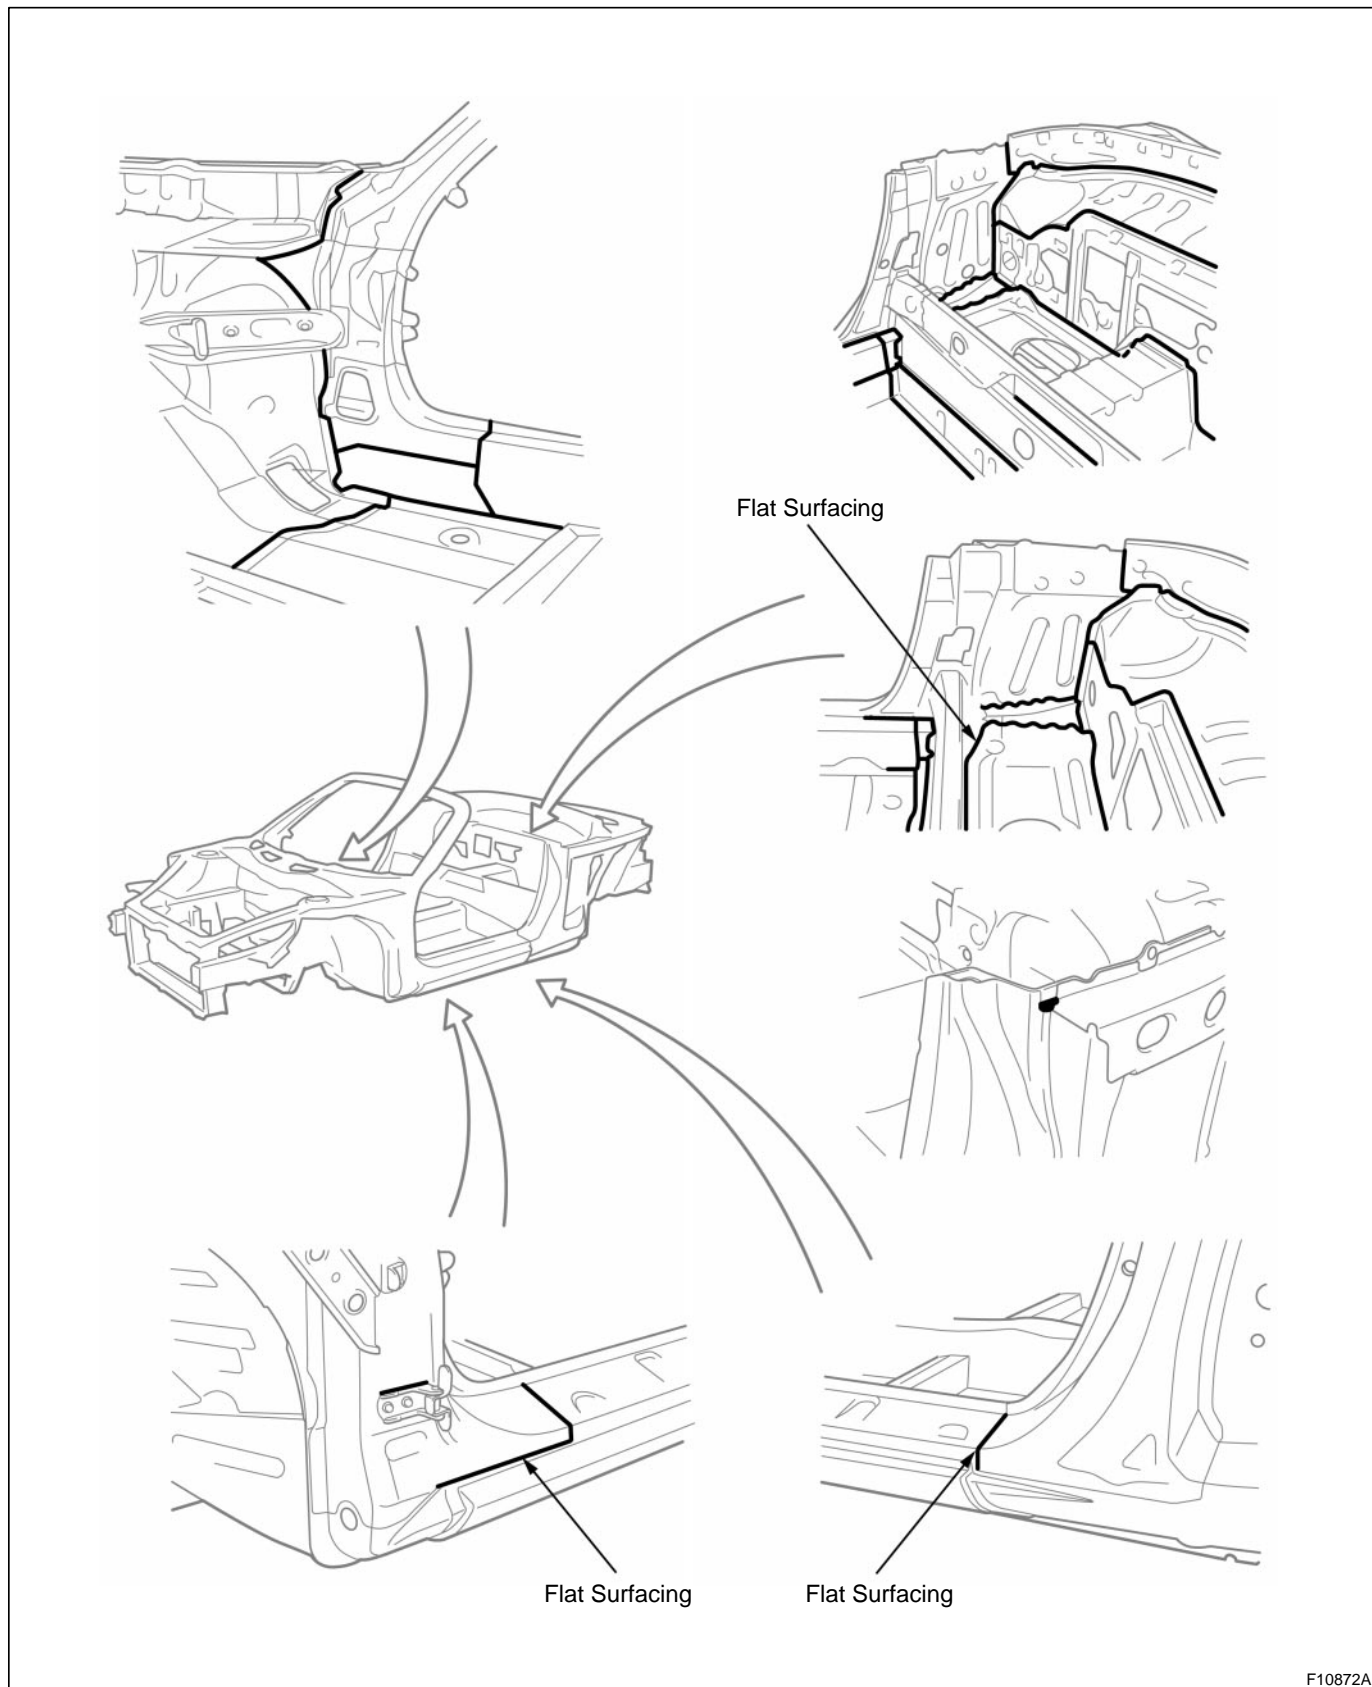



3. ENGINE COMPARTMENT

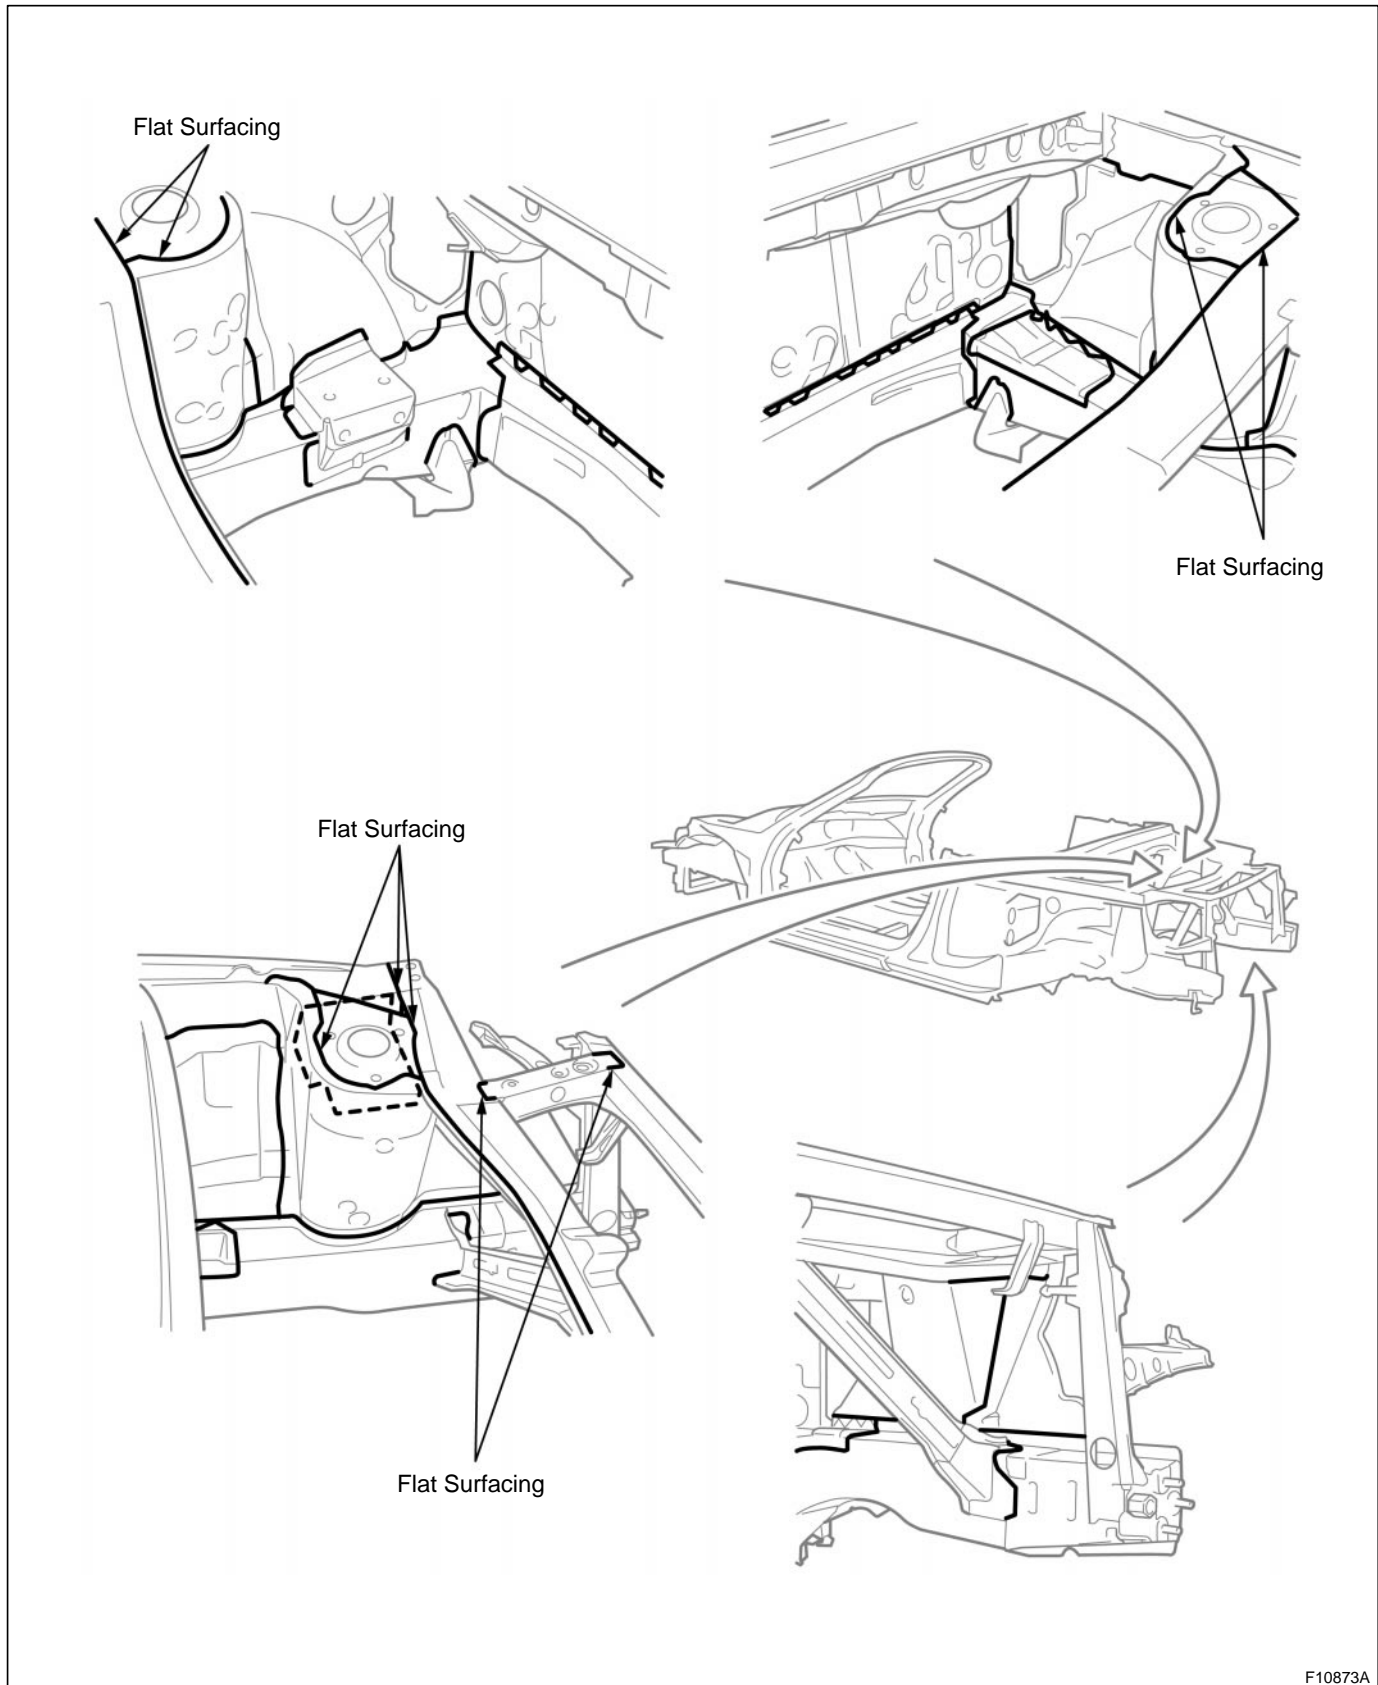


4. DOOR PARTS

- (a) Please be sure to apply body sealer to the places indicated below, if the quarter panel has been removed.

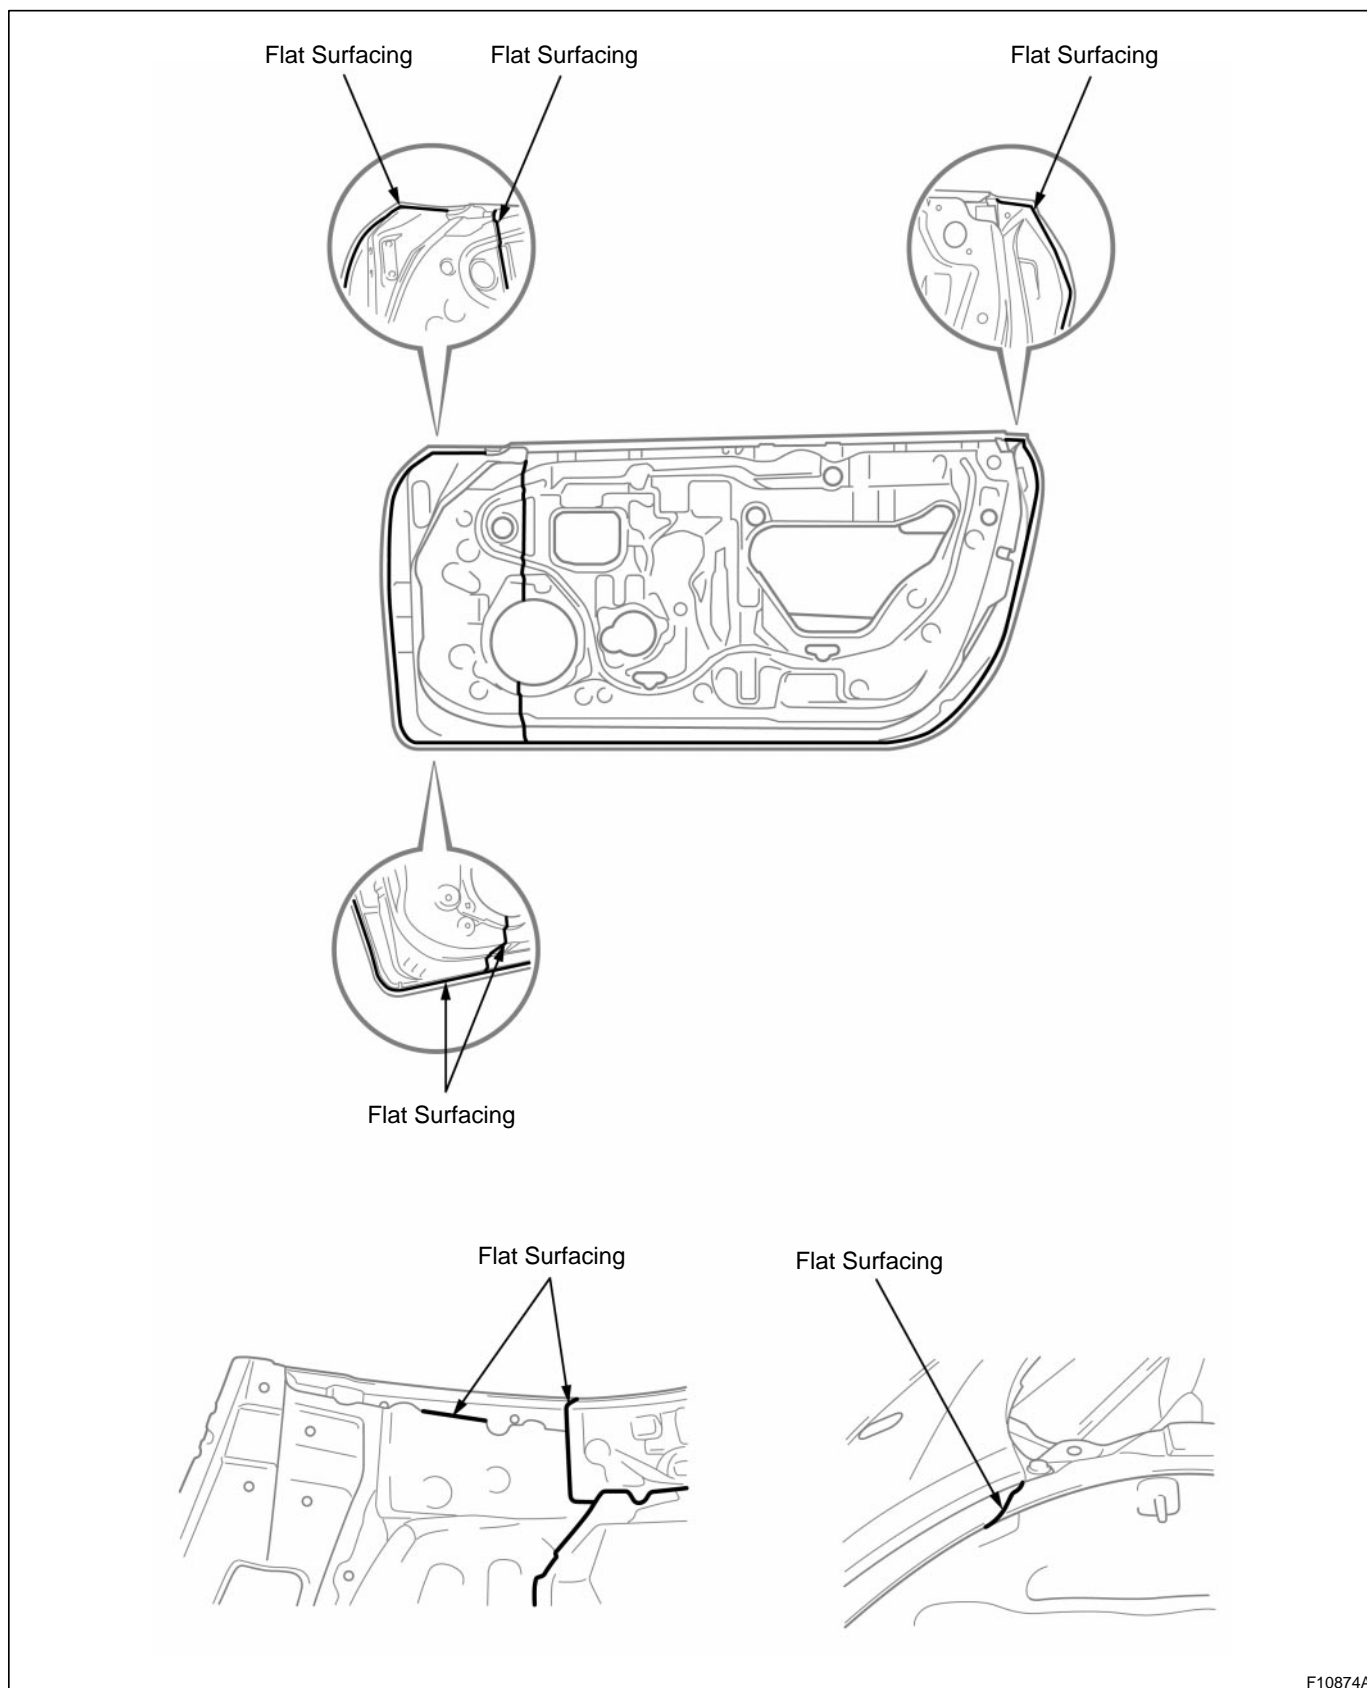

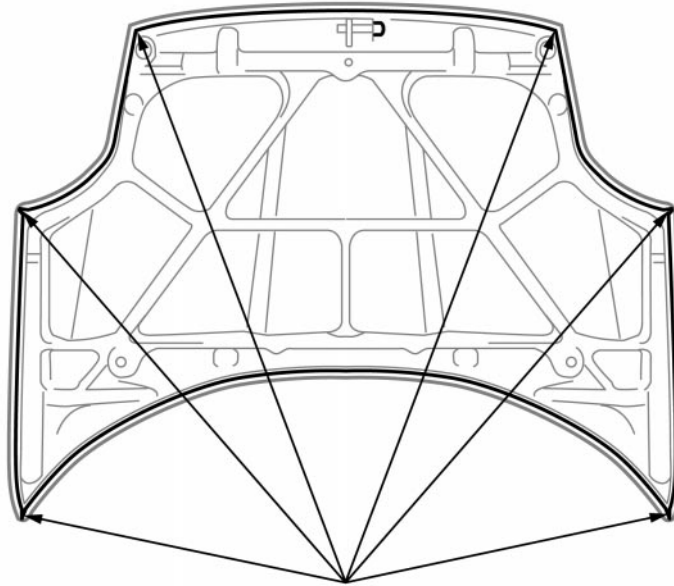

Flat Surfacing

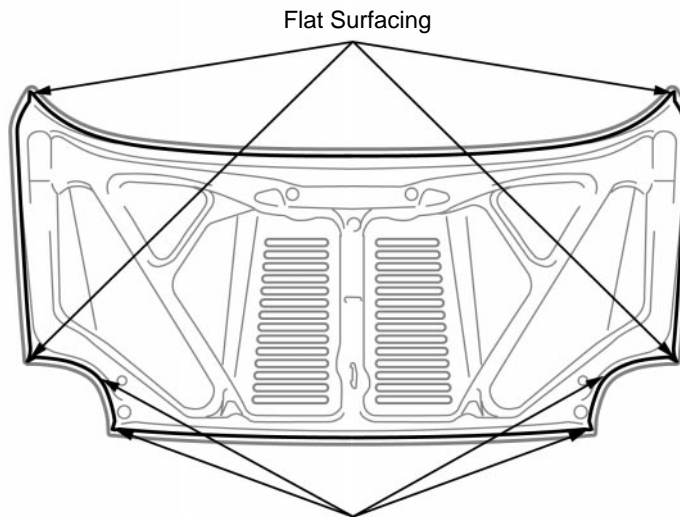

Flat Surfacing

Flat Surfacing