


## REMOVAL

1. REMOVE LUGGAGE COMPARTMENT TRIM BOX COVER
2. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

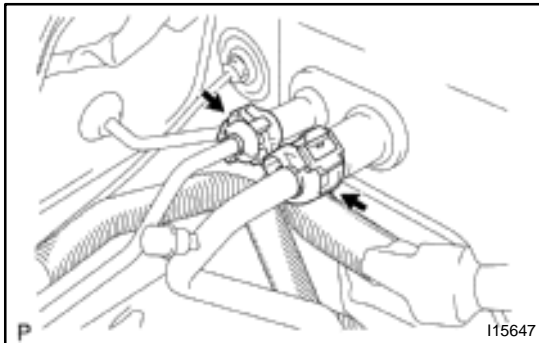


### 3. DISCONNECT LIQUID TUBE AND SUCTION HOSE

- (a) Using SST, remove the 2 piping clamps.

SST 09870-00015 (Suction tube)


09870-00025 (Liquid tube)

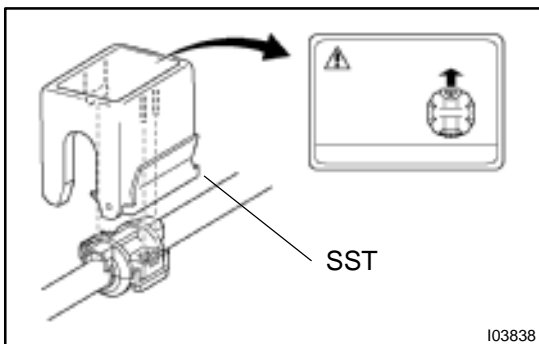

- (1) Insert SST to piping clamp.

#### HINT:

Confirm the direction of the piping clamp claw and SST using the illustration shown on the caution label.

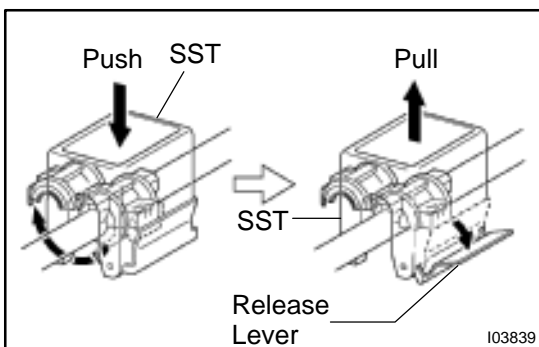


- (2) Push down SST and release the clamp lock.

#### NOTICE:

**Be careful not to deform the tubes, when pushing SST.**


- (3) Pull SST slightly and push the release lever, then remove the piping clamp with SST.
- (4) Remove the piping clamp from SST.
- (b) Disconnect the both tubes.

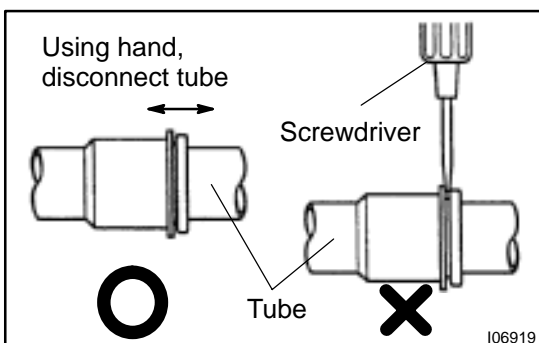

#### NOTICE:


- Do not use tools like screwdrivers to remove the tube.
- Cap the open fittings immediately to keep moisture or dirt out of the system.

### 4. REMOVE GLOVE COMPARTMENT DOOR

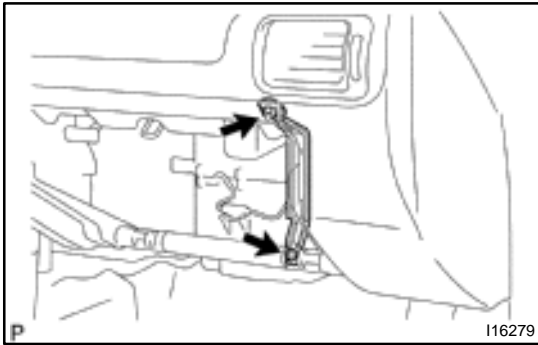

## 5. REMOVE COOLING UNIT


- (a) Remove the screw, nut and No. 1 instrument panel lower bracket.

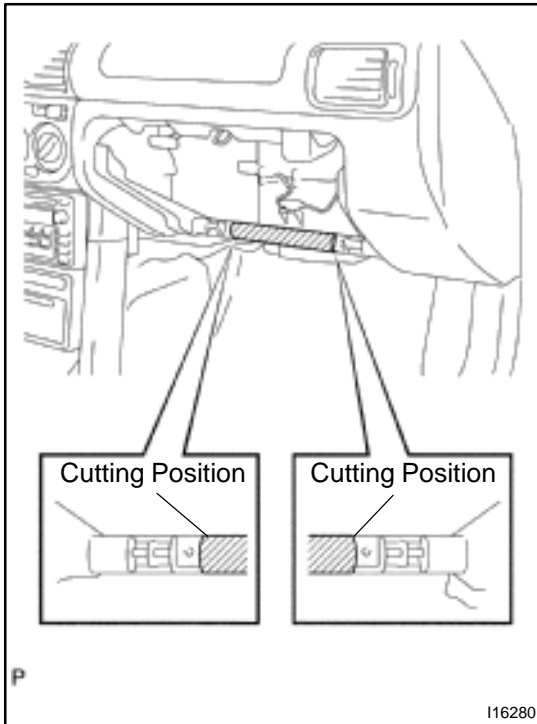

- (b) Cut off the instrument panel as shown in the illustration.  
HINT:

After cutting off the instrument panel, file the cutting face and smooth the surface.

- (c) Disconnect the blower resistor connector.  
(d) Disconnect the thermistor connector.

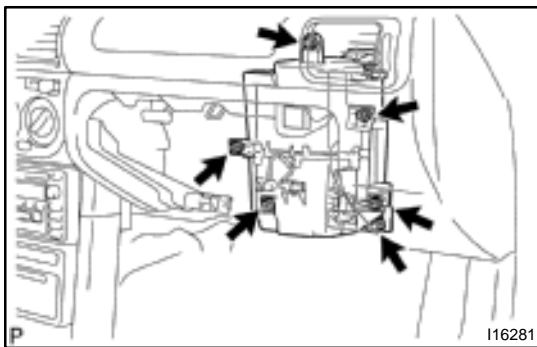

- (e) Remove the 4 screws, 2 nuts and cooling unit.