


Tc Terminal Circuit

CIRCUIT DESCRIPTION


Connecting between terminals Tc and CG of the DLC3 causes the ABS ECU to display the DTC by flashing the ABS warning light.

WIRING DIAGRAM

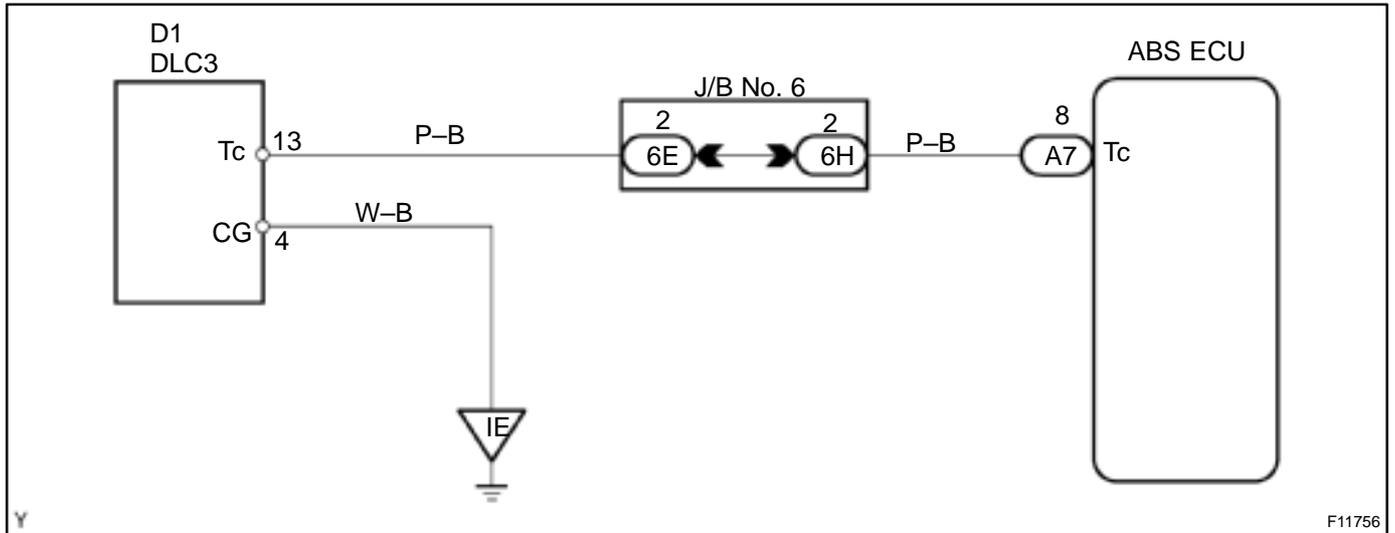

INSPECTION PROCEDURE

1	Check voltage between terminals Tc and CG of DLC3.
---	--

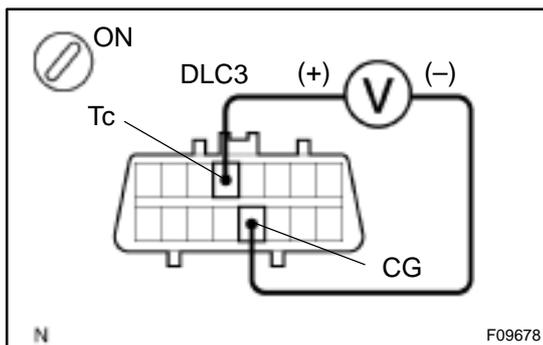

CHECK:

- (a) Turn the ignition switch ON.
- (b) Measure the voltage between terminals Tc and CG of the DLC3.

OK:

Voltage: 10 – 14 V

OK → If ABS warning light does not blink even after Tc and CG are connected, ECU may be defective.

NG

2**Check for open and short circuit in harness and connector between ABS ECU and DLC3, and DLC3 and body ground (See page [IN-28](#)).****NG****Repair or replace harness or connector.****OK****Check and replace ABS ECU.**