

## CIRCUIT INSPECTION

<b>DTC</b>	<b>B0100/13</b>	<b>Short in D Squib Circuit</b>
------------	-----------------	---------------------------------

### CIRCUIT DESCRIPTION

The D squib circuit consists of the airbag sensor assembly, spiral cable and steering wheel pad.


It causes the airbag to deploy when the airbag deployment conditions are satisfied.

For details of the function of each component, see OPERATION on page RS-2.

DTC B0100/13 is recorded when a short is detected in the D squib circuit.

DTC No.	DTC Detection Condition	Trouble Area
B0100/13	<ul style="list-style-type: none"> <li>• Short circuit between D+ or D- wire harness of squib</li> <li>• D squib malfunction</li> <li>• Spiral cable malfunction</li> <li>• Airbag sensor assembly malfunction</li> </ul>	<ul style="list-style-type: none"> <li>• Wire harness</li> <li>• Steering wheel pad (D squib)</li> <li>• Spiral cable</li> <li>• Airbag sensor assembly</li> </ul>


### WIRING DIAGRAM

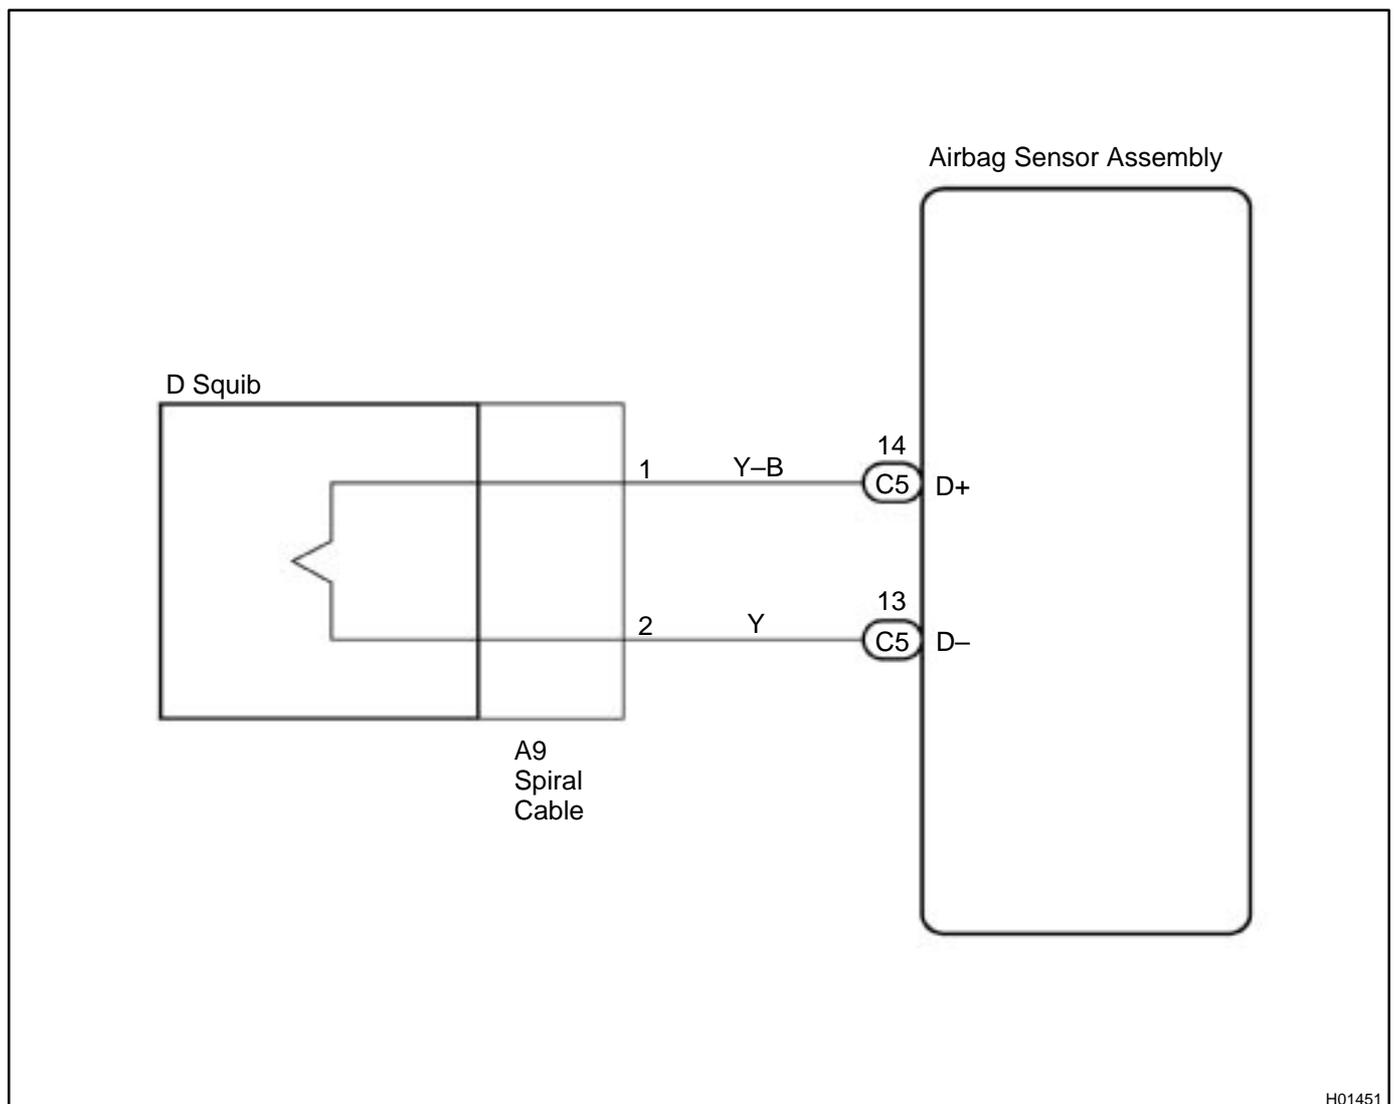


H01451

## INSPECTION PROCEDURE

1 Prepare for inspection (See step 1 on page [DI-323](#)).

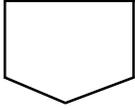

2 Check D squib circuit.

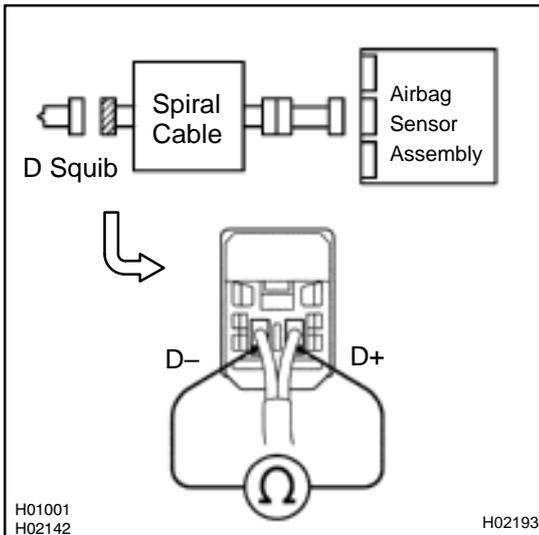**PREPARATION:**

Release the airbag activation prevention mechanism of the connector (on the airbag sensor assembly side) between the airbag sensor assembly and the spiral cable (See page [DI-237](#)).

**CHECK:**

For the connector (on the spiral cable side) between the spiral cable and the steering wheel pad, measure the resistance between terminals D+ and D-.

**OK:**


**Resistance: 1 MΩ or Higher**

**NG**

**Go to step 5.**

**OK**

### 3 Check airbag sensor assembly.

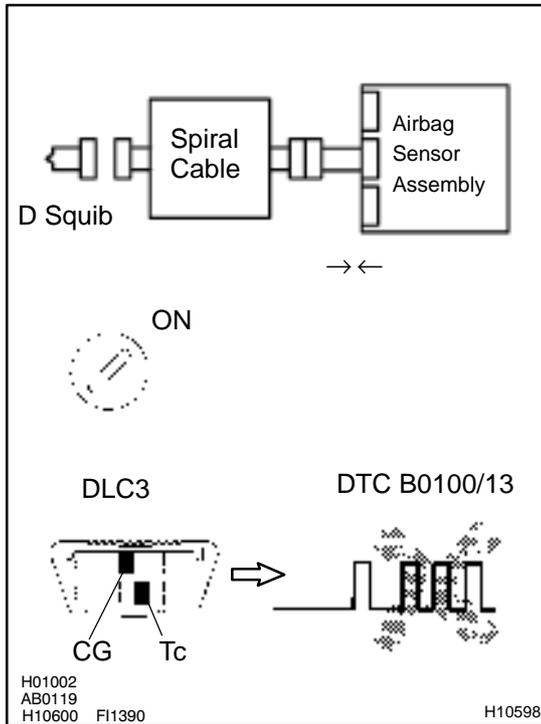

#### **PREPARATION:**

- Connect the connector to the airbag sensor assembly.
- Connect the negative (-) terminal cable to the battery, and wait at least for 2 seconds.

#### **CHECK:**

- Turn the ignition switch ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-237](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-237](#)).

#### **OK:**

**DTC B0100/13 is not output.**

#### **HINT:**


Codes other than code B0100/13 may be output at this time, but they are not relevant to this check.

**NG**

**Replace airbag sensor assembly.**

**OK**

## 4 Check D squib.

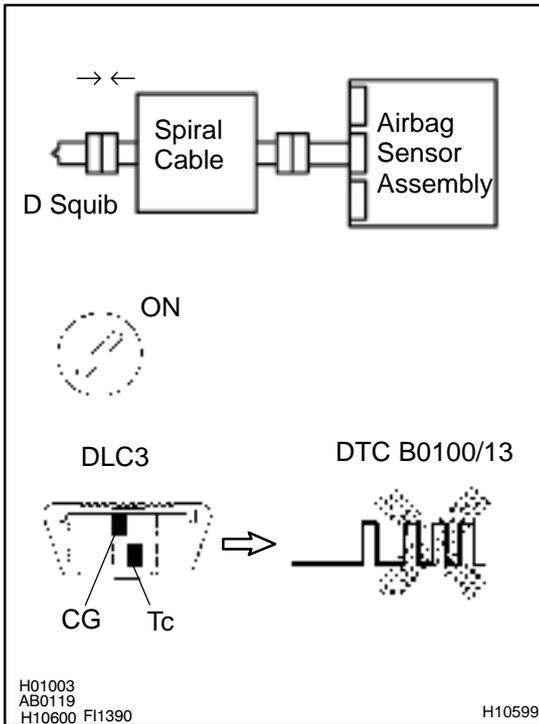

### PREPARATION:

- Turn the ignition switch to LOCK.
- Disconnect the negative (–) terminal cable from the battery, and wait at least for 90 seconds.
- Connect the steering wheel pad connector.
- Connect the negative (–) terminal cable to the battery, and wait at least for 2 seconds.

### CHECK:

- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch ON, and wait at least for 20 seconds.
- Clear the DTC stored in memory (See page [DI-237](#)).
- Turn the ignition switch to LOCK, and wait at least for 20 seconds.
- Turn the ignition switch ON, and wait at least for 20 seconds.
- Check the DTC (See page [DI-237](#)).

### OK:

**DTC B0100/13 is not output.**

### HINT:

Codes other than code B0100/13 may be output at this time, but they are not relevant to this check.


**NG**

**Replace steering wheel pad.**

**OK**

**From results of above inspection, suspected part can now be considered normal. To make sure of this, use simulation method to check.**

## 5 Check spiral cable.

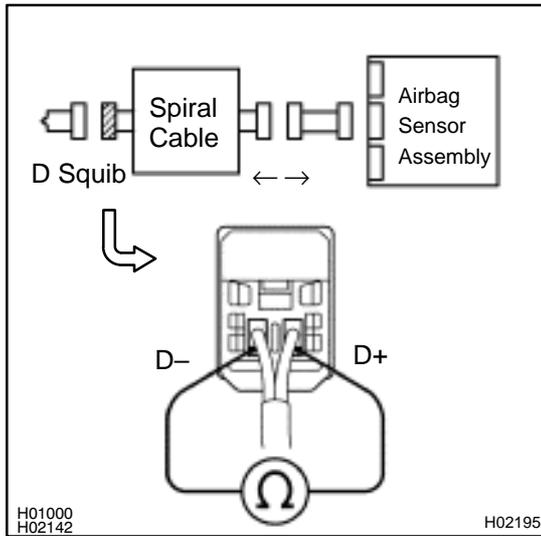

### PREPARATION:

- Disconnect the connector between the airbag sensor assembly and the spiral cable.
- Release the airbag activation prevention mechanism of the spiral cable connector on the airbag sensor assembly side (See page [DI-237](#)).

### CHECK:

For the connector (on the spiral cable side) between the spiral cable and the steering wheel pad, measure the resistance between terminals D+ and D-.

### OK:


Resistance: 1 MΩ or Higher

NG

Repair or replace spiral cable.

OK

## 6 Check harness between airbag sensor assembly and spiral cable.

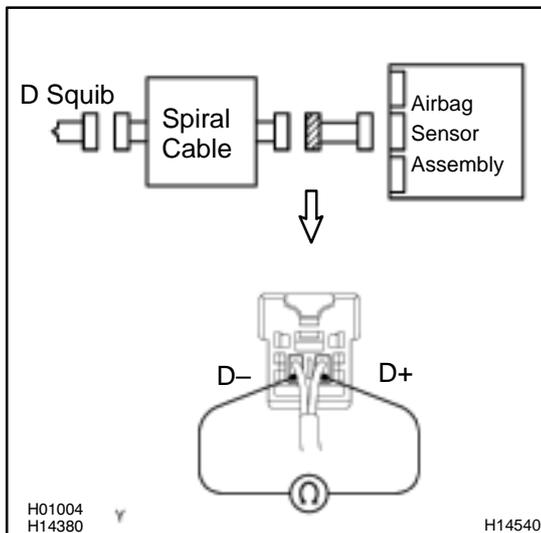

### PREPARATION:

Release the airbag activation prevention mechanism of the connector (on the airbag sensor assembly side) between the airbag sensor assembly and the spiral cable (See page [DI-237](#)).

### CHECK:

For the connector (on the spiral cable side) between the airbag sensor assembly and the spiral cable, measure the resistance between terminals D+ and D-.

### OK:

Resistance: 1 MΩ or Higher

NG

Repair or replace harness or connector between airbag sensor assembly and spiral cable.

OK

From results of above inspection, suspected part can now be considered normal. To make sure of this, use simulation method to check.