


# ENGINE IMMOBILISER SYSTEM

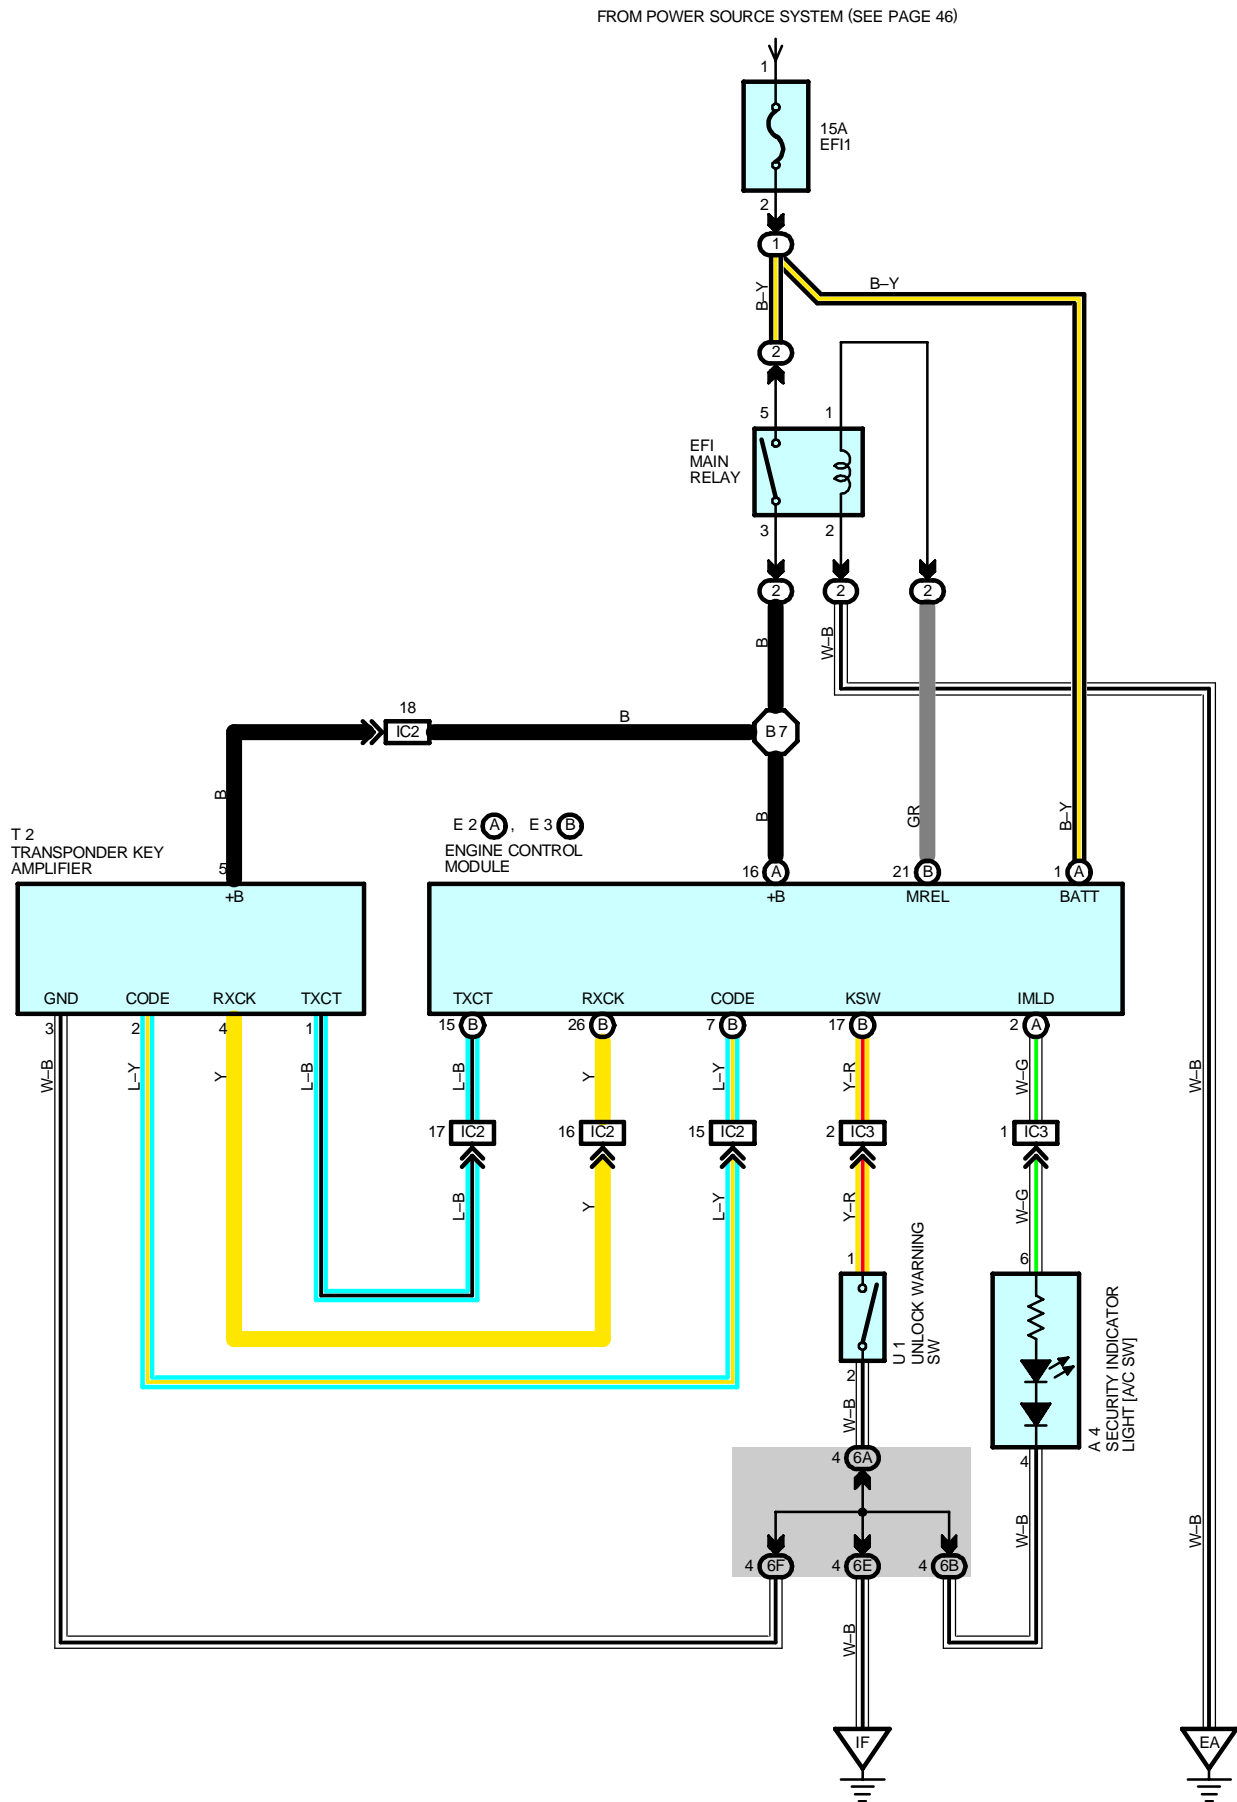

## SERVICE HINTS

### T2 TRANSPONDER KEY AMPLIFIER

3-GROUND : Always continuity

### U1 UNLOCK WARNING SW

1-2 : Closed with the ignition key in cylinder

## : PARTS LOCATION

Code		See Page		Code		See Page		Code		See Page	
A4		32		E3	B	34		U1		33	
E2	A	34		T2		33					

## : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Fusible Link Block (Engine Compartment Left)
2	23	Engine Room R/B (Left Side of Room Partition Panel)

## : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
6A	26	Instrument Panel Wire and J/B No.6 (Instrument Panel Brace LH)
6B		
6E		
6F		

## : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	38	Engine Room Main Wire and Instrument Panel Wire (Left Kick Panel)
IC3		

## : GROUND POINTS

Code	See Page	Ground Points Location
EA	36	Suspension Tower Rear LH
IF	38	Instrument Panel Brace LH

## : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B7	42	Engine Room Main Wire			