


CIGARETTE LIGHTER AND CLOCK

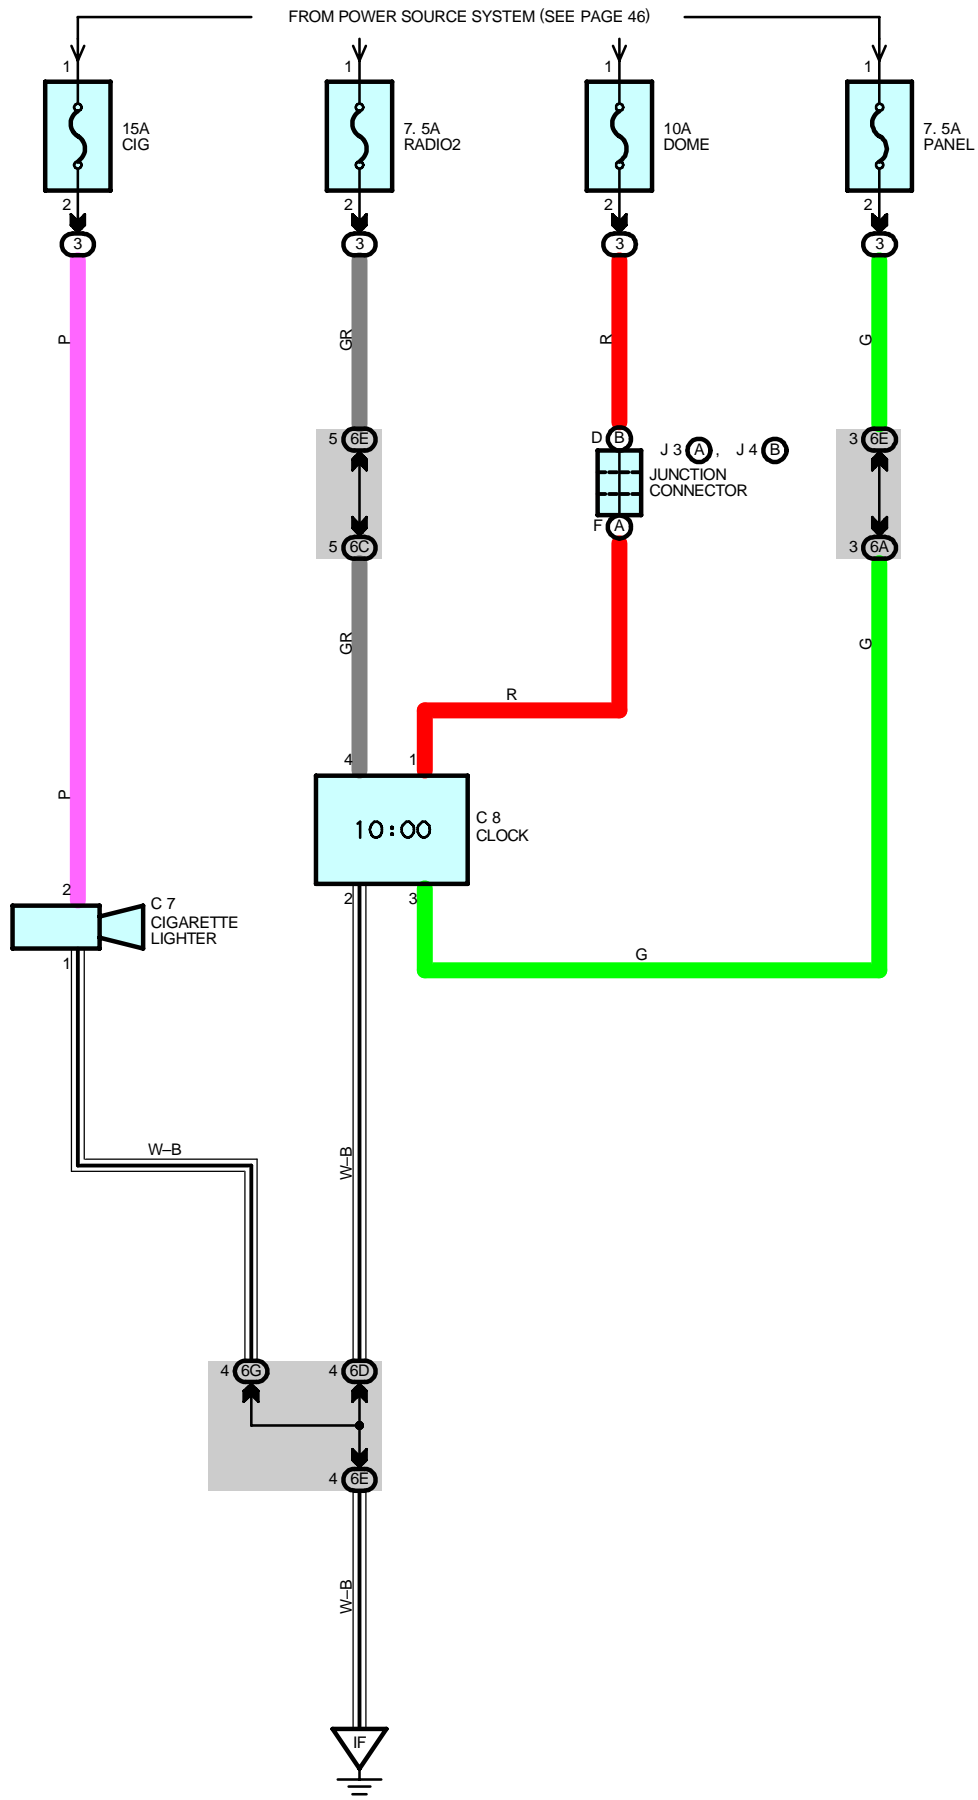

SERVICE HINTS

C7 CIGARETTE LIGHTER

2-GROUND : Approx. **12** volts with the ignition SW at **ACC** or **ON** position

1-GROUND : Always continuity

C8 CLOCK

1-GROUND : Always approx. **12** volts

4-GROUND : Approx. **12** volts with the ignition SW at **ACC** or **ON** position

3-GROUND : Approx. **12** volts with the light control SW at **TAIL** or **HEAD** position

2-GROUND : Always continuity

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C7	32	J3	A	33	
C8	32	J4	B	33	

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
3	24	R/B No.3 (Left Side of Instrument Panel)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
6A	26	Instrument Panel Wire and J/B No.6 (Instrument Panel Brace LH)
6C		
6D		
6E		
6G		

▽ : GROUND POINTS

Code	See Page	Ground Points Location
IF	38	Instrument Panel Brace LH