


INSTALLATION

1. INSTALL RELEASE CYLINDER

Install the release cylinder with the 2 bolts.

Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

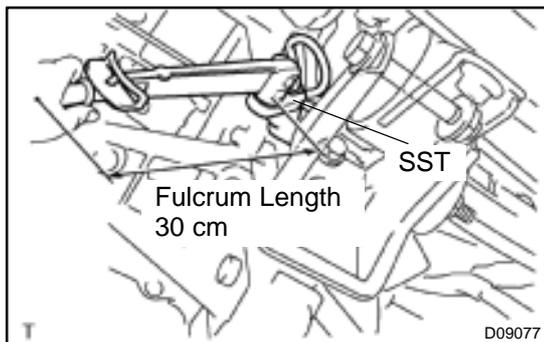

2. CONNECT CLUTCH LINE TO RELEASE CYLINDER

Using SST, connect the clutch line to the release cylinder.

SST 09023-00100

Torque:

14 N·m (143 kgf·cm, 10 ft·lbf) for use with SST

15 N·m (155 kgf·cm, 11 ft·lbf)

HINT:

Use a torque wrench with a fulcrum length of 30 cm (11.81in.).

3. FILL RESERVOIR AND BLEED CLUTCH SYSTEM

CAUTION:

Make sure that the vehicle is securely supported.

4. CHECK FOR LEAKS

5. INSTALL FRONT ENGINE UNDER COVER