


FROM POWER SOURCE SYSTEM (SEE PAGE 46)

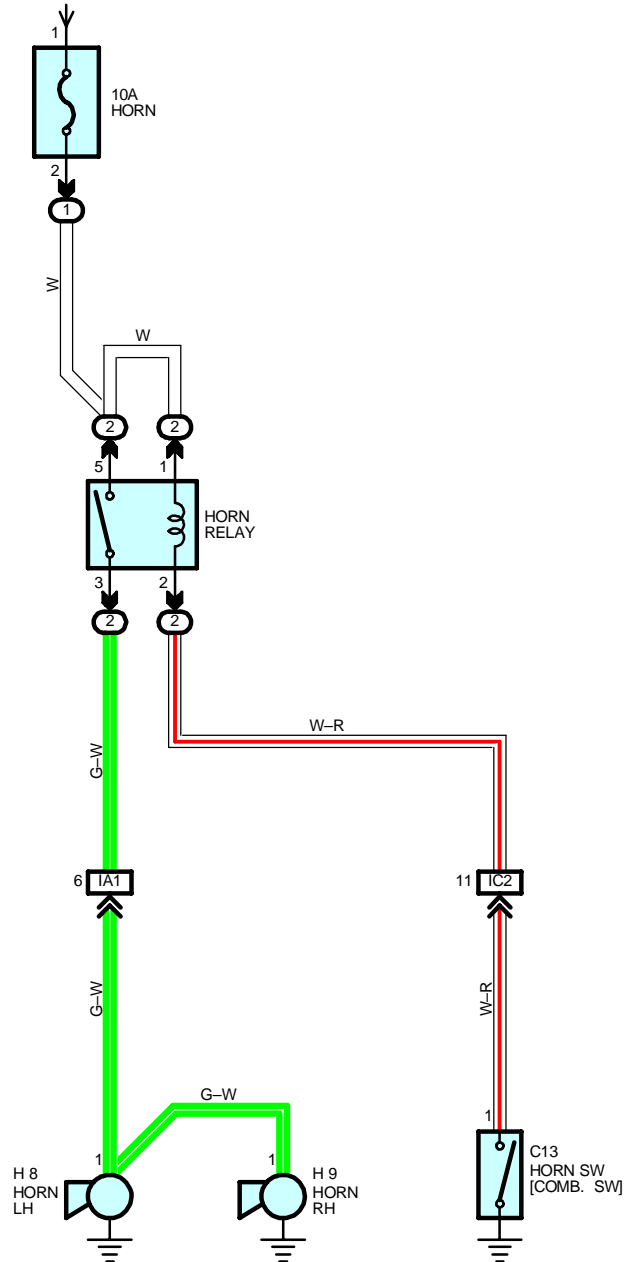

SERVICE HINTS

HORN RELAY

5-3 : Closed with the horn SW on

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
C13	32	H8	35	H9	35

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Fusible Link Block (Engine Compartment Left)
2	23	Engine Room R/B (Left Side of Room Partition Panel)

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	38	Engine Room Main Wire and Luggage Room Wire (Left Kick Panel)
IC2	38	Engine Room Main Wire and Instrument Panel Wire (Left Kick Panel)