



## REMOVAL

1. REMOVE FUEL PUMP AND SENDER GAUGE ASSEMBLY FROM FUEL TANK (See page [SF-12](#))

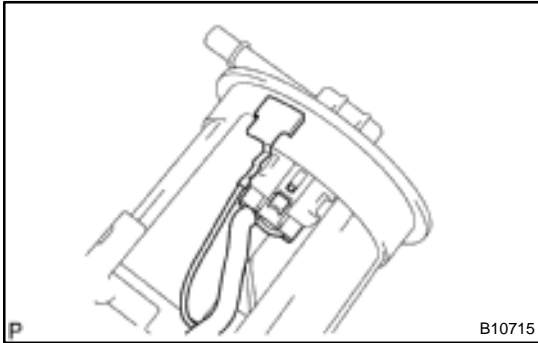

2. REMOVE FUEL SUCTION PLATE


- (a) Disconnect the fuel sender gauge connector and ground plate.

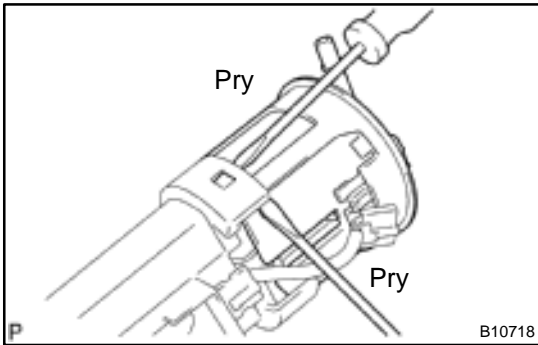


- (b) Using 2 screwdrivers, pry out the fuel suction plate.

**NOTICE:**

**Be careful not to damage the suction support and fuel suction plate.**

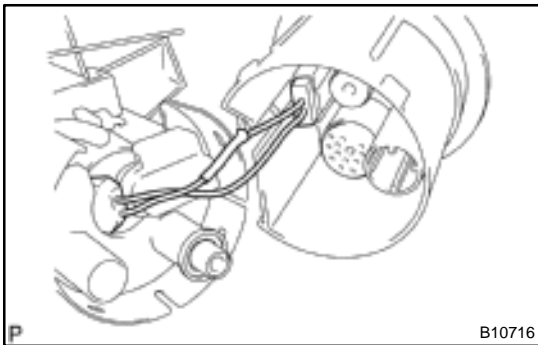

- (c) Disconnect the fuel pump connector.

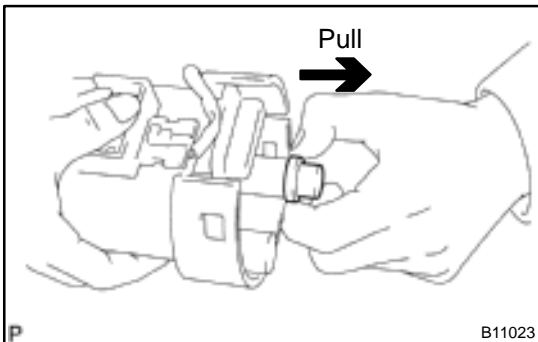

3. REMOVE FUEL PRESSURE REGULATOR

- (a) Pull out the pressure regulator.
- (b) Remove the O-ring from the pressure regulator.