


Door Courtesy Switch Circuit

CIRCUIT DESCRIPTION

The door courtesy switch goes on when the door is opened and goes off when door is closed.

WIRING DIAGRAM

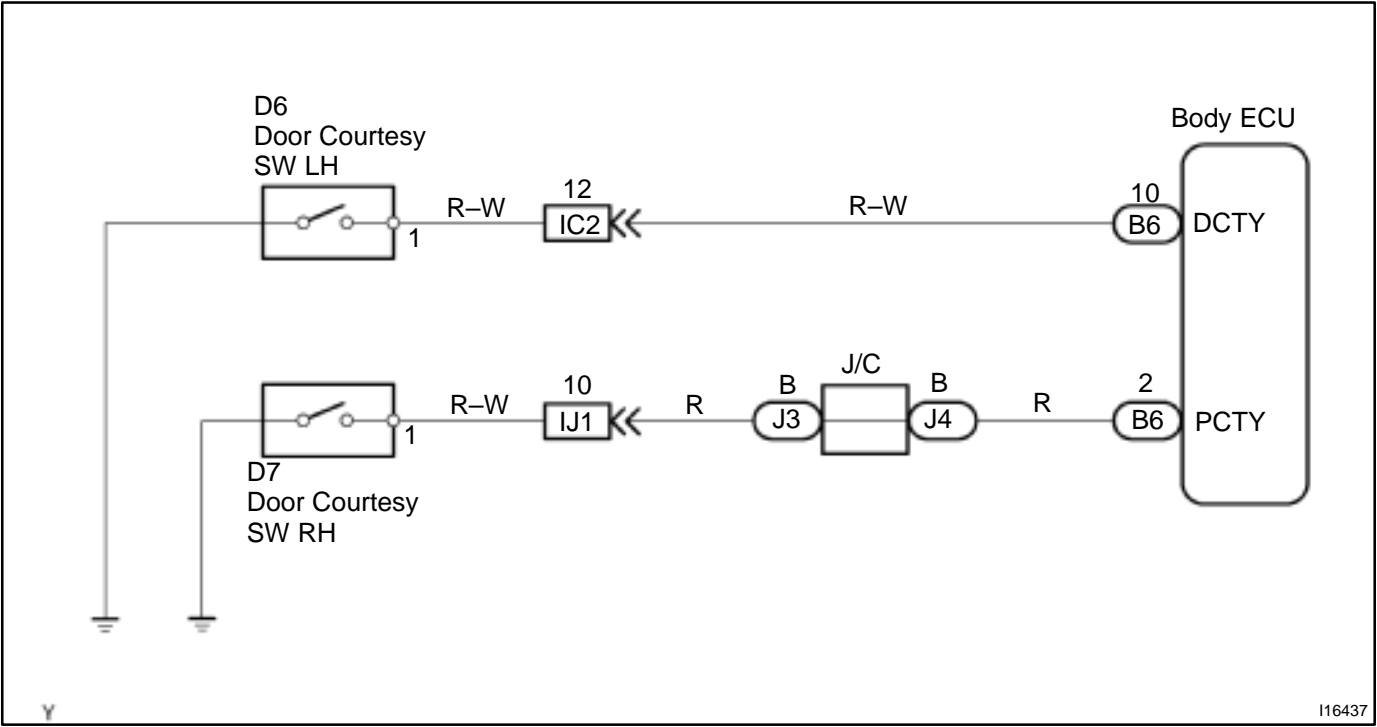

INSPECTION PROCEDURE

1	Check courtesy switch (See page DI-377).
OK	
NG	Replace courtesy switch.
2	Check for a grounding malfunction caused by loosened screw.
OK	
NG	Install screw.

3	Check harness and connector between courtesy switch and body ECU, and courtesy switch and body ECU (See page IN-28).
---	---

NG

Repair or replace harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-359](#)).