


AUTO ANTENNA

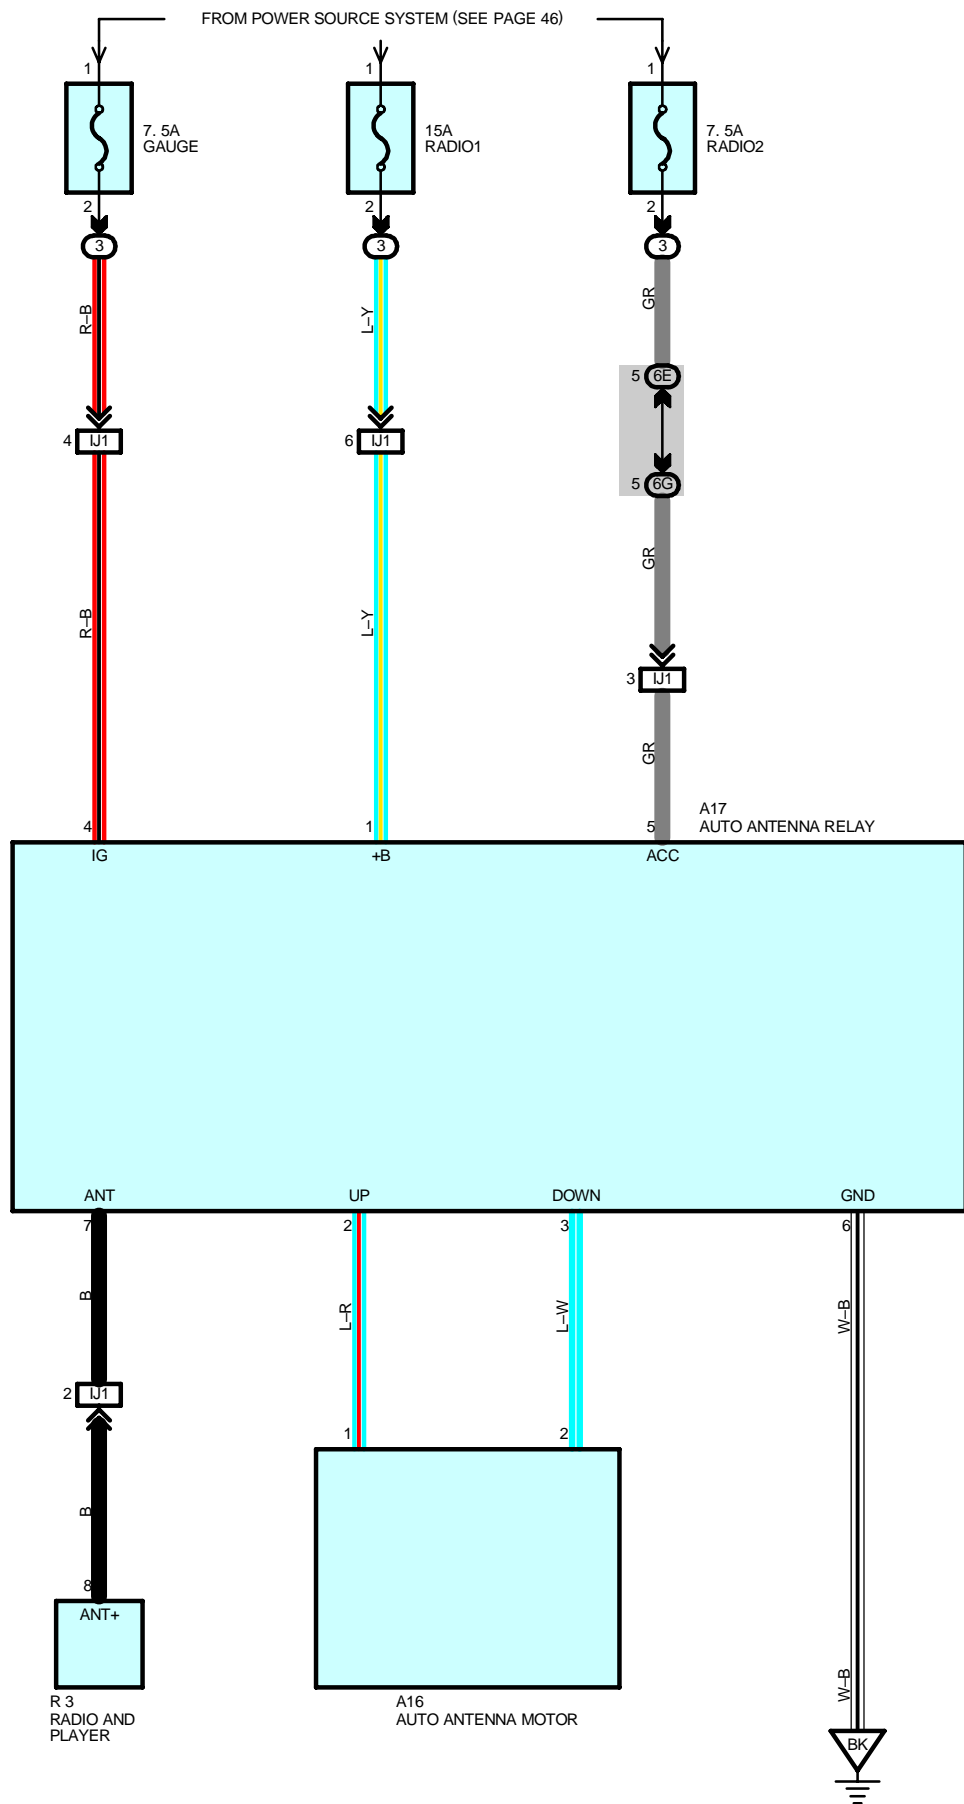

SERVICE HINTS

A17 AUTO ANTENNA RELAY

- 4-GROUND : Approx. **12** volts with the ignition SW at **ON** position
- 1-GROUND : Always approx. **12** volts
- 5-GROUND : Approx. **12** volts with the ignition SW at **ACC** or **ON** position
- 6-GROUND : Always continuity

: PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
A16	34	A17	34	R3	33

: RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
3	24	R/B No.3 (Left Side of Instrument Panel)

: JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
6E	26	Instrument Panel Wire and J/B No.6 (Instrument Panel Brace LH)
6G		

: CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IJ1	40	Floor Wire and Instrument Panel Wire (Right Kick Panel)

: GROUND POINTS

Code	See Page	Ground Points Location
BK	42	Under the Center Pillar RH

