


Door Lock Motor Circuit

CIRCUIT DESCRIPTION

When the door switch is set to LOCK, the body ECU outputs a signal to lock all of the doors.

WIRING DIAGRAM

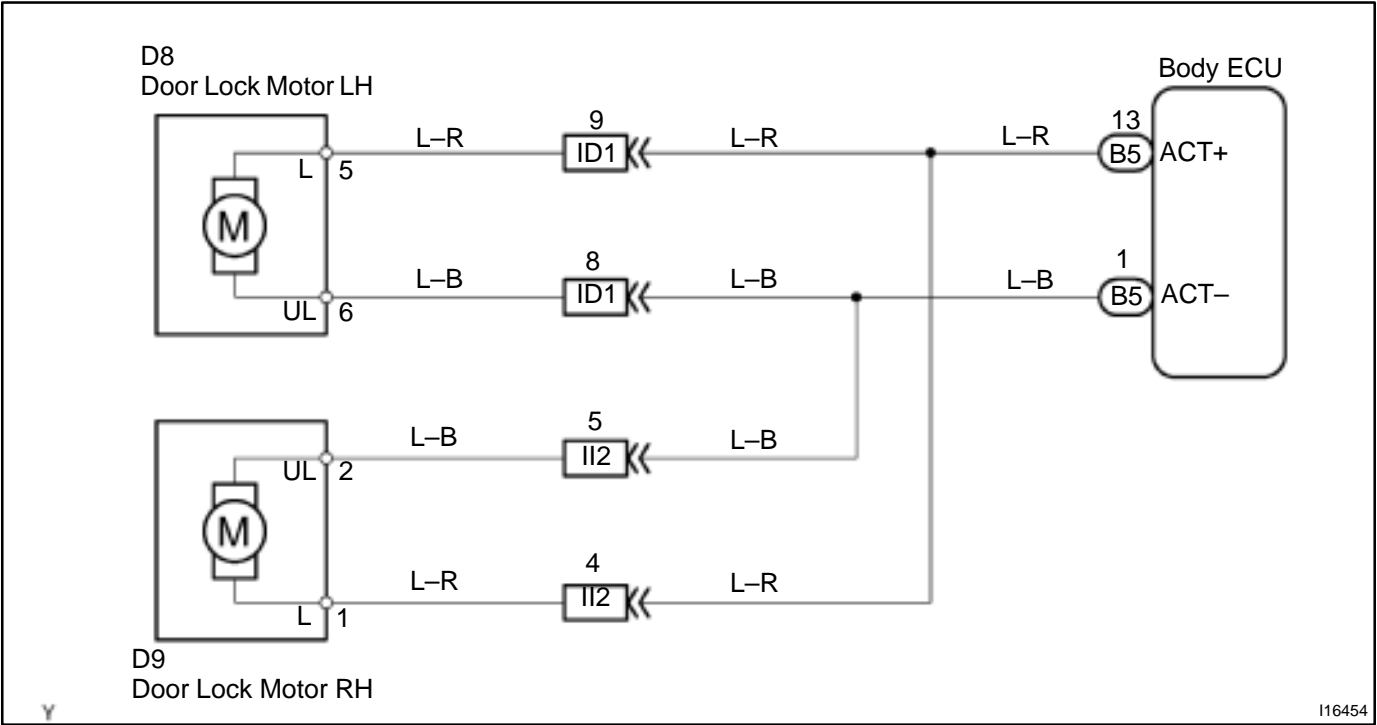

INSPECTION PROCEDURE

1	Check door lock motor (See page BE-56).
---	--

OK

NG

Replace door lock motor.

NG	Repair or replace harness or connector.
----	---

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-359](#)).