


INSTALLATION

1. INSTALL CLUTCH MASTER CYLINDER

- (a) Install the master cylinder with the 2 nuts.
Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)
- (b) Connect the push rod to the clutch pedal with the pin and pin clip.

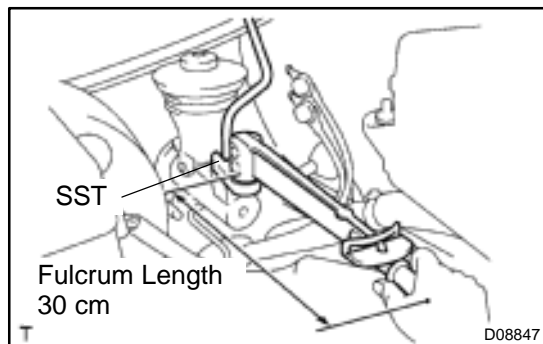

2. CONNECT CLUTCH LINE

Using SST, connect the clutch line.

SST 09023-38200

Torque:

20 N·m (204 kgf·cm, 15 ft·lbf)

18 N·m (185 kgf·cm, 13 ft·lbf) for use with SST

HINT:

Use a torque wrench with a fulcrum length of 30 cm (11.81in.).

3. **FILL RESERVOIR AND BLEED CLUTCH SYSTEM AND ADJUST CLUTCH PEDAL (See page [CL-2](#))**
4. **CHECK FOR LEAKS**
5. **INSTALL LUGGAGE COMPARTMENT TRIM BOX COVER**