


REMOVAL

1. **REMOVE TRANSAXLE FROM ENGINE**
(See page [MX-4](#))
2. **REMOVE CLUTCH COVER AND DISC**
 - (a) Align the matchmarks on the clutch cover with the one on the flywheel.
 - (b) Loosen each set bolt one turn at a time until spring tension is released.
 - (c) Remove the set bolts, and pull off the clutch cover with the clutch disc.

NOTICE:

Do not drop the clutch disc.

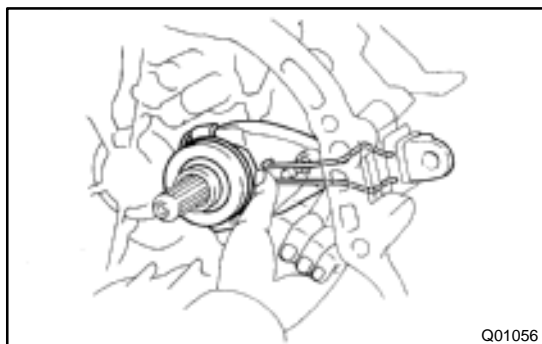

3. **REMOVE RELEASE BEARING AND FORK FROM TRANSAXLE**
Remove the release bearing with the fork together and then separate them.
4. **REMOVE RELEASE FORK SUPPORT AND BOOT**