


ECM Communication Circuit Malfunction

CIRCUIT DESCRIPTION

When the reduction of the engine load is necessary, ECM inputs the power steering stop signal to the ECU.

WIRING DIAGRAM

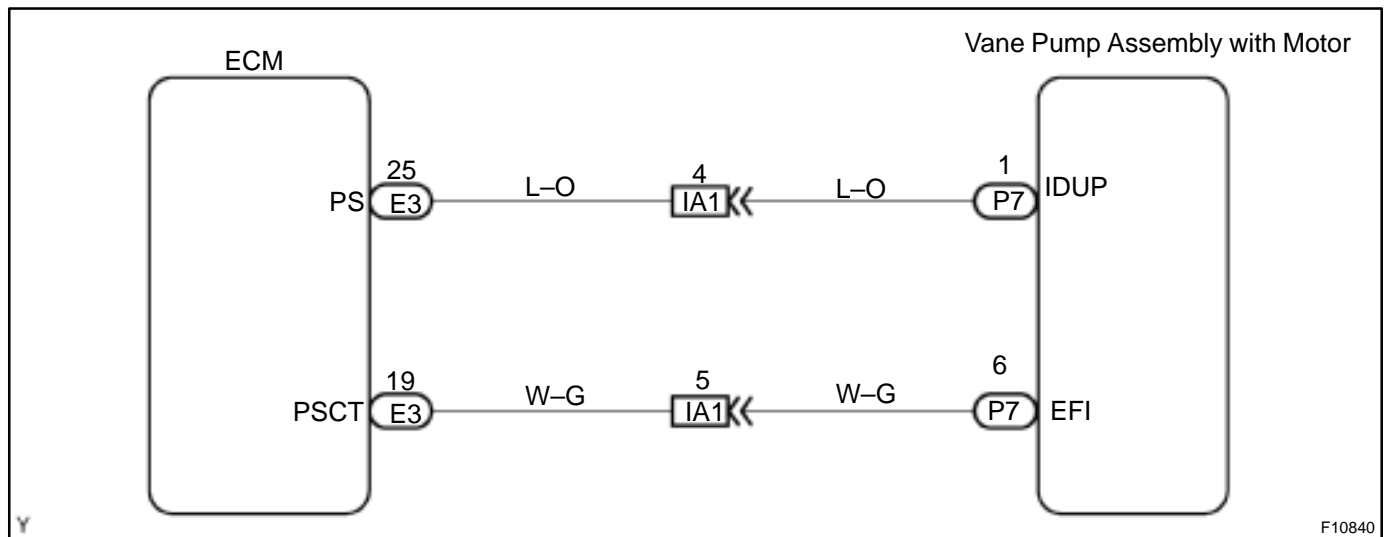

INSPECTION PROCEDURE

- 1 Check for open and short circuit in harness and connector between vane pump assembly with motor and ECM.

NG

Repair or replace harness or connector.

OK

Check and replace vane pump assembly with motor.