


REMOVAL

1. REMOVE LUGGAGE COMPARTMENT TRIM BOX COVER

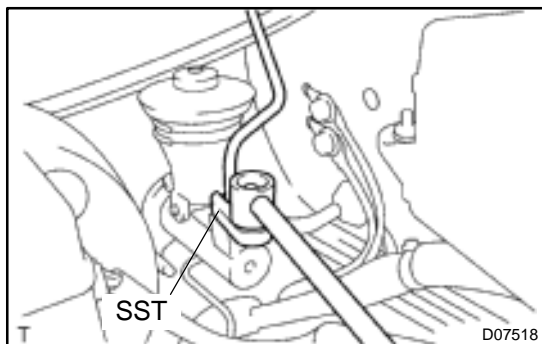

2. DISCONNECT CLUTCH LINE FROM CLUTCH MASTER CYLINDER

Using SST, disconnect the clutch line.

SST 09023-38200

HINT:

Use a container to catch the fluid.

3. REMOVE CLIP AND PIN

4. REMOVE CLUTCH MASTER CYLINDER

(a) Using needle-nose pliers, remove the clip and pin.

(b) Remove the 2 nuts.

(c) Pull out the master cylinder.

