
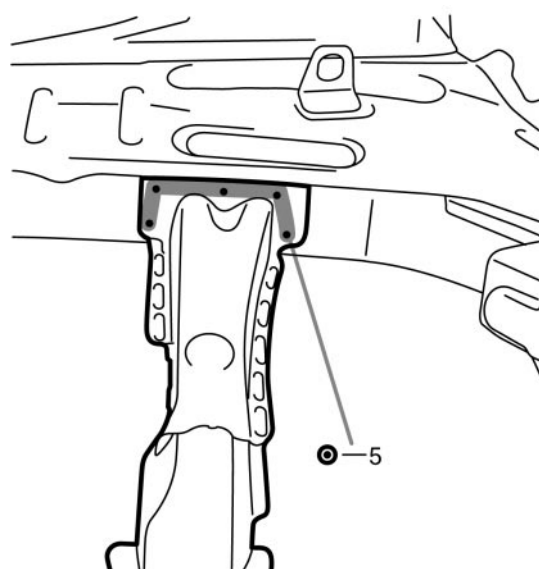
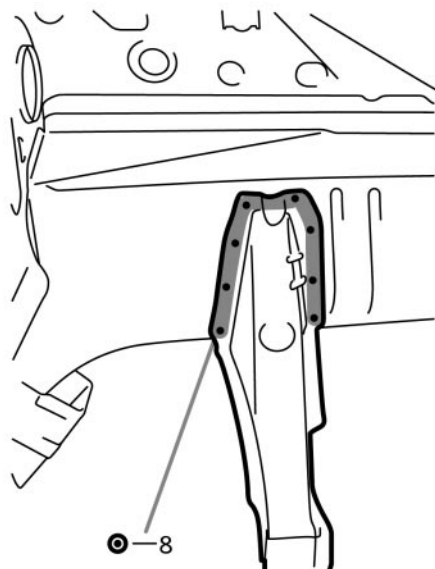


# STEERING GEAR BOX SUPPORT MEMBER (ASSY)

## REPLACEMENT

### 1. REMOVE STEERING GEAR BOX SUPPORT MEMBER



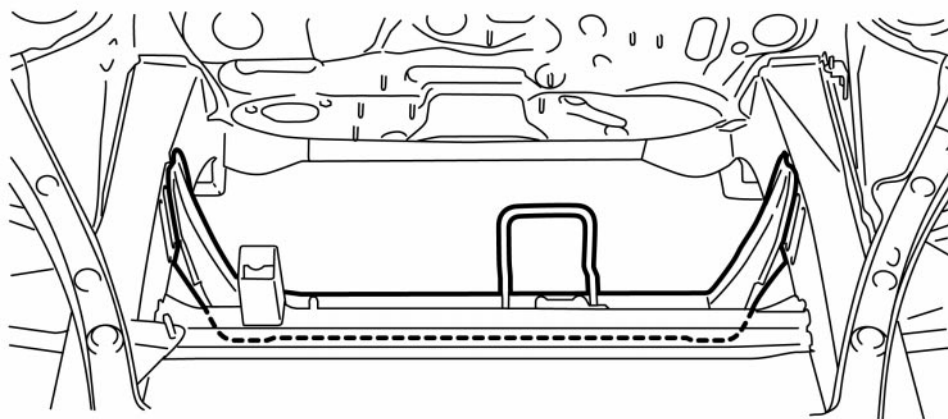


**2. INSTALL STEERING GEAR BOX SUPPORT MEMBER**

- (a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

HINT:

Measurements must be accurate with the body dimension diagram, as this affects the front wheel alignment.

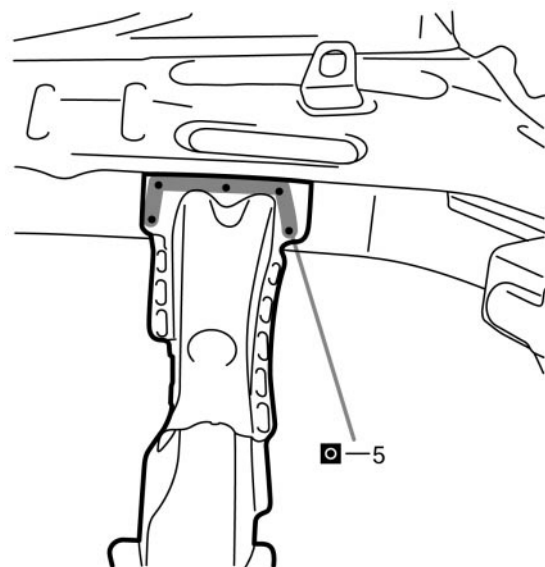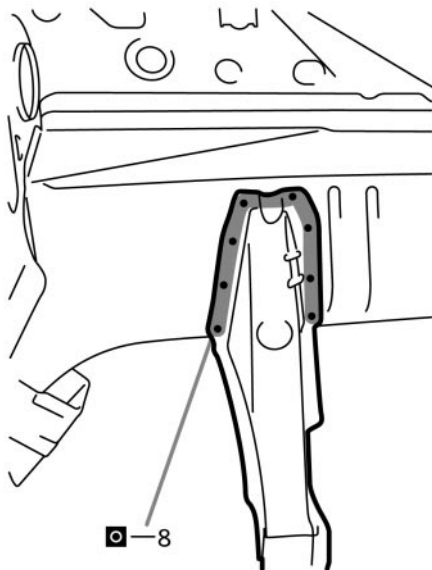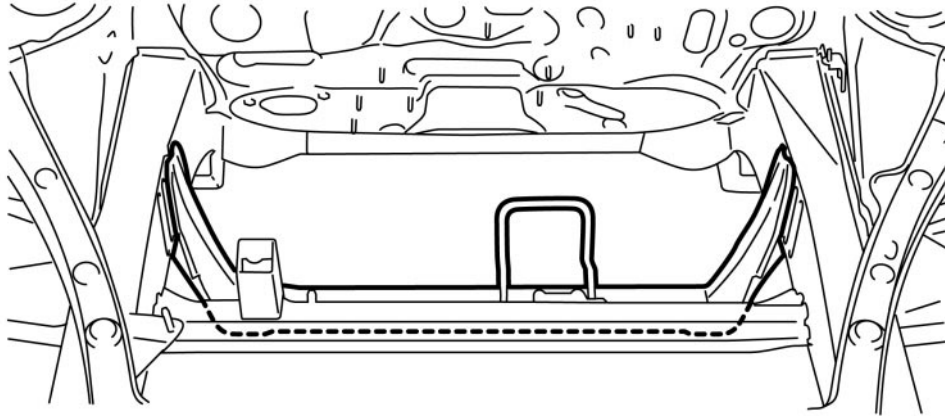

- 
3. MEASURING THE FRONT LUGGAGE COMPARTMENT DIMENSIONS (See page BP-95)
  4. MEASURING THE UNDER BODY DIMENSIONS (See page BP-95)
  5. APPLYING SEALER TO THE FRONT LUGGAGE COMPARTMENT (See page PC-1)
  6. APPLYING UNDER COATING (See page PC-6)
  7. APPLYING ANTI-RUST AGENT
    - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.