



REAR FLOOR SIDE REAR MEMBER (ASSY)**REPLACEMENT**

1. REMOVE LOWER BACK SIDE PANEL (See page BP-56)
2. REMOVE REAR FLOOR SIDE REAR MEMBER

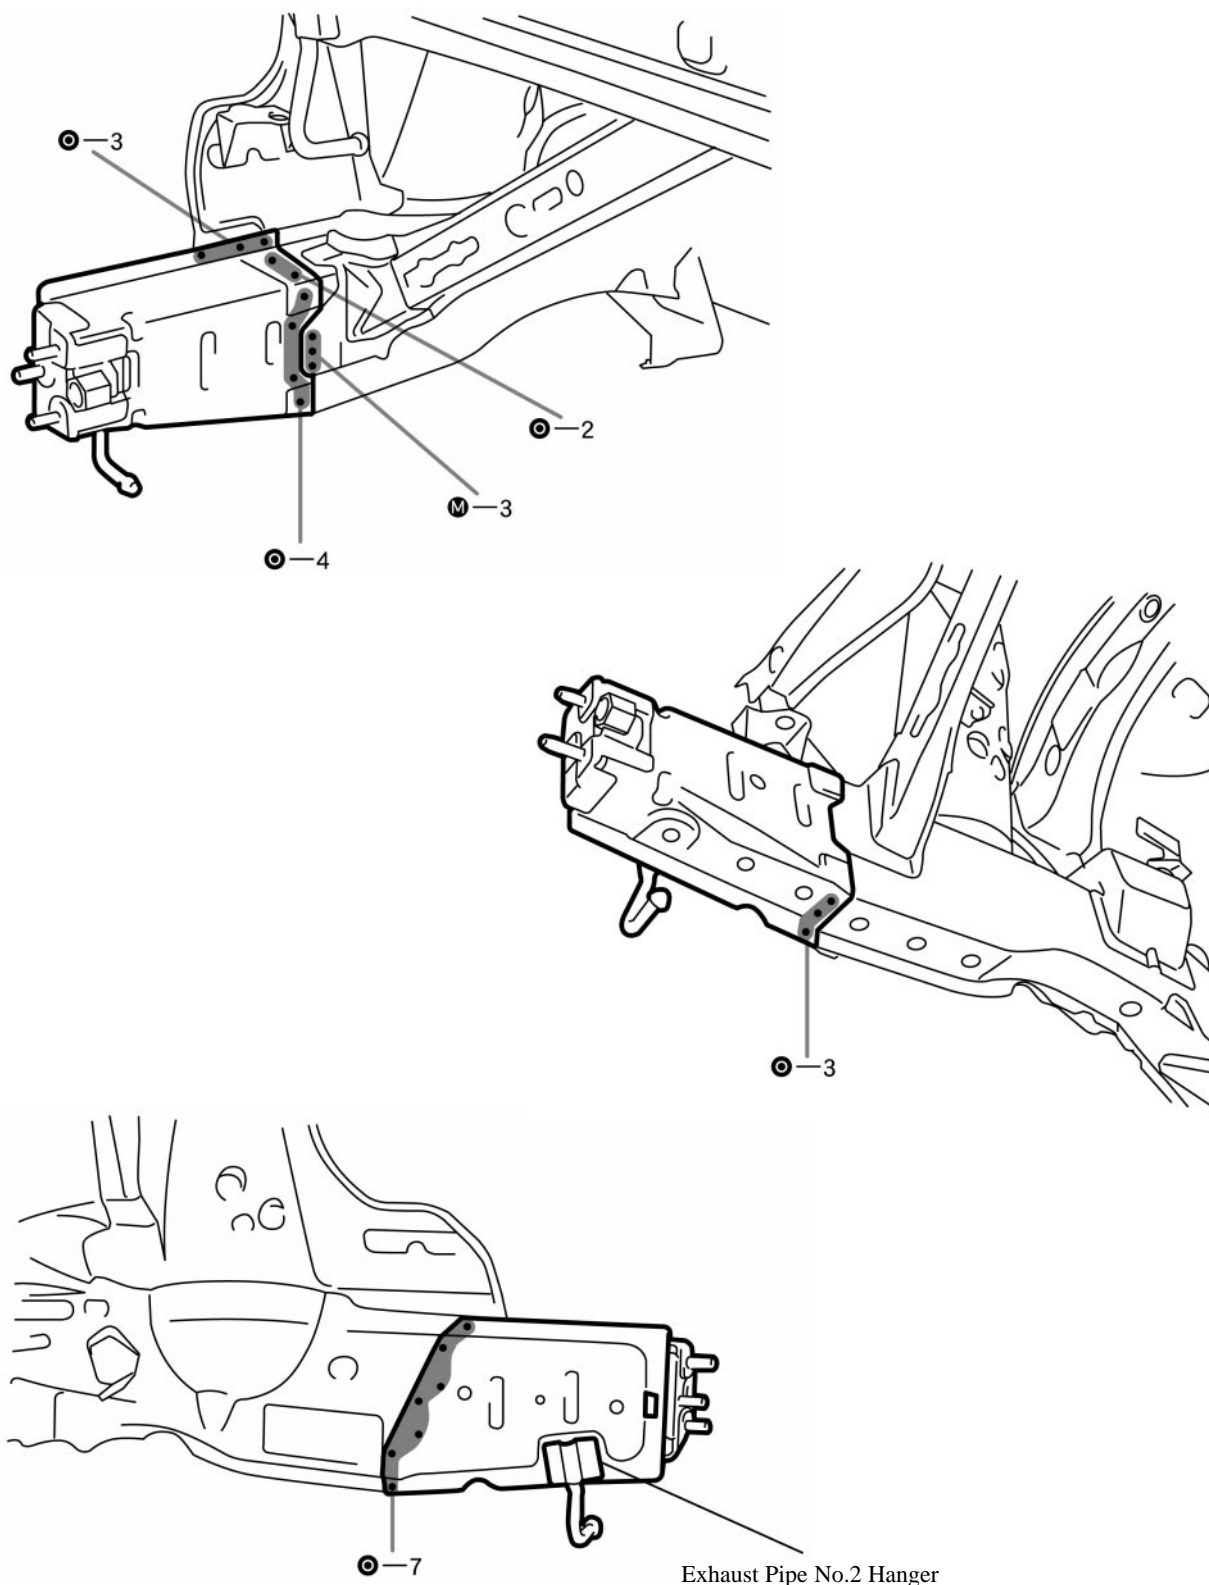

3. INSTALL REAR FLOOR SIDE REAR MEMBER

- (a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

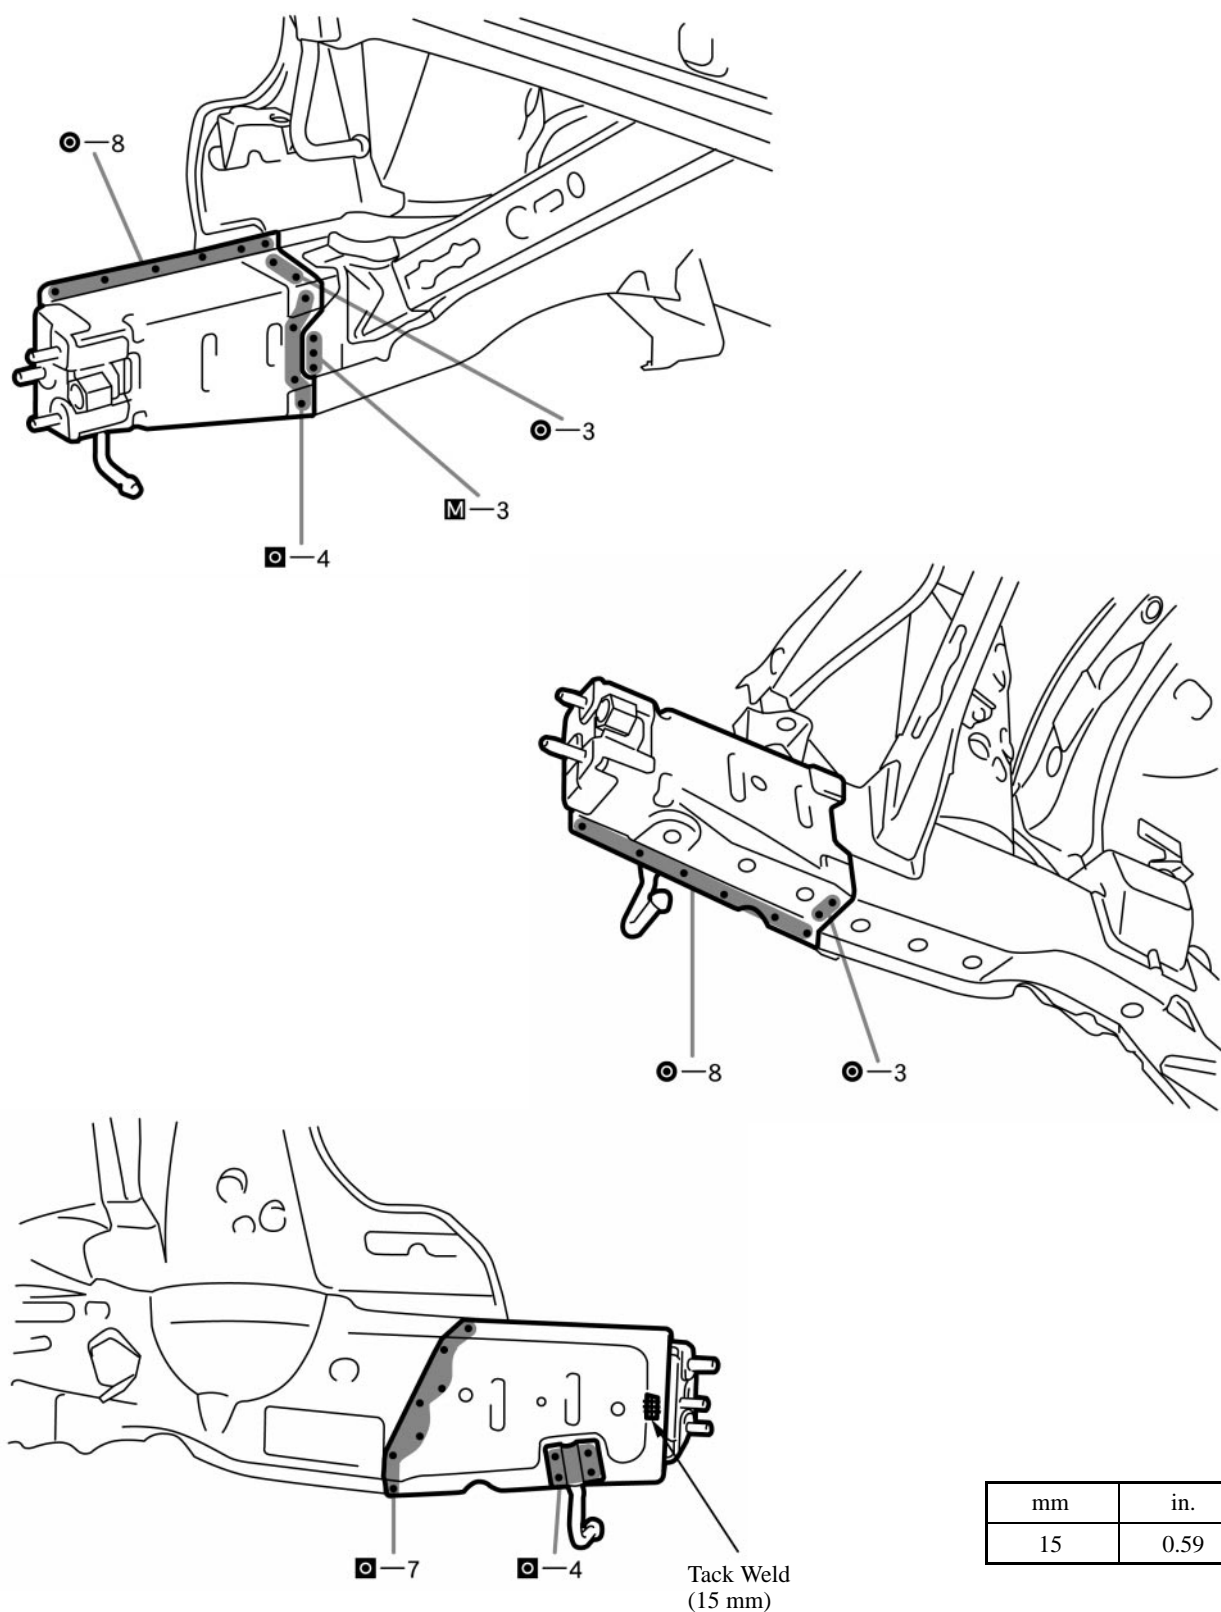

mm	in.
15	0.59

-
4. MEASURING THE UNDER BODY DIMENSIONS (See page BP-95)
 5. MEASURING THE ENGINE COMPARTMENT DIMENSIONS (See page BP-95)
 6. INSTALL LOWER BACK SIDE PANEL (See page BP-57)
 7. APPLYING SEALER TO THE ENGINE COMPARTMENT (See page PC-1)
 8. APPLYING UNDER COATING (See page PC-6)
 9. APPLYING ANTI-RUST AGENT
 - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.