



POWER SOURCE

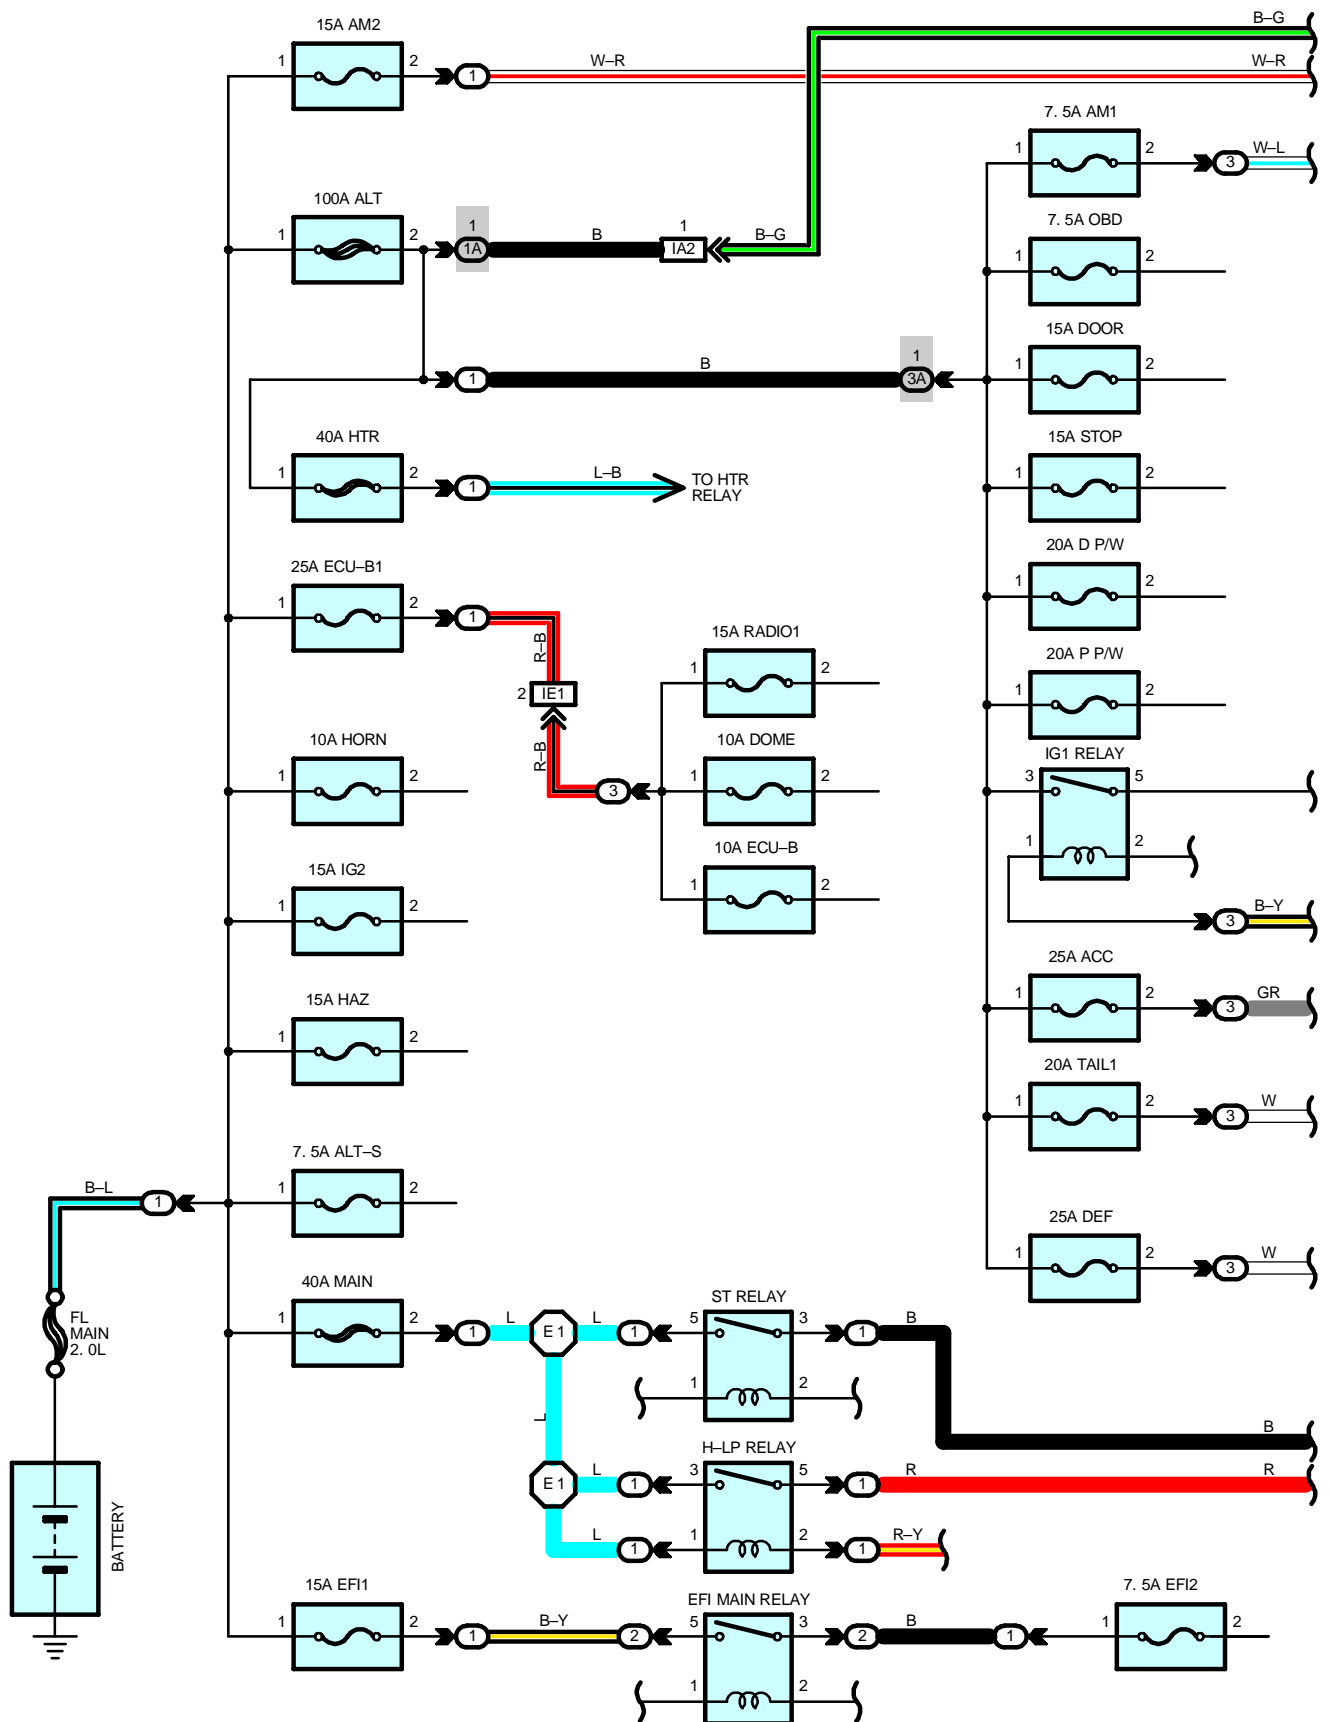

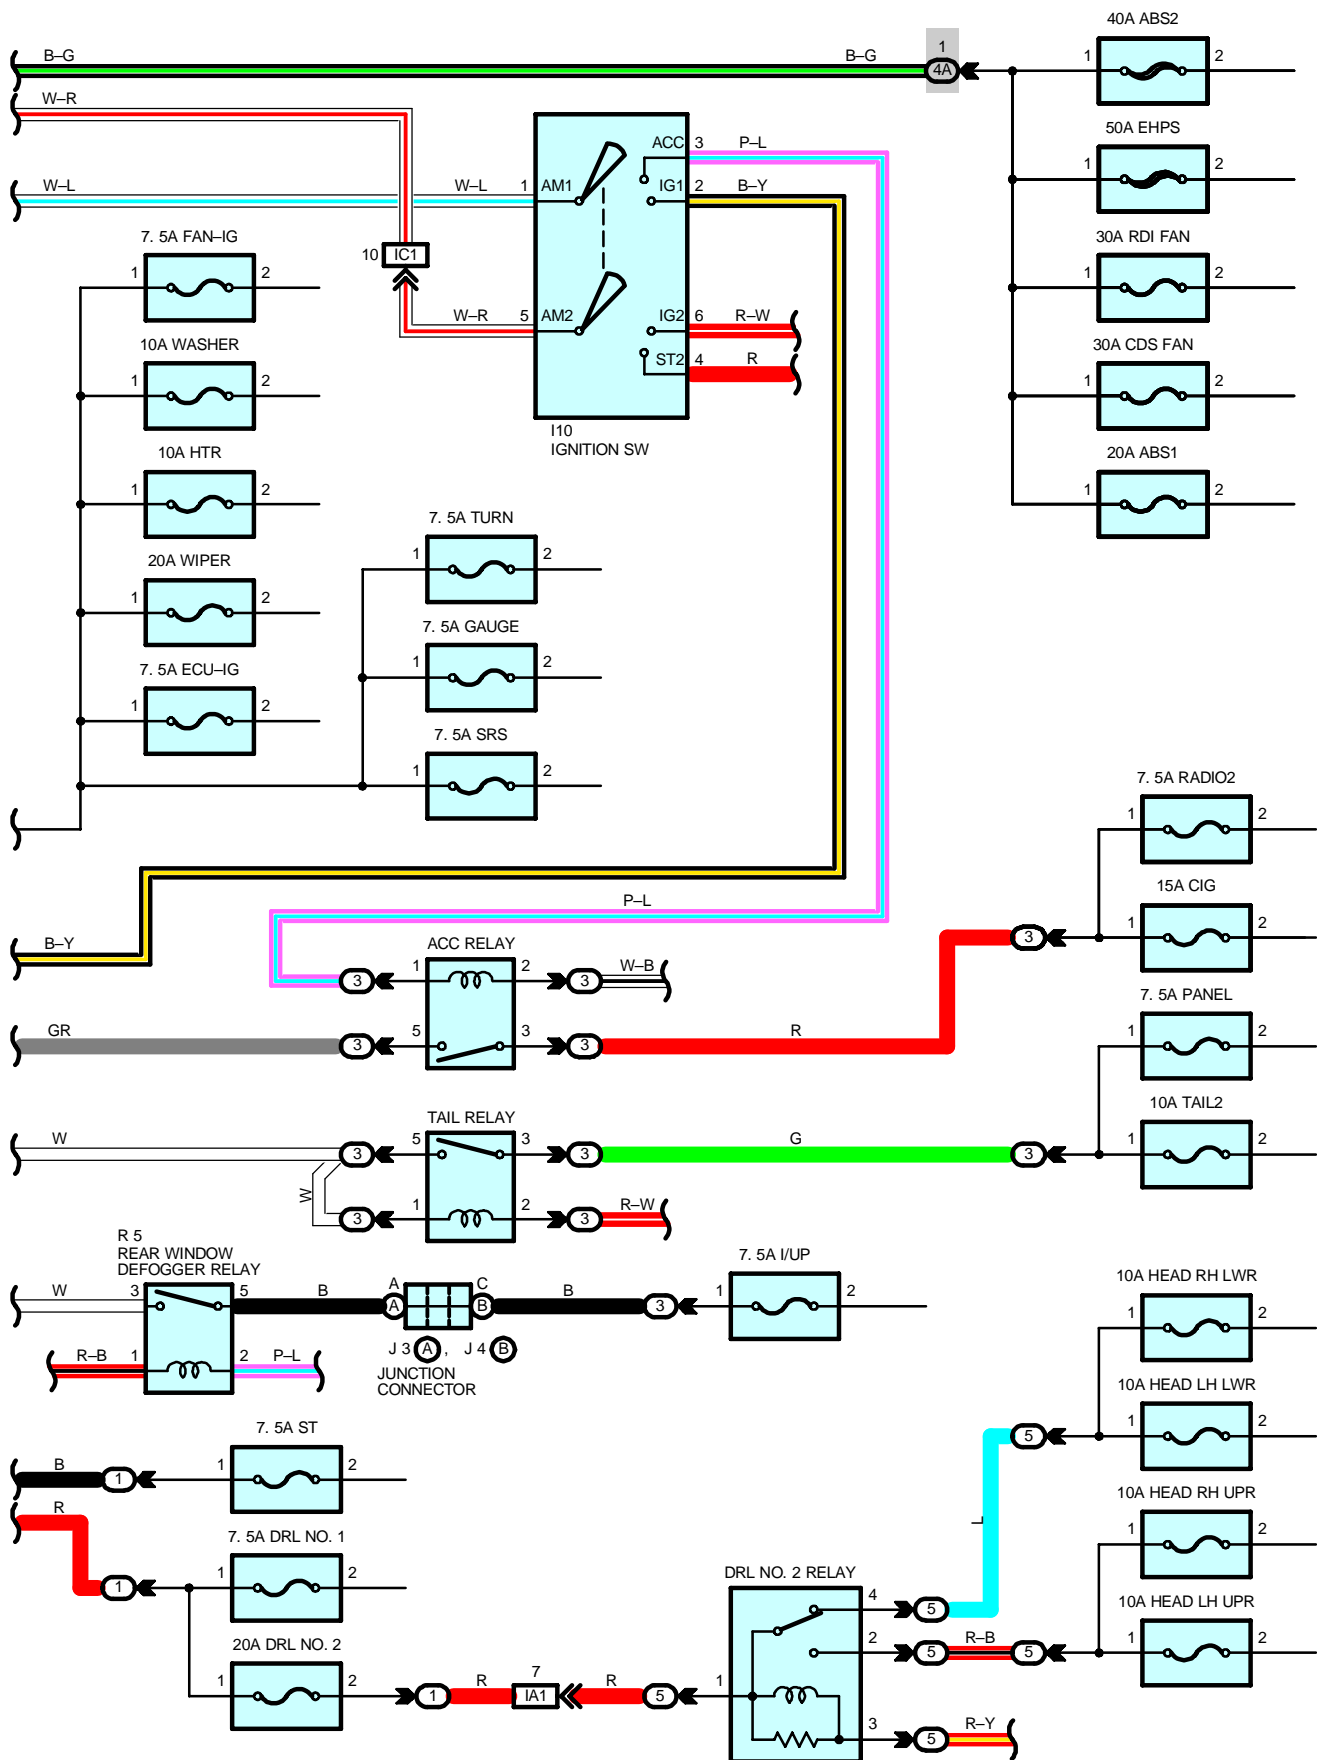

POWER SOURCE

SERVICE HINTS

H-LP RELAY

- 5-3 : Closed with the light control SW at **HEAD** position or the dimmer SW at **FLASH** position
 Closed with the engine running and the parking brake lever is released
 (Parking brake SW off) [w/ daytime running light]

TAIL RELAY

- 5-3 : Closed with the light control SW at **TAIL** or **HEAD** position

I10 IGNITION SW

- 1-3 : Closed with the ignition key at **ACC** or **ON** position
 1-2 : Closed with the ignition key at **ON** or **ST** position
 5-6 : Closed with the ignition key at **ON** or **ST** position
 5-4 : Closed with the ignition key at **ST** position

○ : PARTS LOCATION

Code	See Page	Code	See Page	Code	See Page
I10	33	J4	B	33	
J3	A	33	R5	33	

○ : RELAY BLOCKS

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Fusible Link Block (Engine Compartment Left)
2	23	Engine Room R/B (Left Side of Room Partition Panel)
3	24	R/B No.3 (Left Side of Instrument Panel)
5	28	R/B No.5 (Front Compartment Right)

○ : JUNCTION BLOCK AND WIRE HARNESS CONNECTOR

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	22	Engine Room Main Wire and J/B No.1 (Engine Compartment Left)
3A	24	Engine Room Main Wire and J/B No.3 (Left Side of Instrument Panel)
4A	25	Luggage Room Wire and J/B No.4 (Front Compartment Left)

□ : CONNECTOR JOINING WIRE HARNESS AND WIRE HARNESS

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	38	Engine Room Main Wire and Luggage Room Wire (Left Kick Panel)
IA2		
IC1	38	Engine Room Main Wire and Instrument Panel Wire (Left Kick Panel)
IE1	38	Engine Room Main Wire and Instrument Panel Wire (Left Side of Instrument Panel)

○ : SPLICE POINTS

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	36	Engine Room Main Wire			

