


RADIATOR SUPPORT (ASSY)


REPLACEMENT

1. REMOVE RADIATOR SUPPORT

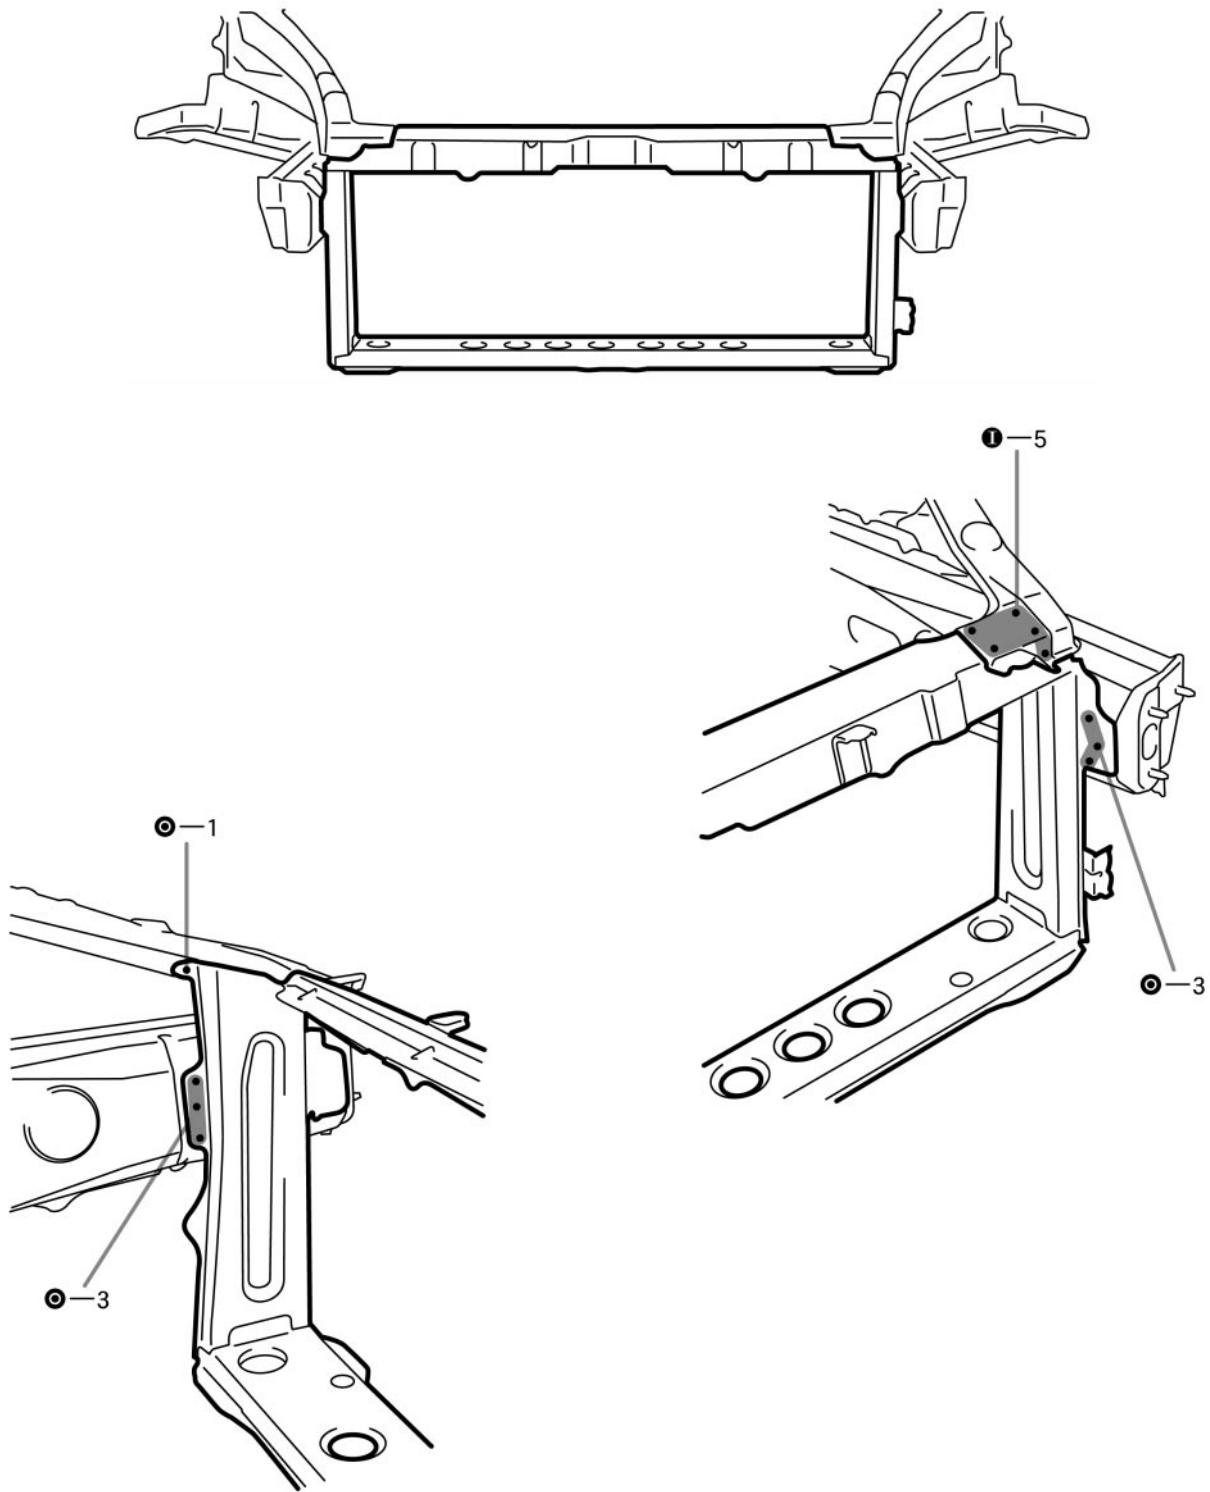

2. INSTALL RADIATOR SUPPORT

- (a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

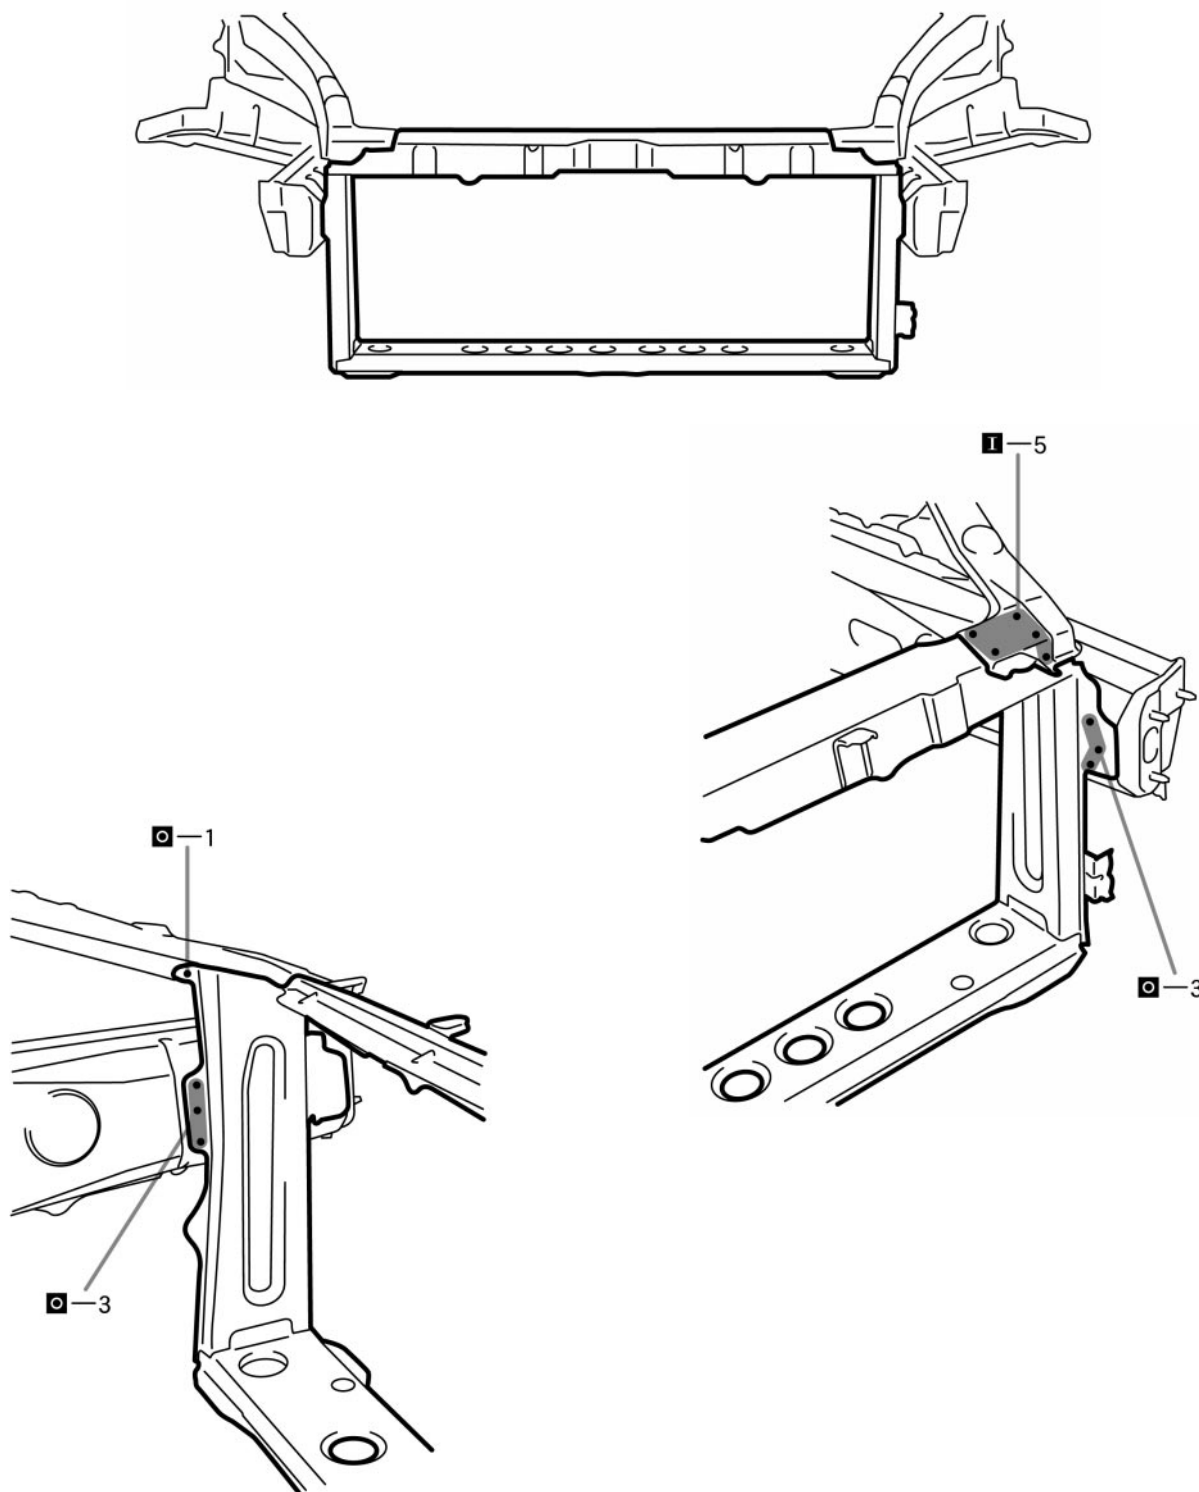

3. MEASURING THE FRONT LUGGAGE COMPARTMENT DIMENSIONS (See page BP-95)
4. MEASURING THE UNDER BODY DIMENSIONS (See page BP-95)
5. APPLYING SEALER TO THE FRONT LUGGAGE COMPARTMENT (See page PC-1)
6. APPLYING ANTI-RUST AGENT
 - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.