


## TERMINALS OF ECU

## Airbag Sensor Assembly

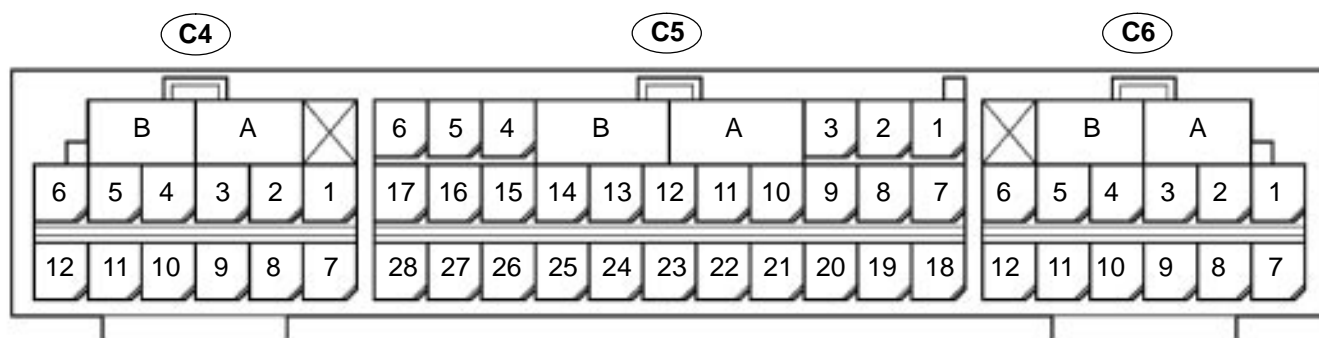

H01357

Terminal No.	Symbol	Terminal Name
A	–	Electrical Connector Check Mechanism
B	–	Electrical Connector Check Mechanism
C5–3	LA	SRS Warning Light
C5–5	IG2	Power Source
C5–6	IG1	Power Source
C5–9	+SR	Front Airbag Sensor (RH)
C5–10	P+	Front Passenger Airbag Assembly (P Squib)
C5–11	P–	Front Passenger Airbag Assembly (P Squib)
C5–12	SIL	DLC3
C5–13	D–	Steering Wheel Pad (D Squib)
C5–14	D+	Steering Wheel Pad (D Squib)
C5–15	+SL	Front Airbag Sensor (LH)
C5–19	Tc	DLC3
C5–20	–SR	Front Airbag Sensor (RH)
C5–23	GSW2	ECM
C5–26	–SL	Front Airbag Sensor (LH)
C5–27	E1	Ground
C5–28	E2	Ground
C4–1	PL–	Seat Belt Pretensioner (P/T Squib) (LH)
C4–2	PL+	Seat Belt Pretensioner (P/T Squib) (LH)
C4–11	LBE+	Seat Belt Buckle Switch (Driver)
C6–5	PR+	Seat Belt Pretensioner (P/T Squib) (RH)
C6–6	PR–	Seat Belt Pretensioner (P/T Squib) (RH)